METEOR-600 MANUAL





- 1. The lamp must be installed in rated voltage and assure safety earth.
- 2. Installing and fixing the lamp should be processed by professional under the condition power off.
- 3. When change the lamp bulb please noted that the max wattage shouldn't exceed the labeled wattage.
- 4. If the external electrical wire damage please change by the professional in time in case of any danger.

Rated voltage: In accordance with the product labeled Rated power: In accordance with the product labeled



CAUTION

In case of any doubt, please contact the qualified electrician.

