

ST-EYF01 MANUAL

Lampitude



1. Please read installation instructions carefully before installation.
2. Please ask qualified electrician to install to avoid electric shock.
3. Please turn off power when maintaining and cleaning to avoid electric shock.
4. Keep this user manual for future use.

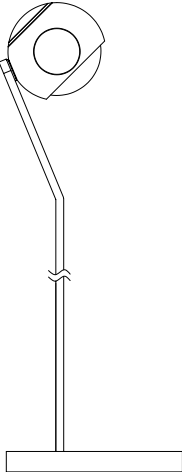
Rated voltage: In accordance with the product labeled
Rated power: In accordance with the product labeled



MAINTENANCE AND CLEANING


1. Please turn off the power before cleaning the luminaire to avoid any risk of high voltage electric shock.
2. Please contact the supplier and do not disassemble it by yourself when there is any defect of damage of luminaire.

1



Floor light.


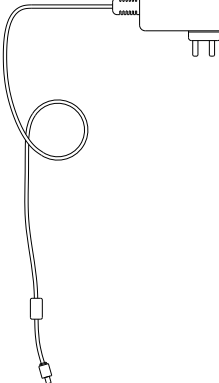
2





Power supply.

3

  
		Ip20	


Installation manual.

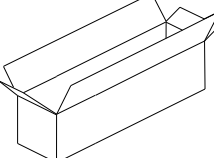 4



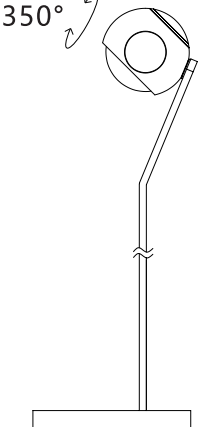
You can adjust the angle of the luminaire eyeball according to your own needs.

5

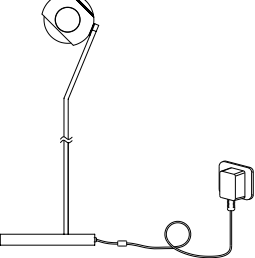

Plug power supply DC cable into DC hole of luminaire base; plug power supply into electric socket, and test power.

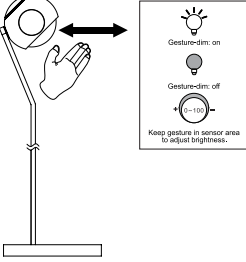6



Gesture Sensor Control Instructions

- 1.Keep hand 10-50mm away from gesture sensor, move the hand forward to switch off the light.
- 2.Keep hand 10-50mm away from gesture sensor, move the hand backward to switch off the light.
- 3.Put hand 10-50mm away from gesture sensor, keep still and light brightness will be reduced gradually.
- 4.Again put hand 10-50mm away from gesture sensor, keep still and light brightness will be increased gradually.

7

1. Touch the small light circle part of rear side of eyeball, touch once to switch on the light, touch again to switch off the light.
2. Long touch to adjust light brightness.
3. Long touch to gradually increase brightness; stop and again long touch again to gradually reduce brightness.

