ST-SXQ-R500 MANUAL






- 1. This arc-shaped track ST-SXQ-R500 is only used for modeling.
- 2. There is no conductive circuit, must not connect with a power supply.
- 3. Can not install light module.
- 4. Must not connected with a circuit of the straight magnetic track ST-SXQ.

Rated voltage: In accordance with the product labeled Rated power: In accordance with the product labeled



MAINTENANCE AND CLEANING

- 1. Please turn off the power before cleaning the luminaire to avoid any risk of high voltage electric shock.
- 2. Please contact the supplier and do not disassemble it by yourself when there is any defect of damage of luminaire.

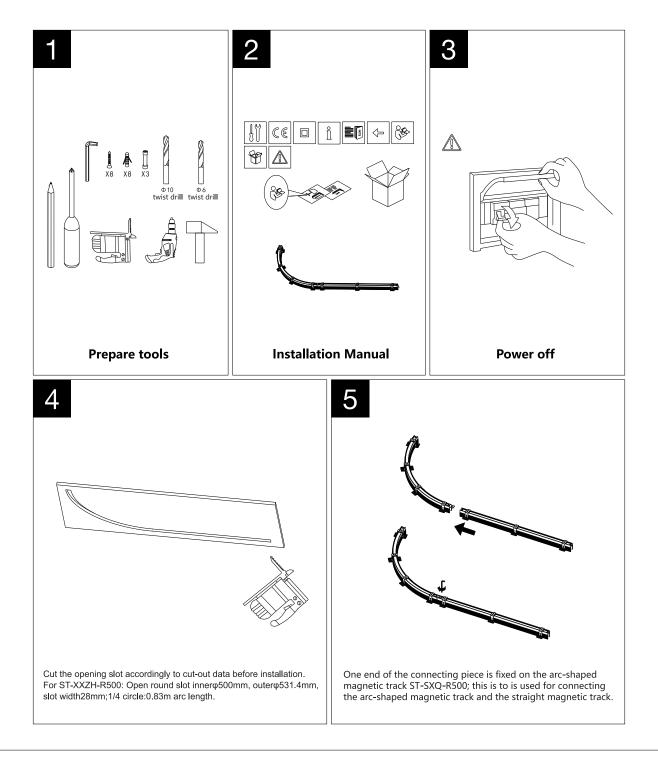

ST-SXQ-R500 MANUAL





- 1. This arc-shaped track ST-SXQ-R500 is only used for modeling.
- 2. There is no conductive circuit, must not connect with a power supply.
- 3. Can not install light module.
- 4. Must not connected with a circuit of the straight magnetic track ST-SXQ.

Rated voltage: In accordance with the product labeled Rated power: In accordance with the product labeled



MAINTENANCE AND CLEANING

- 1. Please turn off the power before cleaning the luminaire to avoid any risk of high voltage electric shock.
- 2. Please contact the supplier and do not disassemble it by yourself when there is any defect of damage of luminaire.

