

UNI-R MANUAL

Lamptitude



1. Please read these instructions before commencement of installation and pass on to the user of the equipment.
2. Disconnect mains voltage before starting to install.
3. This luminaire isn't suitable for looping-in connection to the mains supply.
4. If in doubt consult a qualified electrician.
5. This luminaire may get very warm while in use, let it cool down before touching.

Rated voltage: In accordance with the product labeled
Rated power: In accordance with the product labeled



NOTE CLASS II : This lighting fixture of Class II, presents a re-enforced isolation and must not be earth connected.
The light source for this luminaire is not replaceable; when the light source reaches the end of its useful life, the entire luminaire must be substituted.

