

Baseline

Mini System XS2
SY-8060BT



USER'S MANUAL



TABLE OF CONTENTS

BEFORE USE

Safety Information.....	1
Disk Protection.....	4
Operating Instructions.....	5
Set the Size of TV Screen.....	6
Accessories.....	6
System Connection.....	7
Basic Functions.....	8
Advanced Functions.....	9
Special Functions.....	11
Setting and Operating.....	12
System Setup.....	12
Speaker.....	13
Dolby Digital Surround.....	14
Video Setting.....	14
Default Setting.....	16
Copying of CD, MP3 and MP4 Contents.....	18
MIC Setup.....	19
Radio.....	20
Multimedia.....	20
Operating Instructions of Bluetooth.....	22
Troubleshooting.....	23
Specifications.....	24

BEFORE USE

Safety Information



Danger! High Voltage! Electric Shock If Opened!



Operate with Caution! Please refer to the related operating instructions.



Label for Class II Products (Dual Insulation)

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

1. When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.
2. Always check that the power supply corresponds to the voltage on the rating plate.
3. Always unplug from mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Do not let the supply cord hang over the edge of any table or bench top.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance, do not allow children to use the blender without supervision.
5. Do not leave the appliance unattended whilst in use.
6. Do not use this appliance near water or in damp areas. Do not immerse appliance in water. Do not immerse any part of this appliance or supply cord in water. Do not use with wet hands.
7. Clean only with a dry cloth.
8. Do not use outdoors. Do not use directly below a socket outlet. Do not use this appliance for anything other than its intended use. Do not place the unit on, or near a stovetop burner or in a heated oven. Do not let the cord hang over the edge of any table or bench top. Do not leave in direct sunlight as this may damage the plastic. This appliance is not intended to be operated by means of an external timer or separate remote control system.

9. Do not block any ventilation openings, install in accordance with the instructions.
10. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
11. Do not defeat the safety purpose of the polarized plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
13. Only use attachments/accessories as specified by the manufacturer.
14. Unplug this appliance during lighting storms or when unused for long periods of time.
15. This appliance is double insulated for your safety; there are no user serviceable parts. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains, etc.
18. No naked flame sources, such as lighted candles, should be placed on the apparatus..
19. Attention should be drawn to the environmental aspects of battery disposal.
20. The use of apparatus in moderate climate.
21. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO AVOID THE DANGER OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. NEVER OPEN THE CABINET, AS DANGEROUS HIGH VOLTAGES ARE CONTAINED INSIDE. ONLY A QUALIFIED SERVICE TECHNICIAN SHOULD ATTEMPT OPEN THE CABINET.

CAUTION: This Digital Versatile Disc Player employs a laser system. To prevent direct exposure to the laser beam, do not open the enclosure. Visible laser radiation is present when enclosure is open. **DO NOT STARE INTO BEAM.** Additionally, the use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service location, or contact the service center.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- ◆ Reorient or relocate the receiving antenna
- ◆ Increase the separation between the equipment and receiver
- ◆ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- ◆ Consult the dealer or an experienced radio/TV technician for help

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment(WEEE)requires that old household electrical appliances must Not be disposed of in the normal unsorted municipal waste stream.Old Appliances must be collected sepatately in order to optimise the recovery And recycling of the materials they contain and reduce the impact on Human health and the environment.



The crossed out “Wheeled Bin” symbol on the product reminds you of your Obligation that when you dispose of the appliance,it must be separately Collected.Contact your local authority for information concerning the Correct disposal of your appliance.

Safety Information and Maintenance

IMPORTANT SAFETY INSTRUCTIONS


READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Carefully read this manual before using this appliance.


Ensure that you know how the appliance functions and how to operate it.

- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
- The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

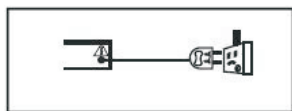


Power supply: Follow the descriptions on the label and use the power cord properly.

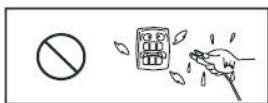


Keep all parts away from moisture.




Avoid direct sunshine and high temperature.

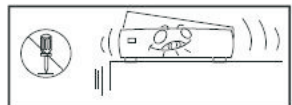

Do not open the cover. Otherwise, needles, hairpins or coins may fall into the equipment.

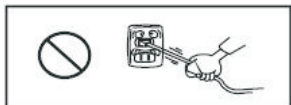

Protect the power cables. Do not allow it to be pressed by heavy objects, nor step on it. Do not stretch or bend it excessively.

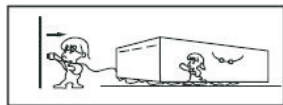

If the System is not used for a long time, unplug the power cord from the outlet.

Disk Protection

To clean a dirty disk, you should use a clean rag and clean it in a linear way and from inside to outside.

Keep the player, battery and disk away from environments with moisture, rain, dust or high temperature (which comes from heating equipment or direct rays). Keep the disk tray moved in so as to avoid dust.

Do not apply any soluble substances, such as benzene, thinner, cleaning agent and anti-static spray, to the color disk.

When the Player is suddenly moved from a cold environment to a warm environment, water can be condensed on the lens of the player, which may lead the failure of the disk. In this case, put the Player in the warm environment till the condensed water on the lens is totally evaporated.



Disk Protection

When the System works for a long time, the panels at the top and bottom of the device can become warm.

When the device is not used, take out the disk and unplug the power cord.

If it is not used for a long time, the System may malfunction or its performance becomes deteriorated. For that reason, the device should be operated occasionally.

Do not place foreign objects onto the disk tray.

Operating Environment

Do not put the device in an environment with:

Heat source or enclosed space (like in a car);

High temperature ($\geq 40^{\circ}\text{C}$) or high humidity ($\geq 90\%$);

Dirt;

Direct sunshine.

Interference

Keep the device away from TV, radio and video recorder so as to avoid distorted image or sound.

Condensed Water

Condensed water may appear on the device in the cases below:

When it is moved from cold environment to a warm one, and vice versa;

When it is used in a space with a running air conditioner system and the cold air contacts the device;

When it is in the house with much steam or high humidity.

A device with condensed water may not work properly. In this case, you can plug

the power cord and keep the machine running idle for about 2-3 hours. And the water will be evaporated after the temperature rises. If the power cord remains unplugged, water won't be condensed on the device.

Disk Protection

Do not touch the Replay button.

Do not stick tape or paper onto the disk. To clean a disk, use a wet rag first, then a dry rag.

To avoid damage to the device, do not apply any soluble substances, such as benzene and anti-static spray with ethylene-based substance, to the disk.

Disk Protection


Do not seal up the disk in a place close heat source, nor in a bathroom or close to a humidifier.

Seal up the disk in a box, the top of which shall have no heavy objects.

Structure of Disk Contents

Normally, the digitalized video disk comprises of different titles that are made up of chapters.





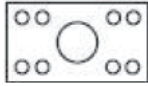
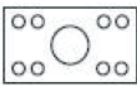


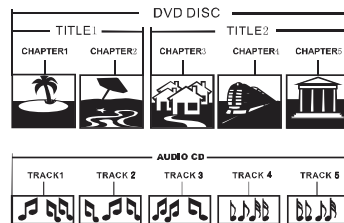Audio disk is made up of tracks.



Each title, chapter and track has a number, respectively called title number, chapter number and track number. But some disks may not have such numbers.

Set the Size of TV Screen

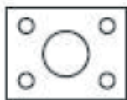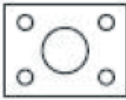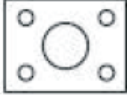TV screens always have a special proportion that corresponds to its size.

TV Screen Displayed Part	4:3			16:9
	Common	Full Screen	Mailbox Type	Wide Screen
4:3				
16:9				

Accessories

- unit 1 piece
- 2.0 Speaker 1 set
- Remote control 1 piece
- FM antenna 1 piece
- Audio/video cable 1 sets
- User's Manual 1 piece

Basic Functions

Preparation

If you want to watch the disk contents, turn on the TV, select the video mode and connect TV to the DVD Player.

Playing

1. Press the Power button to start the device. At the time, directions will appear on the screen, and LED illuminated. If the disk is not inserted, words "no disk" will appear on the screen. If inserted with the tray, the device will play the disk automatically.
2. Press ON/OFF to withdraw the disk tray. The device can accept two types of disks. Follow the indications on the disk to insert it. Failure to follow such indication may cause damage to the disk and malfunction of the player. Do not put incompatible disks into the device.
3. Press ON/OFF to move in the disk tray, and the device will start playing automatically. Some disks might not be played automatically, and the user should manually make selections in the main interface to start the playing. You can press Enter/Play on the remote control or select the corresponding number for that purpose.

Stop Playing

1. Press Stop to enter the stop mode. At the time, the "start-up" icons will appear on the TV screen. The Player can memorize the stopped place.
2. Press Enter/Play, and the device will play the disk from the stopped placed or from the beginning.
3. Press Stop twice to stop playing completely.

Previous/Next Track

In playing mode, you can press Previous to go back to the beginning of the chapter. Each time you press Previous, the system will jump back one chapter till it reaches the starting chapter.

In playing mode, you can press Next to play the next chapter.

Fast Forward/Reverse

1. Press Fast Forward (FF) to fast play the contents of the disk. The playing speed changes each time you press this button.
2. Press Enter/Play to restore the normal playing state.
3. Press Fast Reverse (FR) to fast reverse the contents of the disk. The playing speed changes each time you press this button.
4. Press Enter/Play to restore the normal playing state.

Pause/Stop

1. In playing mode, press Pause/Stop to make the playing pause. In pause mode, the system is in mute state.
2. Press Pause/Stop again, and the system will show the next interface of the contents.
3. Press Enter/Play to restore the normal playing state.

Note:

1. If the mark \emptyset appears on the screen, it means this operation is forbidden in this device or disk.
2. The device is controlled by CPU with settings, and the Screensaver mode might be activated. You can press any key to start the device.

Advanced Functions

NOTE: The functions said below are only applicable to DVD files. And different DVD player may provide different functions.

Display

Press Display, and such options for disk info as “played title”, “current title”, “played chapter”, “current chapter” and “close” to appear on the screen.

Video Mode

Press the Mode key to set the video output as CVBS, YUV or P-Scan.

Note: Press this key once, and the black screen will appear.

So, press it till the normal screen state comes back. If the image is incorrect or no image appears on the screen, you can press Mode to solve the problem.

Subtitle

Press Subtitle, and all options for subtitle will appear on the screen.

The language of the subtitle shown for the first time is the default value of the device. For example, if “01/02 English” is used as the subtitle, you can press the Subtitle again to allow the screen to other languages, like 02/02 XX.

“01” refers to the current language.

“02” refers to the total number of languages used in the system (subject to DVD Player’s model).

Title

Press this key, and the main interface of the system will appear on the screen. The user can make options according to his preference. (This key is effective only when submenus exist)

Menu

Press this key, and the main interface of the system will appear on the screen. The user can make options according

to his preference. (This key is effective only when submenus exist)

Angle

Press this key to view the DVD contents from different angle.

GOTO

Use this key to choose chapters and time while watching DVD contents.

If you want to choose a chapter whose number has to digits, you can press “10+” to set the number. Press Time to select the chapter in accordance with the following contents displayed on the screen: Title 02/Chapter (enter the required digits)/32

Press Time twice to select the time when the DVD contents are played. The information below will appear on the screen:

Title 02/10 time : :

Press Time thrice to select the time point in the chapter. The information below will appear on the screen:

Chapter 01/32 Time : :

Volume and Mute

Press the key [+] to turn up the volume and [-] to turn it down.

Press Mute to set the system in the mute mode (no sound). Press Mute again to restore the normal playing state.

Repeat

Perform the operations below to repeat the chapter, DVD title and the whole DVD contents.

- Press Repeat once to repeat the

contents of the chapter.

- Press it twice to repeat the contents of the title.
- Press it thrice to repeat the whole contents of the DVD disk.
- Press it for the fourth time to cancel the repeat mode.

Note: For disks with such formats as CD, JPEG, Kodak Picture, WMA, MP3, HDCD and CD+G, you should use the main interface of the system to repeat the playing.

Zoom

Press this key to zoom in the image. In this mode, the user can also use the navigation keys to move the image.

A-B

The user can also mark one section of the DVD contents and allow the system to play it repeatedly. To that effect, choose the starting point you want to repeat and press the key A-B to set Point A when the DVD contents are being played, and press it again to set Point B as ending point. Then the part between A and B will be played repeatedly. Press the key A-B for the third place to cancel the state.

Slow

Press the key Slow to slow down the playing. Each time you press this key, the playing speed changes as follows:

▶ 1/2→▶ 1/4→▶ 1/8→▶ 1/16.

Source

Choose signal source among DVD/FM/LINE IN/BT.

Language

Some DVD disk's supports multiple languages. Press the key Language, and the first audio selection will appear on the screen. Then you can make options. Press the key again to move to another option.

For example,
Audio 1/2: AC 3 2 CH English
Audio 2/2: AC 3 5.1 CH English

Return

In playing mode, you can press Return to enter the main menu. Press it again to return to the interface where all contents of the DVD disk are displayed. In playing S-VCD and VCD 2.0 disks, you can press the key Return to return to the Menu interface, and at the time, the main interface will appear.

PBC

With the key PBC (play back control), the system can provide advanced selection when VCD disk is being played. Press this key to enter the related interface (for some disks, the PBC interface can be reached automatically). Then press the numeric keys to make the options. Press the key again to exit the options.

Programme

With this function, the user can programme the chapters and play them in accordance with his own will. Press Programme, and the chapters list will appear on the screen, where the user can choose the desired chapter and programme it. After that, the user can move the curser to select the starting mark. At the time, the system will start "channel playing", where the "channel mark" will appear on the screen.

Special Functions

Audio CD Playback


When a disk with CD format is inserted into the device, the System can play its contents automatically.

- Press Previous/Next to change the track, and FF/FR to fast forward or fast reverse the contents.

- Note: A CD+G disk is equal to an Audio CD.

MP3 Playback

When a disk with MP3 format is about to be played, the system will automatically display the navigation interface while the contents are being uploaded.

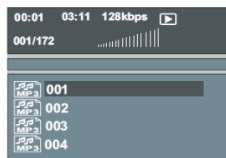

- In the navigation interface, use the key Up/Down to make options. After selection, press Enter/Play to play the file.

- In all the tracks, use the key Up/Down to make options. After selection, press Enter/Play to play the track.

- In the current interface, press the key Left to return to the previous menu, and press Previous/Next to enter the previous and next page.

Kodak Picture CD Disc Playback

When a disk with Kodak Picture format is about to be played, the system will automatically display the navigation interface while the contents are being uploaded.

- In the navigation interface, use the key Up/Down to make options. After selection, press Enter/Play to play the file.

- In all the tracks, use the key Up/Down to make options. After selection, press Enter/Play to play the track.

- Each picture of the Kodak Picture CD will be displayed as slide, whose size is automatically adjusted in accordance with the proportion of the TV.

- Press the key Main Interface to return to the main interface.

- Press Pause to allow the playing pause and the current picture will remain still.

- Press Previous/Next to view the previous and next picture.

- Press Enter/Play to return the slide mode. Note: The quality of the picture displayed is subject to the model of the device used for viewing.

JPEG Disk Playback

When a disk with JPEG format is about to be played, the system will automatically display the navigation interface while the contents are being uploaded.

- In the navigation interface, use the key Up/Down to make options. After selection, press Enter/Play to play the file in a slide manner.

- Press Previous/Next to select the previous and next picture.

- Press Pause to allow the picture-playing pause so that you can view for a longer time. Press Enter/Play to return to the normal playing state.

System Setup


Select the key Set on the remote control, and the setup interface will appear on the screen.

1. The user can use the keys "Up/Down/Left/Right" to make selections. However, it would be difficult to use the cursor of the remote control to perform the operation. You can press Enter/Play to make the option, and press Left to return to the previous interface.
2. Press Set to exit the setup interface.

Interface for Normal Settings

With this interface, you can set the displaying format of the TV screen, the video mode and all functions relating to DVD contents.

A. TV Display

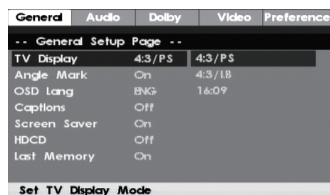

With this item, you can select the display format of the TV screen according to your preference. The proportion of the displayed part on the screen is subject to the nature of the disk and of the TV (refer to Page 20: Multiple Image Sizes). In any selected displaying format, a picture recorded with 4:3 proportion will always be displayed with the same width-height proportion.

In the case of DVD disk, the displaying format might change. You can refer to the related information for details. If the

contents of DVD disk are recorded with 16:9 format and the TV displays the image with proportion of 4:3, the image will be compacted when displayed.

Some DVD titles are recorded with special format. In this case, whatever display format the user selects, the DVD titles with the original format will be displayed on the screen.

B. Angle Mark

In playing the DVD contents, the user can choose one camera angle from the options to display the contents.




C. OSD Language

The user can set the OSD language thorough this item.



D. Captions


For those suffering from hearing, the supplementary narrations recorded can be displayed on the screen.

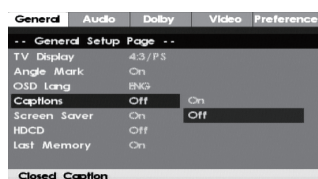

Note: This function is only effective for those disks with hidden subtitles.

E. Screen saver

After the system enters the stop state for several minutes, the screensaver mode will be enabled and a moving image will appear on the screen.

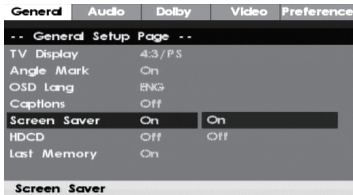


F. HDCD

HDCD is the short form of "high density compact disk".




G. Last Memory

If the power fails abruptly, the DVD Player can memorize the place where the playing was stopped. When the power is restored, the system can play the disk from the stopped place.

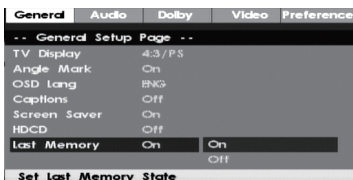

Setting the Speaker

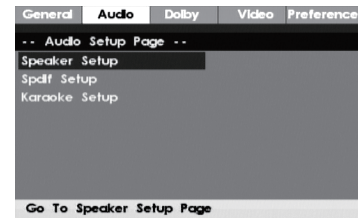

You can use this item to set Left/Right Channel or Stereo




DOWNMIX Mode

- 1 indicates the left channel.
- 2 indicates the right channel.

B. SPDIF output mode

Use this item to set the SPDIF output mode. In original SPDIF mode, the user can only adjust the volume of MP3 contents, not for contents with DVD or CD format.

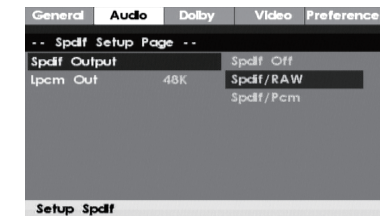

This DVD Player provides three audio output options.

Disable SPDIF: In this analog surround mode, the cables at the rear of the panel are connected to the two audio output ports to output the audio source.

Original or modified SPDIF: With this surround format, the audio source is output through the Dolby digital decoder formed on the basis of the optical mouse at the rear panel and the co-axial connector.

Interface for setting Dolby digital surround

A. Dual Mono

If the user's microphone/decoder can output Dolby digital surround source, he can select stereo, left channel, right channel or mix channel.



B. Dynamic


Set this item to play the audio contents in high volume at night while not disturbing others. This item can lower the volume, but keep the original sound quality. The figure below shows the range to be set from the lowest to the highest volume, with the unit dB.



Video Setup


A. Component

Use this item to set the video output.

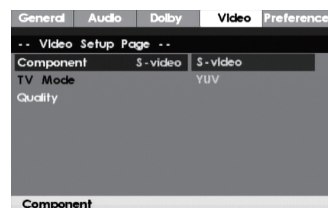


B. TV Mode

Set the TV mode in this device the same as the user's TV. If the image is interfered or no image appears, press V-Mode to adjust.

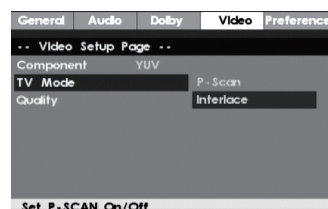

C. Quality

Use this item to set the image quality of the output video.

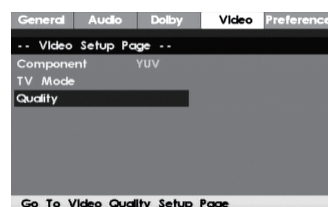


Sharpness



Brightness




Use this item to set the brightness of the output video.

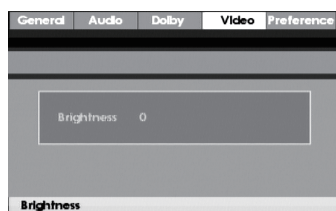


Press the key Right, and the interface below will appear:
Then press Left/Right to adjust the brightness, and press Enter/Play to confirm the selection. At the same time, the screen returns to the previous interface.

Contrast

You can set the contrast through the interface of Video setting. Press the key Right to reach the interface.

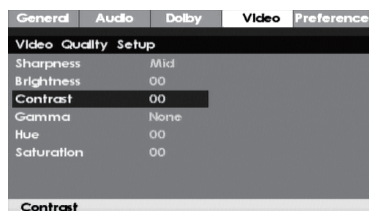

Then press Left/Right to adjust the contrast through the numbers, and press Enter/Play to confirm the selection. At the same time, the screen returns to the previous interface.

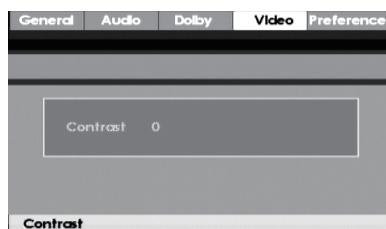


Default Setting

The item Default Setting appears only when the machine was not used. To activate the adjustment, you have to restart the machine.

A. TV Type

This DVD Player supports a variety of TV standards, such as MULTI (AUTO), NTSC and PAL.

If your TV only supports NTSC or PAL standard, the TV screen will blink with black and white spots when a wrong standard is selected. In this case, you should press Set and go to the interface of default setting, where you could find the proper standard to play the contents.

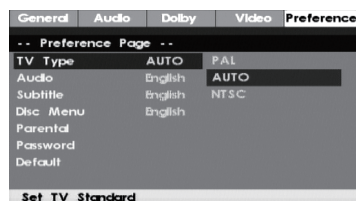

Note: To set the TV standards:

1. You can choose from the two options, NTSC and PAL, from the DVD Player;
2. Refer to the table below, which shows the TV standard matched by the respective disk:

Disk		Output Format		
Type	Format	TV Standard		
		NTSC	PAL	
DVD	NTSC	NTSC	PAL	NTSC
	PAL	-----	PAL	PAL

B. Audio

You can choose the item Audio in the preference interface to set the audio output of the DVD contents.



C. Subtitle

Set the preferred language as the default value of the DVD Player's subtitle. (Subject to compatibility of DVD Player)




D. Disk Menu

Set the preferred language as the default value of the main interface of the DVD Player. (Subject to compatibility of DVD Player)





E. Parental Control

With the item Channel Supervision, you can set the examination class for DVD disk, so that family members can view the contents in accordance with their respective age group. 8 examination classes are available. Press Left/Right to make the selection, and press Enter/Play to confirm it. At the time, the system will return to the previous interface.

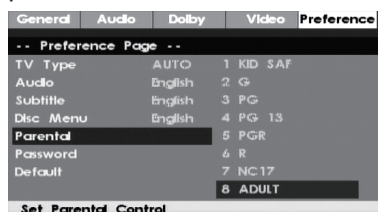

F. Change the Password


You can change the password so that your family members can watch the disk. To do that, enter the preference interface and select Then password. Press Password and enter a four-digit password.

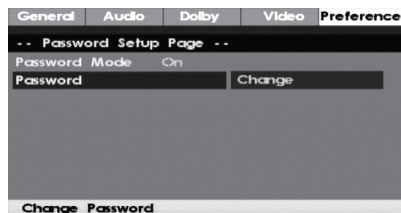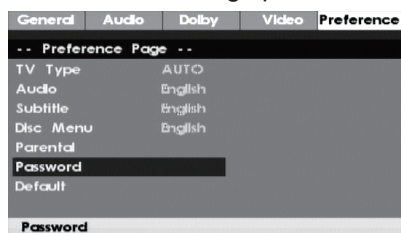

Note: To avoid oblivion, you may write down the set password. You have to enter the old password before you enter the new one (default password: 1234).

G. Default

Use the item Default, you can restore the default settings (except the password). To do that, choose the item Default in the preference interface, and press Enter/Play to restore the factory defaults.

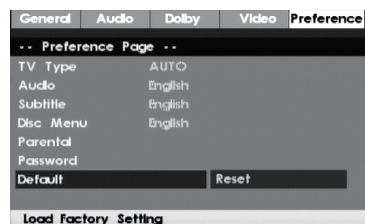

Copy Contents of CD, MP3 and AVI to USB Device

Please make sure the movable USB device has enough memory space that can accept all contents from DVD Player.

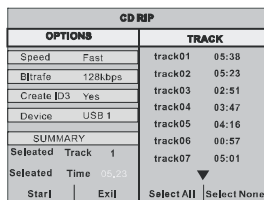


FIGURE 1

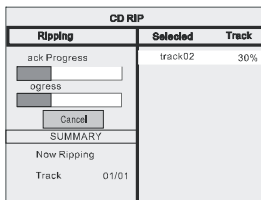


FIGURE 2

CD Taking-In

1. Basic setting: This DVD Player can read the contents in CD, USB device and have enough memory.
2. After the contents of CD are read, press Copy to prop up the new options (see the picture below). Then press Up/Down/Left/Right to make selections.
3. After the contents of CD are taken in, press Exit to the take-in interface.

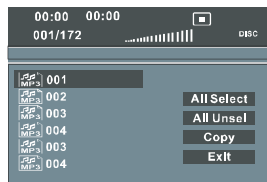


FIGURE 3

Copy Contents of MP3 and AVI

1. Basic setting: This DVD Player can read contents of MMP3 and USB device, and have enough memory.
2. After the contents of MP3 are read, press Stop. Then press Up/Down to choose the file. After you press Copy, the related dialogue box will pop up. At the time, press Enter.
3. After the file is copied, confirmation dialogue box will pop up. Press Enter to complete the copying process.
4. To copy contents of AVI format, use the same procedure as MP3.



FIGURE 4




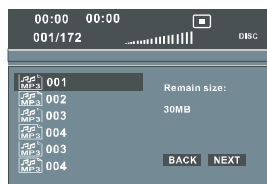


FIGURE 5

Note: It is normal to see “disk being reading” dialogue box.

MIC SETUP

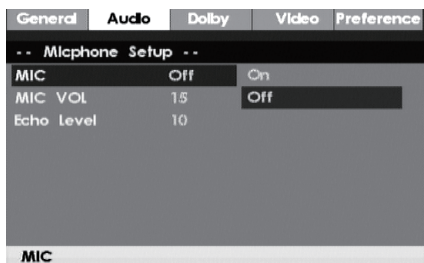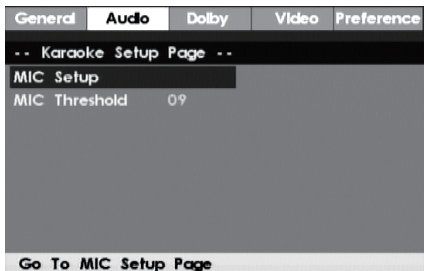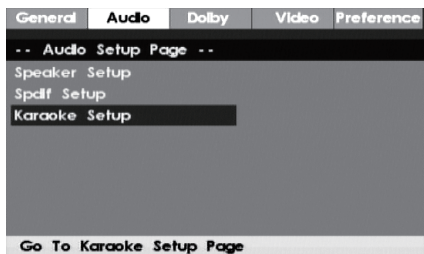

Use the right arrow button to select status ofkaraoke, may set to AUTO or OFF.



Use the UP/DOWNbutton to increase or decrease the karaoke 1 volume



Use the UP/DOWN button to increase or decrease the echo level.



Playing Radio functions

1. The frequency the embedded radio receives in the system ranges from 87.50MHz~ 108 MHz.
2. In play mode of the DVD Player, press the key Signal Source to switch to FM mode. Then press the key Search on the remote control, and the system will search the channels and save 1-20 of them.
3. You can press Previous/Next to select the channel you like, and use Fast Forward or Fast Reverse to tune manually.

Multimedia

1. The System supports USB device and is compatible with files with such formats as JPEG, MP3, AVI and WMA.
2. It also supports SD card and is compatible with files with such formats as JPEG, MP3, AVI and WMA.
3. Play contents in USB device: Contents in USB device can be played only when there is no disk or card inside the player. If so, the player will play the contents automatically after properly connected.
4. Play contents SD card: Contents in SD card can be played only when there is no disk or USB device inside the player. If so, the player will play the contents automatically after properly connected.

Note:

A: If malfunction exists in memory device, the player won't play its content

Connection Between DVD Player and Speaker

1. Use the related cable to connect channel "R" at the place marked as "+" on the DVD Player to the place with the same mark "+" on the speaker; Use the related cable to connect channel "R" at the place marked as "-" on the DVD Player to the place with the same mark "-" on the speaker.
2. In the same connection way as "1", make connections between the DVD Player and the speaker for channel "L".
3. Before above connections, unplug the power cords for the player and speaker.

Outside Video & Audio Using

1. Connect to the video and audio alternative source.
Connect the outside Audio line "L" with the DVD Player "AUDIO IN--"L" jack.
Connect the outside Audio line "R" with the DVD Player "AUDIO IN--"R" jack.
2. After step 1, plug in and press the Remote Control function key called "SOURCE".

Function

Press the key Function, and the information below will appear on the screen:

treble: -7dB ~ +7dB

bass: -7dB ~ +7dB

Volume = 40dB

Note: Press the key Function, and the Player will enter the state for high-pitch adjustment. You can use the key Volume on the panel or remote control to adjust the volume for high pitch. Follow the same way to adjust the volume for the speaker, DVD Player and low pitch.

Operating Instructions of Bluetooth

Press the SOURCE button to switch the audio source to the “BT” (Bluetooth input) mode: After the Bluetooth module is powered on, the blue indicator lamp quickly flashes for three times and the prompt audio will be heard; the red indicator lamp flashes and the machine enters the Bluetooth active connection mode to search the Bluetooth devices connected last time, and the device searched will be automatically connected again, and if no such device is searched, the machine will automatically enter the pairing status; at this time, the red and blue indicator lamps flash alternately; when the pairing is successful, the blue indicator lamp will flash slowly and the audio prompt will be heard, and when the machine returns to play songs, the red and blue indicator lamps will flash at the same time; when the play is paused or stopped, the blue indicator lamp will flash slowly. When making or answering phone calls during music play with Bluetooth connected, the Bluetooth hand-free calls can be realized via the machine, and if you do not want persons in the vicinity to hear your call content, you can disable the Bluetooth call function in the mobile phone interface.

Remarks:

- 1: The distance for receiving Bluetooth ranges up to 10m.
- 2: If the Bluetooth version of the cell phone is too old, the cell phone will indicate the user to enter the password “0000” when it is connected for the first time
- 3: Sometimes when the cell phone Bluetooth is connected with several Bluetooth devices, some unpredictable faults may occur due to too much data stored in the cell phone. At this time, clear the Bluetooth devices stored in the cell phone or restart the cell power for another connection
- 4: Since the Bluetooth versions for laptops are considerable, the connection methods vary a lot. If the laptop cannot be connected during the first use, the latest Bluetooth driver shall be installed for the laptop.

Troubleshooting

Before you contact the service center or distributor, you may refer to the table below to see if you can find out how the problem comes and if you can solve it.

Failure	Solution
No Power	●Check whether the power is properly connected to the device.
No image	●Check whether the player is properly connected to the TV; ●Check whether the TV works well; ●Press the key Video Mode till correct image appears; ●Check whether the player is properly connected to other equipment.
No sound	●Check whether the player is properly connected to the speaker.
Can't play	●Check whether the disk is properly inserted; ●Clean the disk.
Remote control doesn't work	●Remove the barrier between the remote control and the device; ●Align the remote control to the induction port in front of the machine panel. ●Check whether the battery remote control is dead. If so, replace the battery.
Interference to the image	●Check whether the disk is dirty or scratched; ●Clean the disk or replace it; ●Power off the machine and restart it ten seconds later.
Malfunction of key	●Rapid increase of power, interruption of power or other electric problems; ●Power off the machine and restart it ten seconds later.

Specifications

System

Power supply-----	AC 110-240V/50/60Hz
Channel separation-----	>40dB
Distortion rate-----	0.7%

DVD

Frequency response range-----	20Hz-20KHz (+/-3dB)
Audio S/N-----	>80dB
Audio output (analog)-----	Level output: 1.0-2.0v
Audio output (digital)-----	Level output: 0.5vp-p
Video output-----	Level output: 1.0vp-p
YUV output-----	Level output: 0.7vp-p

Tuner

FM Frequency range-----	87.5-108MHz
-------------------------	-------------

AMP LIFIER

Output Power-----	50W+50W RMS
Bass-----	-7dB ~ +7dB
Treble-----	-7dB ~ +7dB
Frequency response range-----	20Hz-20KHz (+/-3dB)
S/N-----	>80dB

USB----- USB2.0

CARD----- SD/MS/MMC

Compatible----- DVD/VCD/CD/MPEG4/MP3/WMA

