

## Angel Eyes / Halos / Devil Eyes

## Devil Eye Use

Devil Eye must be OFF when headlights are in use. Running the Devil Eye at the same time as the low beam may result in premature failure to the LED on the Devil Eye. Connecting the white wire on the devil eye to the low beam of your headlights will automatically turn off the devil eye when the headlights are powered on.

## Angel Eyes / Halos

### Connection to Headlights

Each LED driver must be attached to the matching labeled connector to avoid possible damage. Each connector is color coded for ease of use.


- Blue Connector: Front Angel Eye
- Green Connector: Rear Angel Eye
- Orange Connector: Halo

### Connection To Power Source

When connecting to a 12V switched power source, we recommend a switch panel or toggle switch.

As seen in the magnified portion of the diagram, each wire can be connected as follows.

- Amber: 12V Power, Amber Light, Turn Signal
- Red: 12V Power, Bright White Light
- Black: Ground

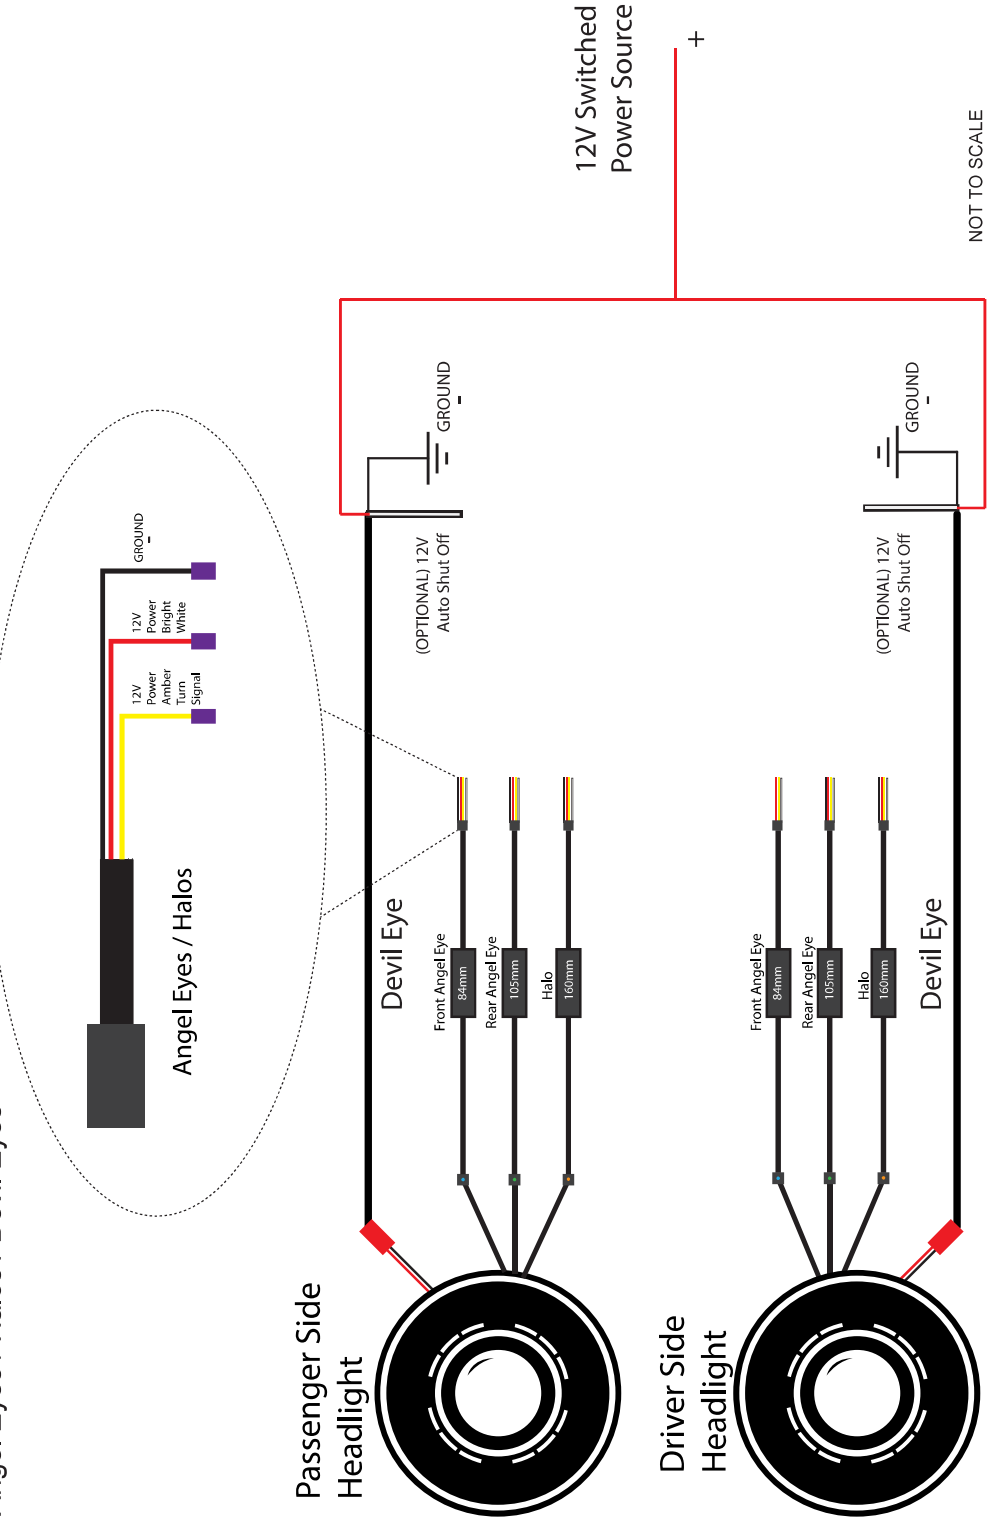

NOT TO SCALE