



GD08-04B

DIGIBOX PRO

Touchscreen Karaoke Entertainment
System & Media Streaming Player



INSTRUCTION MANUAL

IMPORTANT NOTICE

The DIGIBOX is a unique device that combines the technology of a touchscreen tablet with the convenience of an all-in-one PA system speaker and wireless microphones. The integrated touchscreen tablet runs an Android operating system and requires some basic knowledge of using tablets to correctly operate such as connecting to Wi-Fi and downloading apps, so therefore is not recommended for young children or those without experience using touchscreen devices. The device must be connected to Wi-Fi before pre-installed apps will function and a free Google account is required to download new applications from the Google Play store. This instruction manual focuses on the PA system section of the unit.

If any assistance is required we are happy to help, please contact us...
01483 811254 / info@mrentertainer.co.uk

Please also check our Troubleshooting page...
www.mrentertainershop.co.uk/pages/troubleshooting



wa.link/3u39k6



Chat to us via Whatsapp, scan qrcode on your phone, or message 07536 915468

Mr Entertainer Karaoke

☎ 01483 811254

✉ info@mrentertainer.co.uk

Monday-Friday, 10am-5pm

CONTENTS

- ❖ 1. Important Notice & Contents
- ❖ 2. What's In The Box and Main Control & Functions Diagram
- ❖ 3. Main Control & Functions Continued
- ❖ 4. General Instructions
- ❖ 5. General Instructions Continued & Finding Karaoke Videos
- ❖ 6. Safety Information


WHAT'S IN THE BOX?

- ❖ DIGIBOX Karaoke Machine
- ❖ 4 x Handheld Wireless Microphones
- ❖ 8 x AA Batteries (For Wireless Microphones)
- ❖ 4 x Microphone Holder Clips
- ❖ Instruction Manual
- ❖ UK Standard Plug DC 15V Power Supply
- ❖ HDMI Cable (for connection to TV)

MAIN CONTROLS & FUNCTIONS


SIDE PANEL

(Controls PA System/Speaker)

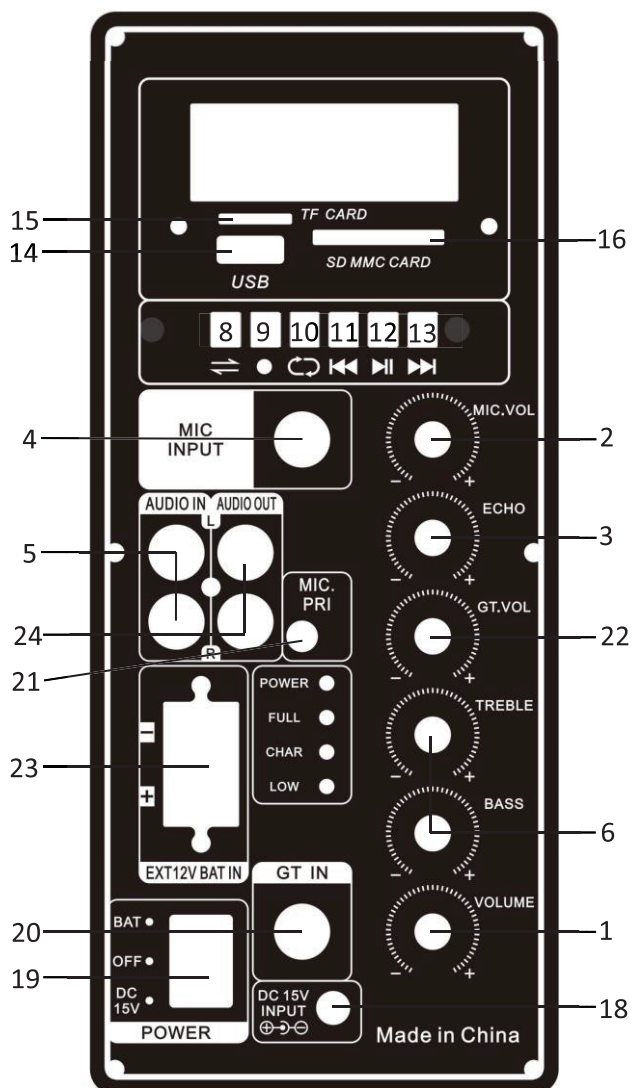

REAR PANEL

(Controls Tablet)

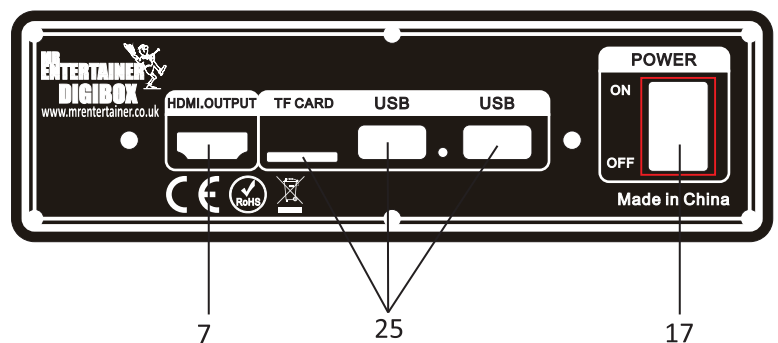

MAIN CONTROLS & FUNCTIONS continued...

1. Music volume control
2. Microphone volume control
3. Echo control for microphones
4. Wired Microphone input
5. AUX/LINE input (*for connecting external devices such as MP3 Players, Laptops*)
6. Bass & Treble controls
7. HDMI Output (*connect to TV and mirror tablet/screen display*)
8. MODE Select: LINE, USB, TF, Bluetooth (*when using main TABLET/SCREEN ensure LINE mode is selected. TABLET and AUX devices cannot be used at same time. Bluetooth mode allows you to wirelessly connect devices such as smart phones and tablets*)
9. RECORD (*press to start/stop recording of sound from Microphone to SD Card, this requires an SD card to be inserted which is not included*)
10. REPEAT (*press to toggle between repeating the current track or repeating all tracks when playing MP3 from SD Card*)
11. Previous track (*works when playing MP3 from SD Card & some Bluetooth devices*)
12. Play/Pause (*works when playing MP3 from SD Card & some Bluetooth devices*)
13. Next track (*works when playing MP3 from SD Card & some Bluetooth devices*)
14. USB stick input for PA (*for playing MP3*)
15. TF card input for PA (*for playing MP3*)
16. SD MMC Card Input for PA (*for playing MP3 & Record feature*)
17. ON/OFF switch for TABLET/SCREEN ONLY
18. Mains adaptor Input for DC 15V
19. Main ON/OFF switch (*set to DC15V if connected to mains, set to BAT if using battery*)
20. GT IN (*connect a guitar with 6.3mm jack pin*)
21. Microphone Priority (*when pressed it reduces the volume of the music when singing, giving priority to the microphone*)
22. Guitar Volume
23. External 12V battery input (*Charge device using external 12V battery, connect the positive pole (+) to the red terminal and the negative (-) to the black terminal*)
24. AUX/LINE Output (*for connecting external speakers*)
25. USB/TF Card Input for Tablet (*for playing media files on screen*)

UPDATING PRE-INSTALLED APPS

If you encounter issues when using pre-installed apps, these can often be solved by installing the latest version from the Google Play store. Please first uninstall the app (long press, and drag up) then find the app on the Google Play store and download to install latest version.

CHARGING THE UNIT

Please use the supplied adaptor for charging. The power adapter has an indicator light that will illuminate when the speaker is on charge. It takes around 6-8 hours to fully charge. Disconnect the power adaptor when the battery is fully charged to extend the life of the battery. The average running time on a fully charged battery is about 2 hours.

USING THE WIRELESS MICROPHONE

Open the battery compartment of the microphone and insert two AA batteries. Press the power button to switch on the microphone. If the power indicator lamp doesn't flash or doesn't light up, check if the batteries have been properly inserted and have charge. Start singing into the microphone and adjust the volume to the desired level via the MIC.VOL (2) control on the side panel. If microphones stop working please try replacing batteries before contacting us. Don't use the microphones close to the speaker in order to avoid feedback.

BLUETOOTH OPERATION

1. Turn on the unit and press the MODE selector button on side panel to select the Bluetooth function. Display screen will show BT for Bluetooth.
 2. Activate the Bluetooth feature on the external device to be paired.
 3. Initiate a search for devices, look for device DIGIBOX
 4. If successfully connected the Bluetooth logo will stay illuminated on LCD screen and you can use your external device to play your favourite songs/videos
- If your device cannot connect or find DIGIBOX, please ensure there are no other devices are already connected to the unit.


Please note Bluetooth is audio only technology, so only the sound will be sent to the DIGIBOX. Video from your external device will not be displayed on screen.

RECORD FUNCTION

Record your speeches/performances using the Record feature, requires an SD Card which is not included. Recordings will save to SD CARD in MP3 folder in sub folder called RECORDINGS. Please note, RECORD mode will record voice only, it cannot record when singing along to videos being played on tablet. Instructions.....

1. Insert an SD Card in to SIDE PANEL (16)
2. Long Press RECORD button on side panel to start recording
3. Press RECORD button again to stop recording

Wi-Fi CONNECT

Switch on main power switch (19) and Tablet power switch (17). Once boot-up is complete tap Settings cog on home screen () , then tap "Wi-Fi" to browse and connect to available Wi-Fi Networks

CONNECTING A TV VIA HDMI CABLE

When connecting to a TV, please ensure the HDMI cable is not connected to the DIGIBOX until the tablet has fully booted up to the main screen. Basically the tablet needs to be up and running before the HDMI cable is connected, so that when the cable is plugged in the tablet recognizes it, and sends the signal to your TV. If you boot the Digibox up with the cable already connected the HDMI output will not work.

DOWNLOADING APPS FROM PLAY STORE

The built in Touchscreen Tablet runs the android operating system which includes the Google Play Store, giving access to millions of useful applications such as Netflix, Spotify, YouTube and many more. A Google account is required to download new applications; this can be created at play.google.com.

HOW TO FIND AND PLAY KARAOKE VIDEOS

Here are our suggestions on best places to find and play karaoke videos. Some of these apps will be pre-installed for your convenience. There are also hundreds of other karaoke applications available on the Google Play Store...

YouTube App

There are millions of karaoke videos and lyric videos available to play for free on YouTube, however the quality can vary massively so be prepared to play a few not so great versions before finding one you like.

Mr Entertainer Karaoke Downloads

Visit our website to search/browse for your favourite songs and download instantly in MP4 format for direct playback on your DIGIBOX. www.mrentertainer.co.uk

PLAYING MEDIA FILES ON ANDROID TABLET (MP3, MP4, MP3+G)

The android system is capable of playing common media files such as MP3 & MP4. To do so insert an SD Card or USB Stick into the front facing slots just below the tablet screen and use the EXPLORER app to find and play your files.

MP3+G Karaoke files can be played using the pre-installed app "VLC". Copy your unzipped MP3+G karaoke files to a high speed USB stick (up to 128GB) and insert into USB slot on rear panel. Open FILE EXPLORER app to locate files and tap on the MP3 part of the MP3+G file to play via VLC. Note, some karaoke files may not show title screens when playing via VLC

WARRANTY

All products and parts come with a standard 12 month warranty from date of purchase.

If you have any problems please contact your retailer for help.

SAFETY INFORMATION

Read these instructions carefully and heed all warnings

Do not clean the apparatus near or with water. Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Do not use near any heat sources such as radiators, stoves, or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the apparatus.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus during electrical storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power- supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

No naked flame sources, such as lit candles, should be placed on the apparatus.


Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS


The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like


RECYCLING ELECTRICAL PRODUCTS


You should now recycle your waste electrical goods and in doing so help the environment.


 This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.



IMPORTANT: Please read all instructions carefully before use and keep for future reference

 Risk of electric shock.
Do not open

 Read all instructions carefully before use and keep for future reference

 When servicing, use only identical replacement parts

 **CAUTION**
RISK OF ELECTRIC SHOCK
DO NOT OPEN

  **ATTENTION**
RISQUE D'ELECTROCUTION
NE PAS OUVRIR



Digitop Ltd T/A Mr Entertainer
Unit 11A Bridge Trade Park
Bridge Road
Camberley
Surrey
GU15 2QR
United Kingdom

www.mrentertainer.co.uk

DIGITOP