


MOONBOX

Instruction Manual

PACKAGE CONTENTS

MOONBOX Speaker
USB Charging Cable
Wireless Microphone(s)
AA Battery for Wireless Microphone(s)
Instruction Manual



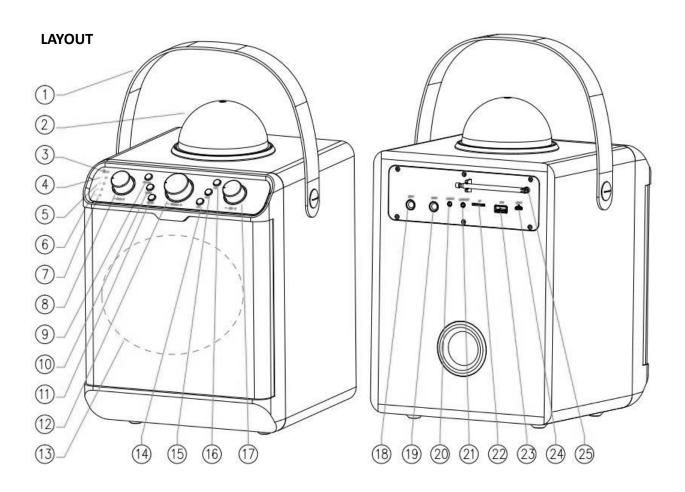



LAYOUT, continued....

1. Carry Handle	Carry handle
2. Rotating Disco Ball LED light	Light show
3. Bluetooth indicator	Blue light shows when device is in Bluetooth mode FLASHING light means Moonbox is ready to pair SOLID light means device is connected
4. TF card indicator	Blue light shows when device is in TF Card mode
5. USB indicator	Blue light shows when device is in USB mode
6. AUX/FM indicator	Blue light shows when device is in AUX/FM mode
7. MICROPHONE indicator	Blue light shows when wireless microphone is switched on & connected
8. Echo Volume control	Adjust the microphone echo up/down
9. Power on/off	Long press for 3 seconds to turn device on/off
10. LIGHT button	When the device is on, long press "LIGHT" button to turn on/off the Rotating Disco Ball LED Light. Short press to cycle between different light modes
11. MODE Button	Short press to cycle through different modes
12. Music volume control	Adjust the music volume up/down
13. LED light in front	Illuminated LED front panel, sound to light activated
14. Forward/Next track button	Short press to skip forward to next track
15. Back/Last track button	Short press to go back to last track
16. Play/Pause button	Short press to play/pause music
17. Mic volume control	Adjust microphone volumes up/down
18. Mic connector 1	Standard ¼ inch jack microphone input
19. Mic connector 2	Standard ¼ inch jack microphone input
20. Line-in / Aux Input	Input for connecting sound device (eg iPod) using 3.5mm mini jack cable
21. Line-out / Aux Output	Output for connect external sound device (eg hifi speakers)
22. TF card slot	TF Card slot for playing MP3s (up to 64GB)
23. USB slot	USB slot for playing MP3's (up to 64GB). THIS IS NOT THE CHARGING SOCKET
24. C-Type USB Charging Slot	Use the included C-TYPE USB cable to charge device from any USB socket, the red charging indicator LED light remains illuminated when the device is being charged, once fully charged indicator light turns off.
25. FM antenna	Extend FM antenna when listening to FM Radio for improved reception.



MODE SELECTION

Bluetooth Mode (BT)

You can wirelessly connect your phone or smart device by pairing and connecting via Bluetooth. Ensure MOONBOX is in BT mode, then open Bluetooth settings on your phone and "MOONBOX" will appear, click on this to connect, if requested the pin code is 0000. The unit will play a short musical sound when connected, any music/karaoke you now play on your phone will be heard through MOONBOX.

IMPORTANT. If you are having trouble connecting to your device, please ensure all other devices are disconnected and try again, only one Bluetooth device can be connected at any one time.

TF Card Mode or USB Mode (TF or USB)

You can play your MP3 music files from TF Card or USB Stick. Turn on device, insert USB Stick or TF card in the slot and use MODE button to put device in required mode, music should start playing. Use Next/Previous buttons to skip between tracks.

AUX/FM Mode (AUX/FM)

You can listen to FM Radio or connect external sound devices without Bluetooth via a cable, such as iPods. Turn on device and use MODE button to select AUX/FM, and radio should automatically start playing. Short press PLAY/PAUSE button to auto search/save available FM Stations, once complete use Next/Previous buttons to skip between stations

When in AUX/FM mode, connect external sound device (eg iPod) via 3.5mm mini jack cable (not included) to LINE IN socket on rear of machine, device will auto switch to connected device

LINE-OUT

Use LINE OUT socket in any mode to connect additional speakers using 3.5mm mini jack cable (not included).

CONNECTING WIRELESS MICROPHONE

With your device turned on, put batteries inside the wireless microphone and turn on, it will connect automatically. If successfully connected a blue light will show next to MIC on the front panel. If also connecting wired microphones, please insert to either microphone input on rear of device using standard ¼ inch jack microphone cables.

WARNINGS

- 1. If the speaker does not turn when holding POWER button, please ensure the battery is charged, or the charging cable is connected. When charging the red charging indicator LED light remains illuminated, once fully charged indicator light turns off.
- 2. If microphone seems too quiet, please reduce the MUSIC VOLUME and increase the MIC VOLUME until you reach a level you are happy with.
- 3. When playing music from online apps such as Spotify, music volume levels can vary. If music is too loud and sounds distorted, please reduce music volume level to avoid damage.
- 4. To avoid feedback, please stand at least 2m away from device when using microphone



TECHNICAL INFORMATION

Sound	Stereo
Function	Bluetooth, LINE-IN, LINE-OUT, TF Card, USB, Disco LED light, FM
Bluetooth Version	V4.2
Bluetooth transmission	≤10 meters
Supporting TF card & USB capacity	128M~64GB
Wireless Microphone Frequency	UHF 865MHZ / UHF 863MHZ
Power Supply	DC 5V/7.4V, lithium battery
Battery	7.4V 2000mAh lithium battery*2
Output Power	30W
Frequency	90Hz-18KHz
Diameter of Loudspeaker	φ 5 inch
Speaker Impedance	4Ω
Aux connector	3.5mm
Charging connector	C-TYPE USB charging connector
SPL:	>115db 1KHz THD<1%
Anti-magnetic function	Available
Material	PC + ABS plastic+ Wooden
Size	L218*W229*H341mm

KARAOKE DOWNLOADS & STREAMING

To enjoy karaoke using your MOONBOX simply play your desired karaoke track on your phone, tablet or smart TV and connect via Bluetooth. Here are some suggestions of places to find karaoke tracks...

Mr Entertainer Karaoke Downloads <u>www.mrentertainer.co.uk</u>

Download karaoke video files to your device from our website, Search/browse for your favourite songs and download instantly in MP4 video format.

YouTube <u>www.youtube.com</u>

There are literally millions of karaoke videos and lyric videos available to play for free on Youtube, visit the Mr Entertainer Youtube Channel for the best karaoke Versions on Youtube.

Mr Entertainer Karaoke Online www.mrentertainer.online

Free karaoke Streaming website, thousands of songs in HD format available to play for free





Need Support? Chat to us via Whatsapp Scan the QR Code. 07536 915468

Mr Entertainer Karaoke

info@mrentertainer.co.uk Monday-Friday, 10am-5pm

Also check our Troubleshooting Guide for tips to resolve common issues.... www.mrentertainershop.co.uk/pages/troubleshooting