 




SP100

### CONTROL PANEL



	<b>Short Press</b> to Play/Pause <b>Long Press</b> to Power On/Off
<b>MODE</b>	<b>Short Press</b> to Switch Modes Bluetooth / TF Card / USB / AUX
	<b>Short Press</b> to Previous Track <b>Long Press</b> to Reduce Volume
	<b>Short Press</b> to Skip Track <b>Long Press</b> to Increase Volume
<b>LED</b>	<b>Short Press</b> to Switch Light Modes <b>Long Press</b> to Switch Lights off
<b>MusicOrig</b>	<b>Short Press</b> to Remove Vocal from Original Music. <b>**Results Vary**</b>


# NANO

PORTABLE KARAOKE SPEAKER WITH LIGHT EFFECTS




## INSTRUCTION MANUAL

### REAR PANEL

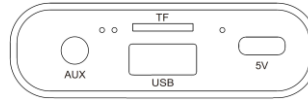

<b>AUX</b>	<b>Aux/Line Input.</b> Use AUX cable to connect other sound devices
<b>TF</b>	<b>TF CARD Input.</b> Play MP3 files from TF Card
<b>5V</b>	<b>Charging Socket.</b> Use USB-C Cable to charge device from any USB Wall Plug
<b>USB</b>	<b>USB Input.</b> Play MP3 files from USB Stick. Can also be used to charge Microphones using USB-C Cable
<b>MIC INDICATOR LIGHTS 1/2</b> Lights BLUE when Mics successfully connected <b>CHARGING INDICATOR LIGHT</b> Lights RED when charging. Turns off when full	

### MICROPHONES (Rechargeable)

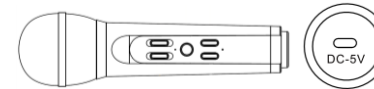

Long press **ON/OFF** to Turn Mic On/Off  
MIC1 has BLUE Light, MIC2 has GREEN Light  
If battery is low, light will flash before turning off  
Triple Press **ON/OFF** quickly to switch mic frequency/LED light colour Blue/Green  
Use **ECH** slider to adjust Mic Echo  
Use **VOL** slider to adjust Mic Volume  
Short Press **EQ** for Voice Change Effects  
Short Press **APPLAUSE** for Applause Sound  
Long Press **APPLAUSE** for BOOO Sound  
Double Press **APPLAUSE** for Laugh Sound

When mic battery is low, use USB-C Cable to charge via charging socket on bottom of mic, either from USB Input on Rear Panel of Speaker or any USB wall plug. Please note, mic can be used whilst charging, but quality may reduce

### MISC

Bluetooth is default mode when turned on, search for device name **NANO** using smart device to connect. If you cannot find or connect to **NANO**, ensure there are no other devices connected to the unit. You must disconnect other devices before connecting new one. If you are unsure which device is already connected, take speaker to a different room and attempt connection again.

TF CARD / USB / AUX Modes will only be available when TF CARD, USB or AUX Cable are connected

Do not use Microphones too close to Speaker to avoid feedback

Battery take approx 4 hours to charge  
Battery last 2-3 hours of use on full volume  
Microphone takes approx 4 hours to charge  
Microphone lasts max of 4 hours of constant use

MusicOrig feature can produce hugely varied results depending on the structure of the song being played, and not to be relied upon for serious karaoke use. We highly recommend using proper karaoke tracks for reliable karaoke use.

**Need Help?** Contact our UK Support Team via Whatsapp for Immediate Help...



scan qrcode on your phone  
07536 915468

Please also check our Troubleshooting page...  
[www.mrentertainershop.co.uk/pages/troubleshooting](http://www.mrentertainershop.co.uk/pages/troubleshooting)



**Mr Entertainer Karaoke**  
✉ [info@mrentertainer.co.uk](mailto:info@mrentertainer.co.uk)  
Monday-Friday, 10am-5pm

**DIGITOP**  
Digitop Ltd, Unit 11a, Bridge Trade Park, Bridge Road, Camberley, Surrey, GU15 2QR  
[digitopltd.com](http://digitopltd.com)

### PACKING LIST

- 1 x Nano Karaoke Speaker
- 2 x Wireless Microphones
- 1 x User Manual
- 1 x AUX Cable
- 1 x USB-C Charging Cable

### PRODUCT SPECS

Sound: Stereo  
Bluetooth Version: V5.0  
Bluetooth transmission: ≤10 meters  
Support TF card & USB capacity: 128M~64GB  
Microphone Frequency: 865MHZ/863MHZ  
Power Supply: DC 5V/7.4V, lithium battery  
Battery: Lithium 3.7V – 3000mah  
Output Power: 80W PEAK / 15 RMS  
Frequency: 100hz – 18khz  
Aux connector: 3.5mm  
Charging connector: C-TYPE USB  
S/N: >80db  
Material: ABS / Iron Mesh  
Size: W170mm x H180mm x D140mm  
Weight: 1130g (without mics)  
Model Name/Code: Nano/SP1200

### KARAOKE TRACKS

To enjoy karaoke using your NANO, simply play your desired karaoke track on your phone, tablet or smart TV and connect via Bluetooth to sing along

Here are some places to find karaoke tracks...

#### Mr Entertainer Online

[www.mrentertainer.online](http://www.mrentertainer.online)

Free Online Karaoke Streaming from Mr Entertainer without ads!

#### Mr Entertainer YouTube Channel

[www.youtube.com/@MrEntertainerKaraokeChannel](https://www.youtube.com/@MrEntertainerKaraokeChannel)

The BEST Karaoke Channel on Youtube, thousands of High Quality Karaoke Videos available to play for free

#### YouTube

There are literally millions of karaoke videos and lyric videos available to play for free on Youtube, however the quality can vary massively so be prepared to play a few not so great versions before finding one you like.

#### App Stores

Search your go to App Store for Karaoke and find an endless amount of great Karaoke Apps, such Karafun, Stingray Karaoke, SingKing Karaoke and more

**WARRANTY**  
All products and parts come with a standard 12 month warranty from date of purchase. If you have any problems please contact your retailer for help.

#### SAFETY INFORMATION

Read these instructions carefully and heed all warnings  
Do not clean the apparatus near or with water. Clean only with a dry cloth.  
Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.  
Do not use near any heat sources such as radiators, stoves, or other apparatus (including amplifiers) that produce heat.  
Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the apparatus.  
Only use attachments/accessories specified by the manufacturer.  
Unplug this apparatus during electrical storms or when unused for long periods of time.  
Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.  
No naked flame sources, such as lit candles, should be placed on the apparatus.  
Dispose of used electrical products and batteries safely according to your local authority and regulations.

#### ADDITIONAL WARNINGS

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like

**RECYCLING ELECTRICAL PRODUCTS**  
You should now recycle your used electrical goods and in doing so help the environment.  
The symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.  
**IMPORTANT:** Please read all instructions carefully before use and keep for future reference.

- ⚠ Risk of electric shock. Do not open.
- ⚠ Read all instructions carefully before use and keep for future reference.
- ⚠ When servicing, use only identical replacement parts.

**CAUTION** **ATTENTION**

**mrentertainershop.co.uk**  
KARAOKE MACHINES & ACCESSORIES  
For Home Users and Professional Karaoke Hosts

The UK's Premier Karaoke Collection

**mrentertainer.co.uk**  
CUSTOM KARAOKE DISCS & DIGITAL DOWNLOADS  
Choose only the tracks you want! High selection, download instantly

**Mr Entertainer Karaoke**  
John's Faves - Volume 1