



SL-2012A

PULSAR

HIGH POWER PORTABLE KARAOKE SPEAKER WITH LIGHT EFFECTS



INSTRUCTION MANUAL

Thank you for purchasing this Mr Entertainer product, if looked after and used correctly it should provide you with many years of entertainment. Please read through this manual carefully before operating the device to ensure correct usage. If any assistance is required we are happy to help, please contact us...



wa.link/3u39k6



Chat to us via Whatsapp, scan qrcode on your phone, or message 07536 915468

Mr Entertainer Karaoke

☎ 01483 811254

✉ info@mrentertainer.co.uk

Monday-Friday, 10am-5pm

Please also check our Troubleshooting page...

 
 
www.mrentertainershop.co.uk/pages/troubleshooting

WHAT'S IN THE BOX?

- ❖ PULSAR Karaoke Speaker
- ❖ 2 x Handheld Wireless Microphones
- ❖ 4 x AA Batteries (For Wireless Microphones)
- ❖ 2 x Microphone Holder Clips/Screws
- ❖ Instruction Manual
- ❖ UK Standard Plug AC Power Cable
- ❖ FM Radio Antenna
- ❖ AUX Cable (Mini Jack)

MAIN CONTROLS & FUNCTIONS

Control Panel (Top)

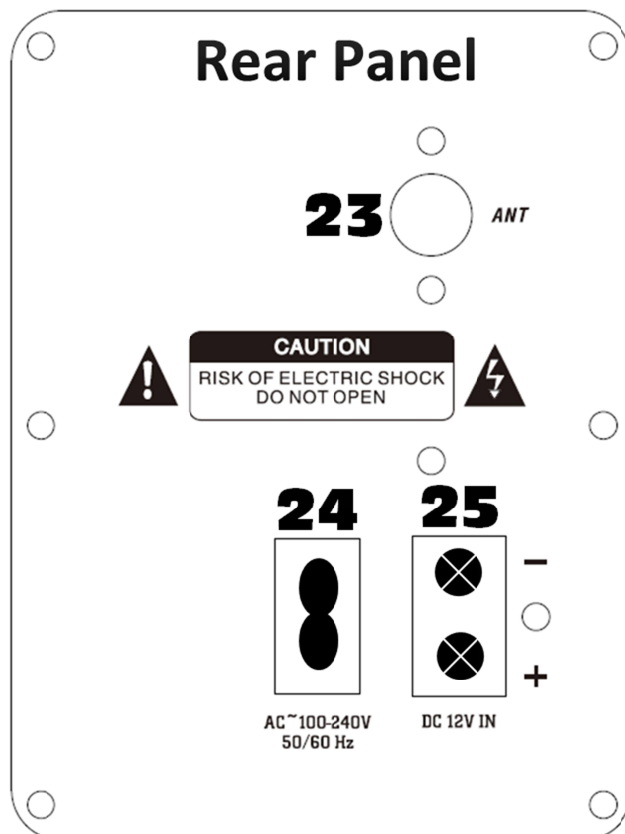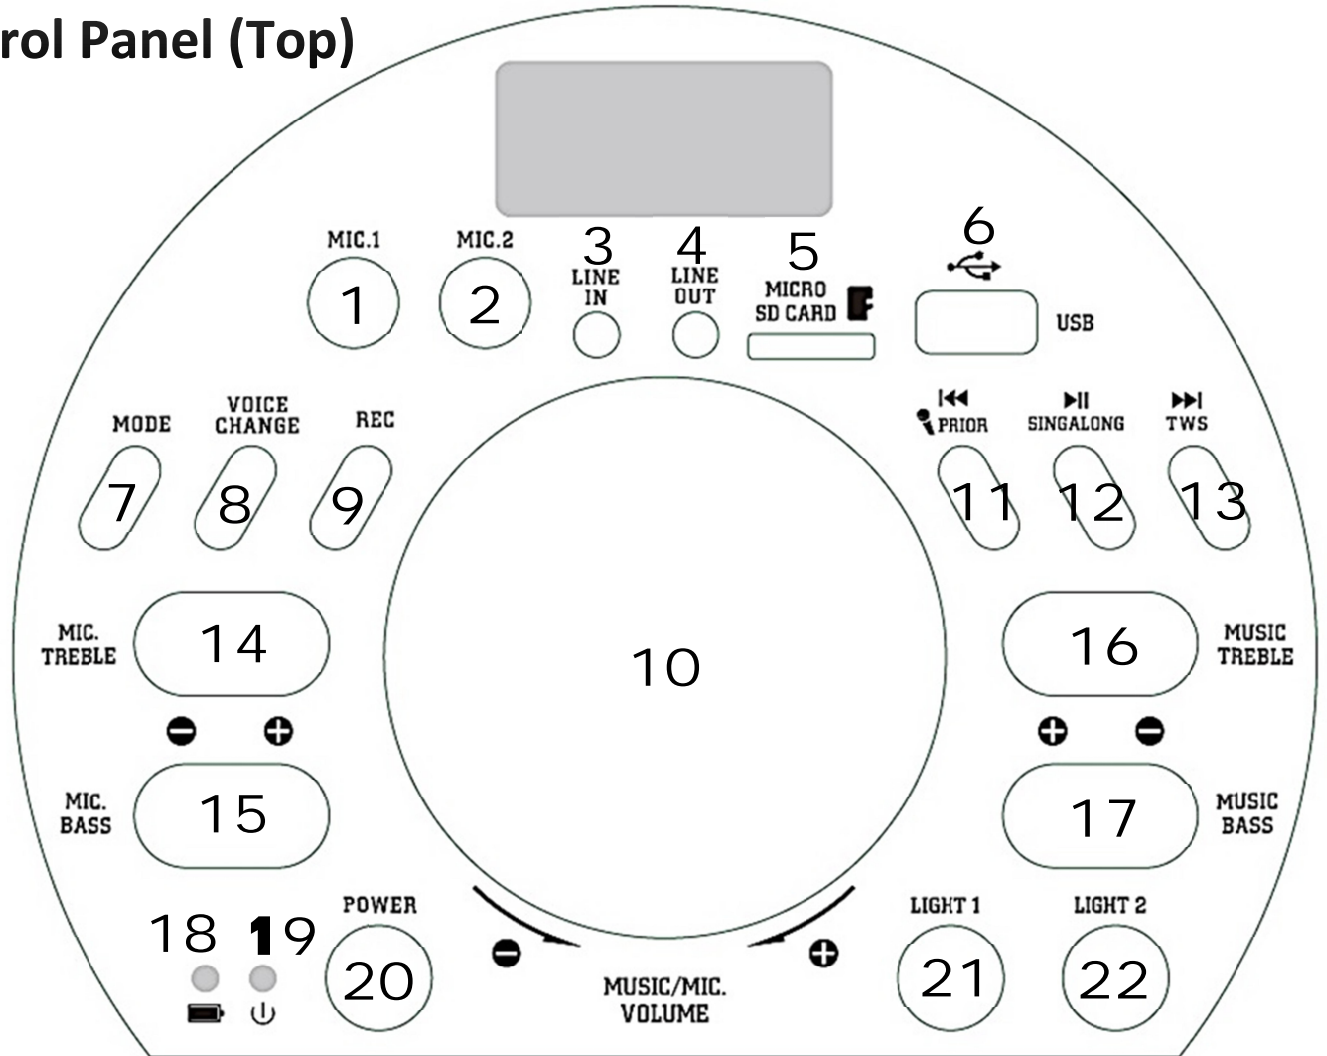

MAIN CONTROLS & FUNCTIONS continued...

1. Microphone Input 1
2. Microphone Input 2
3. Line Input (*for connecting external devices such as Laptops, MP3 Players etc*)
4. Line Output (*for connecting to external extra speakers, PA systems etc*)
5. Micro SD / TF Card Input (*for playing / recording media*)
6. USB Input (*for playing / recording media*)
7. Mode Selector (*Line Input / Bluetooth / FM Radio / USB*)
8. Voice Change (*Long Press to turn on ECHO*
(Short press to add voice change effects, GIRL / BABY / MONSTER / MAN / NORMAL))
9. Record (record vocal to USB/TF Card)
10. Music / Microphone Volume Dial (*Press Down to switch between Mic/Music*)
11. Previous Track / Mic Priority (*Short press to go to previous track, Long Press to turn on Mic Priority, Music Volume is reduced when Microphone is used*)
12. Play / Pause / Singalong Mode (*Short press to play / pause, Long Press to turn on Singalong mode, will attempt to remove vocals from music for singalong*)
13. Next Track / TWS (*Short press to go to next track, Long Press to connect a pair of PULSAR speakers together*)
14. Microphone Treble
15. Microphone Bass
16. Music Treble
17. Music Bass
18. Battery Indicator (*Blue Light = Full Battery, Red Light = Charging*)
19. Power Indicator (*Blue Light = Unit On, Red Light=Low Battery, please charge*)
20. Power (*Long Press to Power On / Off*)
21. Lights 1 - Front (*Long Press to Power On / Off, Short Press to change routine*)
22. Lights 2 - Side (*Long Press to Power On / Off*)
23. FM Radio Antenna Socket
24. Mains Power Input (*Insert Figure 8 Power Cable Here*)
25. External 12V battery input (*Charge device using external 12V battery, connect the positive pole (+) to the red terminal and the negative (-) to the black terminal*)

CHARGING THE UNIT

Please use the supplied power cable for charging. It takes around 4-5 hours to fully charge. Disconnect the power cable when the battery is fully charged to extend the life of the battery. The average running time on a fully charged battery is about 2 hours if running at full volume.

HOW TO FIND AND PLAY KARAOKE VIDEOS USE WITH PULSAR

There are lots of ways to find and play karaoke videos to use with the PULSAR.

You can connect many types of devices to the PULSAR such as Smart TV's, Phones, Laptops, Tablets etc, either by using BLUETOOTH (many modern Smart TV's now have Bluetooth built in, this is perfect to use with the PULSAR) or the LINE IN. Simply connect your device, play your favourite karaoke song and start singing! Both the ANDROID and APPLE App Stores have many excellent Karaoke Apps, just do a search for KARAOKE. Here are some of our favourites...

YOUTUBE / STINGRAY KARAOKE PARTY / SING KING KARAOKE / KARAFUN

USING THE WIRELESS MICROPHONE

Open the battery compartment of the microphone and insert two AA batteries. Press the power button to switch on the microphone. If the LED display doesn't come on, check if the batteries have been properly inserted and have charge. Start singing into the microphone and adjust the volume to the desired level. If microphones stop working please try replacing batteries before contacting us. Don't use the microphones close to the speaker in order to avoid feedback. Adding Treble and Echo to the microphones can also increase feedback.

BLUETOOTH OPERATION

1. Turn on the unit and press the MODE button to select the Bluetooth function
2. Activate the Bluetooth feature on the external device to be paired
3. Initiate a search for devices, look for device PULSAR
4. Once connected you can use your external device to play your favourite songs/videos

If your device cannot connect or find PULSAR, please ensure there are no other devices connected to the unit. You must disconnect other devices before connecting new one.

RECORD FUNCTION

Record your speeches/performances using the Record feature, requires an TF Card or USB Stick which is not included. Recordings will save to SD CARD in MP3 folder in sub folder called RECORDINGS. Please note, RECORD mode cannot record when singing along to music via Bluetooth, only LINE IN

1. Insert an TF Card or USB Stick
2. Press RECORD button to start recording
3. Press RECORD button again to stop recording

FM Radio Mode

Connect FM Radio Antenna to rear panel (23) *(make sure antenna cable is unravelled and raised high for best signal reception)*

Press PLAY (12) to search and store the available FM station.

Press NEXT / PREVIOUS to switch between stored radio stations

Microphone Clips

The PULSAR comes supplied with 2 microphone clips for convenient microphone storage when not in use. Use the screws provided to mount the clips in the pre drilled screw holes provided on the rear of the machine, just above the rear panel

Mr Entertainer Karaoke Downloads

Visit our website to search/browse for your favourite songs and download instantly to play on your Laptop, Phone or Tablet. www.mrentertainer.co.uk

WARRANTY

All products and parts come with a standard 12 month warranty from date of purchase.
If you have any problems please contact your retailer for help.

SAFETY INFORMATION

Read these instructions carefully and heed all warnings

Do not clean the apparatus near or with water. Clean only with a dry cloth.

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Do not use near any heat sources such as radiators, stoves, or other apparatus (including amplifiers) that produce heat.

Protect the power cord from being walked on or pinched particularly at plugs and the point where they exit from the apparatus.

Only use attachments/accessories specified by the manufacturer.

Unplug this apparatus during electrical storms or when unused for long periods of time.

Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power- supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.

No naked flame sources, such as lit candles, should be placed on the apparatus.



Dispose of used electrical products and batteries safely according to your local authority and regulations.

ADDITIONAL WARNINGS


The apparatus shall not be exposed to dripping or splashing and no objects filled with liquid, such as vases, shall be placed on apparatus. Main plug is used to disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main mains completely, the mains plug should be disconnected from the main socket outlet completely. Battery shall not be exposed to excessive heat such as sunshine, fire or the like


RECYCLING ELECTRICAL PRODUCTS


You should now recycle your waste electrical goods and in doing so help the environment.

 This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it  is taken to a suitable facility for disposal when finished with.

IMPORTANT: Please read all instructions carefully before use and keep for future reference

 Risk of electric shock.
Do not open

 Read all instructions carefully before use and keep for future reference

 When servicing, use only identical replacement parts



MR ENTERTAINER



Digitop Ltd T/A Mr Entertainer
Unit 11A Bridge Trade Park
Bridge Road
Camberley
Surrey
GU15 2QR
United Kingdom

www.mrentertainer.co.uk
www.mrentertainershop.co.uk

DIGITOP