



301TC Dog Training Collar with Wireless Remote

User's Manual

Important Safety Information

Explanation of Attention Words and Symbols used in this guide



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

▲WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION

CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

▲WARNING

Not for use with aggressive dogs. Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

AWARNING Risk of explosion if battery is replaced by an incorrect type. Do not short circuit, mix old and new batteries, dispose of in fire, or expose to water. When batteries are stored or disposed, they must be protected from shorting. Dispose of used batteries properly.

Safety during on-leash training. It is vitally important that you and your dog remain safe while learning during on-leash training. Your dog should be on a strong leash. long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

as bed sores.

Risk of skin damage. Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage. Ranging from redness to pressure ulcers; this condition is commonly known

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.
- · Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- · Examine the contact area daily for signs of a rash or a sore.

- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear the two contacts on Receiver. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.


The Lobo Commander Remote Training Collar must be used only on healthy dogs. We recommend that you take your dog to a veterinarian before using the collar if he is not in good health.

Thank you for choosing Lobo Commander." Our mission is to offer the best electronic training solutions. We want to ensure your pet's safety by providing you with the tools and techniques to successfully train your pet. You and your pet deserve a companion that includes memorable moments and a shared understanding together. If you have any questions, please contact us for Customer Service. support@lobocommander.com

Table of Contents

Important Safety Imformation	
Keep your pet safe and comfortable	3
Table of Contents	4
Components	- 5
How the System Works	
Key Definitions	
Receiver Collar	
Operating Guide	9
Transmitter Digital Display	10
Prepare the Receiver Collar	11
Fit the Receiver Collar	12
To Re-Thread the Collar	13
To pair the Remote Transmitter and Receiver Collar	14
Training guide	15
Find the Best Stimulation/Vibration level for Your Pet	16
Frequently Asked Questions	
Troubleshooting	18

Components

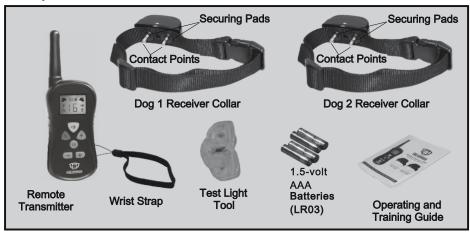

Other Items You May Need

- Scissors
- Lighter
- · Non-metallic collar

How the System Works

Now you can experience the difference a Remote Training Collar can make. Spend less time training and more time enjoying your dog. The Lobo Commander*Remote Training Collar is easy to use with an advanced digital display that tells you exactly what level of stimulation/vibration you are using.

The Remote Training Collar assists you in controlling your pet without a leash in a range of up to 300 yards. When you push a button, a signal from your remote activates your dog's Receiver Collar. He receives a safe but annoying stimulation. He'll quickly learn the association between his behavior and your correction. in no time, you'll have a better-behaved pet. The Lobo Commander™ Remote Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

Using the Remote Training Collar consistently and correctly, any basic obedience commands can be taught and many misbehaviors that your pet exhibits can be corrected.

Important: The Remote Training Collar has a range up to 300 yards. Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.




Features

- · Range up to 300vds
- 16 levels of stimulation (1-16 levels)
- 16 levels of vibration (1-16 levels)
- · Individual Stimulation only button
- Individual Vibration only button
- · Individual Tone only button
- Train up to 2 dogs
- Blue backlight LCD
- Easy to read Digital Display on Transmitter displays current Stimulation/Vibration Level and battery status
- Water resistant Receiver Collar

Key Definitions

Remote Transmitter: Transmits the signal to the Receiver Collar. Tone Only Button (Yellow): Sends an audible tone to the collar. No stimulation is delivered. Stimulation Only Button (Red)/Vibration Only Button(Blue): Delivers stimulation/vibration through the Contact Points on the Receiver Collar at the level shown on the Digital Display. When held down for 10 consecutive seconds, the Transmitter will "time-out", and you must release and press the button again before additional



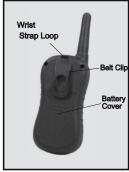

stimulation/vibration can be delivered.

Stim/Vibra Down Button (-): Decreases Stimulation/Vibration Level by 1. Stim/Vibra Up Button (+): Increases Stimulation/Vibration Level by 1.

Digital Display: Indicates which function the Transmitter is currently performing.

Stimulation/Vibration Level, pairing mode, dog channel 1/2 and battery status.

See Prepare the Remote Transmitter section for more details.

Transmitter LED Indicator Light: Red indicates Transmitter is performing the current chosen function.

Receiver Collar: Delivers stimulation, vibration or tone on a signal from the Remote Transmitter. It is water resistant.

On/Off Button: Momentarily pressing and holding this button turns the Receiver Collar on and off.


Contact Points: Deliver stimulation/vibration to your pet from the Remote Transmitter.

Receiver Indicator Light: Indicates when the Receiver Collar has been turned on or off or a button is pressed and also serves as a low-battery indicator.

Red LED: Indicates low battery and when static stimulation or vibration button is pressed.

Green LED: Indicates good battery and when tone button is pressed. Also indicates when pairing mode is complete.

Dog 1 Receiver Collar

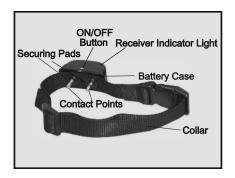

Operating Guide

Step Prepare the Remote Transmitter

To Insert and Remove the Battery

- 1. To remove, push out the battery cover (1A).
- 2. Install two (2), 1.5-volt (LR03 AAA) batteries with correct positive (+) negtive (-) sides (1B).
- 3. To replace the battery cover, align the battery case and push to lock (1C).







To verify the batteries are inserted correctly

- 1. Press any button on the Remote Transmitter.
- 2. The Digital Display should activate showing the current correction level.
- 3. If the Digital Display doesn't activate, you may have inserted the batteries backwards. Try taking them out and turning them over, ensuring that the (+) (-) sides are correctly placed.
- 4. If the Digital Display still does not activate, contact us for Customer Service.

AWARNING Risk of explosion if battery is replaced by an incorrect type. Do not short circuit, mix old and new batteries, dispose of in fire, or expose to water. When batteries are stored or disposed, they must be protected from shorting. Dispose of used batteries properly.

Transmitter Digital Display

The display stays on for approximately 30 seconds after a button press. After 30 seconds with no button press, the blue backlight shuts off first, and if no button press with another five minutes, the display shuts off and the Transmitter goes into battery conservation mode. Pressing any button will turn the display back on. The symbols on the display are explained below.

15	Indicates stimulation/vibration levels ranging from 1-16, and appears in the lower middle part.	4	Stimulation mode symbol indicate Stimulation button press on transmitter.
P 4	Indicates the active dog receiver and appears in the upper left and right corners next to the battery indicator.	"[]h.	Vibration mode symbol indicate Vibration button press on transmitter.
	Indicates battery's power level. Note: The battery indicator will flash every second to indicate low battery.	8	Tone mode symbol indicate Tone button press on transmitter.
P	Indicates Transmitter is ready to pair with Receiver Collar. Press button for 3 seconds to dispaly and begin pairing.		Indicates sending signal to Receiver Collar when ■ and ■ buttons are held simultaneously.

Transmitter LED Indicator Light – Function and Response

Button	Button Function	Transmitter Indicator Light Response
Tone (yellow)	Delivers audible tone to collar	Red LED on for length of button press
Stimulation (red)	Delivers stimulation to collar based on current level shown on Digital Display (stimulation will time-out if pressed continuously for 10 seconds or longer and will reset after release)	Red LED on for length of button press
Vibration (blue)	Delivers vibration to collar based on current level shown on Digital Display (vibration will also time-out after button is held for 10 continuous seconds)	Red LED on for length of button press
+ and - Buttons held simultaneously	Transmits Pairing command to Receiver Collar when P is visible on Digital Display or Sending signal to Receiver Collar where Green LED light flashes every second as response.	Red LED on for length of button press

Step Prepare the Receiver Collar

To Insert and Remove the Batteries

- Remove the Battery Cover and install two (2), 1.5-volt (LR03 AAA) batteries with correct positive (+) negative (-) sides.
 And replace the Battery Cover to the Receiver Collar. (2A)
- 2. Place the Collar in the right place and cover the Securing Pads.(2B)
- 3. Hand Tighten the Contact Points.
 Use the Test Light to tighten the Contact
 Points an Extra % Turn.
 DO NOT OVER THE CONTACT

DO NOT OVER-TIGHTEN THE CONTACT POINTS WHEN USING THE TEST LIGHT.







AWARNING Risk of explosion if battery is replaced by an incorrect type. Do not short circuit, mix old and new batteries, dispose of in fire, or expose to water. When batteries are stored or disposed, they must be protected from shorting. Dispose of used batteries properly.

To turn Receiver Collar On

- Press and hold the On/Off Button until the Green LED light comes on. (This takes approximately one second.)
- 2. Release the On/Off Button.

In normal mode, the Green LED will flash once every 5 seconds, indicating the Receiver Collar is on and ready to receive a signal from the Handheld Transmitter.

To turn Receiver Collar Off

- Press and hold the On/Off Button until the Red LED light shuts off. (This takes approximately three seconds.)
- Release the On/Off Button. Note: To extend the life of the batteries, turn the Receiver Collar off when it is not in use.

Important: If the Receiver Collar is left on continuously, the maximum battery life will be around three weeks.

Receiver Indicator Light - Function and Response

Receiver Collar Function	Green LED Response
Power on	Flashes once
Normal operation - Good battery	1 flash every 5 seconds
Training tone	On length of button press
In pairing position	Flashes once every second within 16 seconds
Pairing Complete	Flashes rapidly five times


Receiver Collar Function	Red LED Response
Power off	On for 3 seconds
Normal operation - Low battery	Flashes rapidlly
Static stimulation/Vibration	On length of button press



Important: The proper fit and placement of your Receiver Collar is important for effective training. The Contact Points must have direct contact with your pet's skin on the underside of his neck.

To assure a proper fit, please follow these steps:

 - 1. Make sure that the Receiver Collar is turned off.
- 2. Have your pet standing comfortably (3A).
- Place the Receiver Collar on your dog's neck close to the ears. Center the Contact Points underneath your dog's neck, touching the skin. Note: It is sometimes necessary to trim the hair around the Contact Points to make sure that contact is consistent (3B).




- The Receiver Collar should fit snugly, yet loose enough to allow one finger to fit between the strap and your pet's neck (3C).
- Allow your pet to wear the collar for several minutes then recheck the fit. Check the fit again as your pet becomes more comfortable with the Receiver Collar.







 - 6. Trim the collar as follows (3D):
 - a. Mark the desired length of the collar with a pen. Allow for growth if your pet is young or grows a thick winter coat.
 - Remove the Receiver Collar from your pet and cut off the excess.
 - Before placing the Receiver Collar back onto your pet, seal the edge of the cut collar by applying a flame along the frayed edge.




CAUTION


Risk of skin damage. For comfort, safety and effectiveness of this product, please ensure that you check the fit of your pet's collar frequently. If any skin irritation is observed, discontinue the use of the collar for a few days. If the condition persists beyond 48 hours, see your veterinarian.

Do not attach a leash to the Remote Training Collar. This can result in pulling the Contact Points too tightly against your pets neck. You may put a separate non-metallic collar on your dog's neck and attach a leash. Do use a harness for attaching a leash and/or tags while using the Remote Training Collar.


Please refer to page 2 for additional information.

   To Re-Thread the Collar











Step To Pair the Remote Transmitter and Receiver Collar

If your Receiver Collar does not beep when the Mode Button of the Remote Transmitter is pressed, or if you feel the Receiver Collar is not responding to the Remote Transmitter, follow these steps to pair:

- Place the transmitter into pairing mode by pressing the 1/2 Button for 3 seconds until the Digital Display shows P. Choose Channel for Dog 1 or Dog 2 by press 1/2 Button again.
- 2. With the receiver off of your pet, make sure it is turned off.
 Once it is off, press and hold the power button until the green led
 light turns off, about 5 seconds. Once the green led light turns off, release the
 power button,and the green led light should now flash once per second. This continues
 for 16 seconds, within which time pairing should be completed.
- Press and hold the up (+) and down (-) Buttons simultaneously until the Green LED flashes rapidly for 5 times on the Receiver Collar, indicating it has learned the Transmitter ID.
- 4. Press and hold the 1/2 Button again to complete and exit Pairing.
- Press any of the Stimulation/Vibration/Tone Buttons on the transmitter. The Receiver Collar should respond with exact Mode accordingly, verifying that it is paired with the transmitter.

Two Dog System

Note: If you wish to add another receiver collar to the training system, extra Receiver Collars are available where you bought your Remote Training Collar.

To Add Dog 2

Remote Transmitter

- 1. Press 1/2 Button and change to the other Channel for Dog 2.
- 2. Turn on the Receiver Collar for Dog 2, press any Mode Buttons to verify function.
- If Dog 2 Receiver Collar does not respond. Pairing may be needed. Repeat Steps in To Pair the Remote Transmitter and Receiver Collar above.

Training Guide

General Tips

- · Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with training, your pet may become confused.
- Be consistent. Correct your pet every time he misbehaves.
- Unless you can supervise him, it is recommended that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the tones by hiding or acting fearful, redirect his attention to a simple and appropriate behavior, such as the "sit" command.
- Pets should be at least 6 months old before using the Training Collar.
- Only let responsible family members use the Training Collar. It is not a toy!
- Other pets in hearing range will be affected by the training tones. Therefore, training sessions should be conducted out of hearing range of other pets.



Never use the Remote Training Collar to correct or eliminate any form of aggressive behavior. We recommend you contact your local veterinarian or professional trainer to determine if your pet might be aggressive. See page 2 for more information.

Teaching Your Pet the Positive Tone

Before using the Training Collar to correct your pet, spend 10 to 15 minutes per day for 2 or 3 days helping him create the association of the tone with reward and praise. To accomplish this:

- 1. Push the Tone Button (yellow) for 2 consecutive seconds.
- 2. Release the button and immediately reward your pet with verbal praise, petting, or a small food reward. Spend 3 to 5 seconds on your rewarding.
- 3. Wait a few minutes and repeat holding the Tone Button for 2 seconds following with praise.

Vary the reward to prevent your pet from anticipating a specific type. This stage of training is complete when your pet obviously anticipates a reward when he hears the positive tone.

Find the Best Stimulation/Vibration Level for Your Pet

Important: Always start at the lowest level and work your way up.

The Remote Training Collar has 16 Stimulation/Vibration Levels. This allows you to choose the Stimulation/Vibration that is best for your pet.

Once you have placed the Receiver Collar on your pet, it is time to find the Stimulation/Vibration Level that is best for him. This is called the Recognition Level.

A slight change in your pet's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for him.

Follow the steps below to find your pet's Recognition Level:

- 1. Starting at Level 1 on the Digital Display, press the Stimulation Button (red) or Vibration Button (blue) continuously for 1 to 2 seconds, Note: When the Stimulation/Vibration Button is held down for 10 consecutive seconds, the Transmitter will "time-out", and you must release and press the button again before additional stimulation/vibrationcan be delivered.
- If your pet shows no reaction, repeat the Stimulation/Vibration Level several times before moving up to the next level.
- 3. YOUR PET SHOULD NOT VOCALIZE OR PANIC WHEN RECEIVING STIMULATION/VIBRATION.

 IF THIS HAPPENS, THE STIMULATION/VIBRATION LEVEL IS TOO HIGH AND YOU NEED TO GO
 BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.
- Move up through the Stimulation/Vibration Levels until your pet reliably responds to the stimulation/vibration.
- 5. If your pet continues to show no response at Level 16, check the fit of the Receiver Collar.
 If this still does not yield any results, your pet's hair will need to be trimmed around the Contact Points.

If, after completing all of these steps, your dog still does not indicate he is feeling the stimulation/vibration, please contact us for Customer Service.

Frequently Asked Questions		
Is the Stimulation/Vibration safe for my pet?	 While the Stimulation/Vibration is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results. 	
How old does my pet have to be before using the Patpet Remote Training Collar?	Your pet should be able to recognize basic obedience commands such as "Sit" or "Stay". Pets should be at least 6 months old before using the Training Collar.	
Once my pet is trained and has been obeying my commands, will he have to continue to wear the Receiver Collar?	Probably not. You may need to reinforce training with the Receiver Collar from time to time.	
Is the Receiver Collar water resistant?	Yes. When changing the batteries, be sure to keep the area free of dirt and debris.	
Will I get exactly 300 meters of range with the Remote Training Collar?	The range of the Remote Training Collar will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "How the System Works" for tips on maximizing your range.	
	The maximum amount of time you can press the Stimulation or Vibration Button and deliver stimulation/vibration to your pet continuously is 10 seconds. After this, there's a time-out and stimulation/vibration cannot be delivered for 5 seconds. After the 5 second time-out period, Button can be pressed and stimulation/vibration can be delivered again.	

	Troubleshooting
My pet does not respond when I press a button.	Nake sure the Receiver Collar has been turned on. If your range has reduced from the first time you used the Remote Training Collar, the battery(s) may be low in either the Remote Transmitter or Receiver Collar. Many factors can impact the amount of range you have with the Remote Training Collar. For a list of these factors, see "How the System Works". Test the Receiver Collar. See "Test Light Instructions" for details. Increase the Stimulation/Vibration Level. Refer to "Find the Best Stimulation/Vibration Level For Your Pet" for more information. Make sure the Receiver Collar's Contact Points are placed snugly against your pet's skin. Refer to "Fit the Receiver Collar" for more information.
The Receiver Collar will not turn on.	Check that two (2) LR03 AAA batteries have been installed properly. See "To Insert and Remove the Batteries."
The Receiver Collar is not responding to the Remote Transmitter.	Verify the Receiver Collar is on. If the Indicator Light does not come on when any button is pressed on the Transmitter, ensure that the batteries are inserted properly. If the first two solutions did not resolve your problem, see "To Pair the Remote Transmitter and the Receiver Collar."

Test Light Instructions



- 1. Turn the Receiver Collar on.
- 2. Hold the Test Light Contacts to the Contact Points.
- 3. Press the Stimulation Button on the Remote Transmitter.
- 4. The Test Light will flash. Note: At higher Stimulation Levels, the Test Light will flash brighter.
- 5. Turn the Receiver Collar off.

Save the Test Light for future testing. Note: If the Test Light does not flash, replace the batteries and re-test. If Test Light still does not flash, contact us for Customer Service.

Warranty Registration

To register your training collar

For the Limited Lifetime Warranty,

Please visit <u>WWW.LOBOCOMMANDER.COM</u>

And claim your FREE GIFT!



6140 State Hwy 6, Suite 82 Missouri City, TX 77459

Support@LoboCommander.com