



LOBO COMMANDER™

lobocommander.com



601TC

Waterproof Dog Training Collar with Wireless Remote

User Guide



Contents	Page
Overview	3
Components	3
Charging	4
Sleep Mode	5
Fitting Collar	5
Remote Operation	6
Programming Remote	7
Syncing Remote and Collar	8
Controlling 2 Collars	8



601TC Dog Training Collar

Thank you for choosing the Lobo Commander 601TC Dog Training Collar. Our mission at Lobo Commander is to provide you with the best quality pet training supplies available. We constantly work with our engineers to improve our products to ensure that our customers get the best pet training tools available. All Lobo Commander™ products are put through a strict quality control program to ensure that our customers have a worry free purchase experience.

At Lobo Commander™ we offer a lifetime warranty on all of our training products, along with a customer service team that is truly a step above all others. We are here to listen and are ready to answer any questions you may have.

Please read this entire manual before using the training collar for the first time.

Components





Charging

Please charge the collar and the remote before first use. For both remote and collar, full charge takes approximate 3 hrs. Please **DO NOT** overcharge units as it may cause damage.



Charging the remote

Lift the rubber cover on the top of the remote and insert the cable from charger.

The battery icon on the remote's screen will flash as the unit charges.

Charging is complete once the icon becomes solid.

Charging the collar

Lift the rubber cover on the bottom of the collar and plug the charger into the charging port. The red LED will flash as the collar charges.

Charging is complete once the LED turns off.





Fitting the collar

When putting the collar on your pet for the first time, make sure the proper length metal contacts are installed. Long contacts come pre-installed on the receiver. Long contacts are for dogs with long hair, and the short contacts are for dogs with shorter hair.

Once the proper contacts are installed, fit the collar on your pet. The collar should be adjusted so you can fit two fingers under the collar. Also, make sure that the metal contacts are making contact with your pet.

The receiver should sit under your pets' neck, with the logo facing up. Once you fit the collar to your pet, allow them to wear it for a few hours to get used to wearing the collar.

Check the area where the contacts are touching your pet to make sure it is not causing any irritation, especially the first few times your pet wears the collar.

Sleep mode

Both the collar and the remote have an automatic sleep mode to conserve battery life.

The collar will enter sleep mode if the collar does not sense any movement for one minute. The collar will awaken once any movement is detected.

The remote will enter sleep mode after there is no activity for one and a half minutes. To awaken the remote, simply give the **power** button or the **menu/mode** button a quick press.



Remote Operation



Power Button - Press and hold button down for 2-3 seconds to turn on/off remote. Quickly press button to awaken remote from sleep mode.



Collar Tone Button - Press button to cause the collar to produce an audible tone. The tone will continue to sound as long as the button is pressed. When the remote is in programming mode, this button is used to decrease the value being programmed.



Shock Button - Press the button to cause the collar to deliver a shock through the metal prongs. The shock will continue as long as the button is pressed.



Menu / Mode Button - Press and hold button down for 2-3 seconds to put the remote into programming mode. Repeat to exit programming mode. . A quick press of the button will change the collar mode from A, B, or A&B. Once in programming mode, a quick press of the button will scroll through the features to be programmed.



Remote Tone Button - Press the button to cause the remote to produce a tone. The tone will continue to sound as long as the button is pressed. When the remote is in programming mode, this button is used to increase the value being programmed.



Vibrate Button - Press the button to cause the collar to vibrate. The vibration will continue as long as the button is pressed.




Programming the remote

Channel Selection - Choose which channel on the remote to program. To set the remote to the desired channel, press the **menu/mode** button to select the channel you wish to use, A, B or A&B together.

To adjust the different settings on the remote, press and hold the **menu/mode** button for 2 to 3 seconds until the remote beeps and the letter on the remotes screen starts to flash. You can now program the different settings on the remote.

To change the intensity of the different corrections, use the two **tone** buttons to increase or decrease the settings.

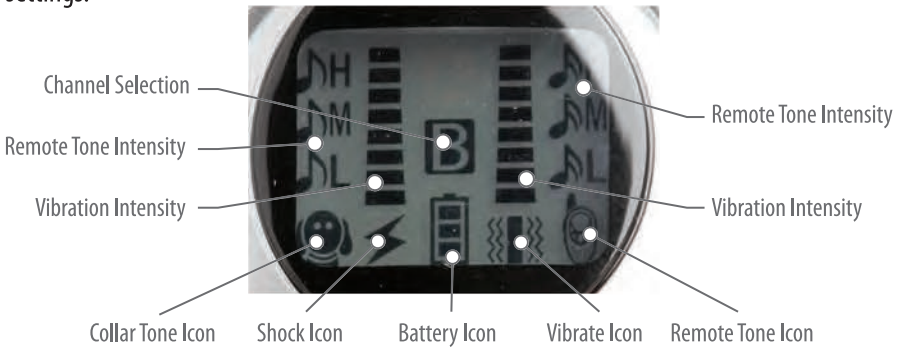

Shock - To adjust the intensity of the shock delivered by the collar, quickly press the **menu/mode** button until the **lightning icon** is flashing on the screen. Now press either the **collar tone** button to lower the setting or the **remote tone** button to increase the setting. The more bars selected, the higher the intensity of the shock. It is recommended to start at the lowest setting and slowly increase the intensity until you get a satisfactory response from your pet.

Vibrate - To set this function, quickly press the **menu/mode** until the **vibrate icon** is flashing on the screen. Press either the **collar tone** button to lower the setting or the **remote tone** button to increase the setting. The more bars selected, the faster the collar will vibrate.

Collar Tone - The tone can be set to either beep 1, 2, or 3 times each time the button is pressed. To set this function, press the **menu/mode** button until the **dog icon** is flashing on the screen. Now press either the **collar tone** button to lower the setting or the **remote tone** button to increase the setting.


Remote Tone - The tone can be set to either beep 1, 2, or 3 times each time the button is pressed. To set this function, quickly press the **menu/mode** button until the **remote icon** is flashing on the screen. Now press either the **collar tone** button to lower the setting or the **remote tone** button to increase the setting.



Syncing the collar and remote

If the collar for any reason loses connectivity with the remote, simply reset the collar by lifting the rubber cover over the charging port of the collar. You will see a small hole directly above the charging port. Insert the end of a paper clip or any similar item in the hole. This will cause the red led to flash slowly. Now press either the collar tone, shock, or vibrate button on the remote. This will cause the red led on the collar to flash quickly. The remote and collar are now properly connected. Make sure to replace the rubber cover over the charging port.

To sync a second collar to the remote, set the remote to the channel you wish the second collar to be on, either A or B. Now, follow the instructions above to sync the second collar with the remote.

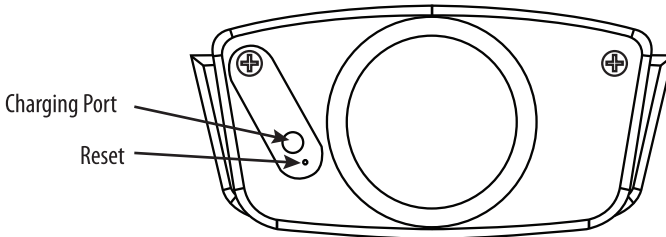

Collar Bottom View

Controlling two collars

To use the remote to control two separate collars, simply set the remote to the channel of the collar you wish to control, either A or B. You can control both collars at the same time by setting the remote to AB. When the remote is set to channel AB, any correction will be sent to both collars.



LOBO COMMANDER

lobocommander.com

6140 State Hwy 6, Suite 82
Missouri City, TX 77459

Toll Free – 1.844.243.4346