



LOBO COMMANDER™

lobocommander.com

601TC

Dog Training Collar with Wireless Remote

Quick Start Guide

For complete user manual, training guides
and instructional video, please visit
WWW.LOBOCOMMANDER.COM

Experiencing difficulty with your training collar?
Don't panic! Call our customer support team at
1-844-243-4346
or email us at support@lobocommander.com

Copyright ©2014 Lobo Commander. All Rights Reserved.

Charging Collar and Remote



Please charge the collar and the remote before first use. For both remote and collar, full charge takes approximate 3 hrs. **Please DO NOT overcharge units** as it may cause damage.

 
When charging the remote, the battery icon  on the remotes screen will flash as the unit charges. Charging is complete when the icon becomes solid.

When charging the collar, the red LED will flash as the collar charges. Charging is complete once the LED turns off.

Syncing Collar and Remote



If the collar for any reason loses connectivity with the remote, simply reset the collar by lifting the rubber cover over the charging port of the collar. There is a small hole next to the charging port. Insert the end of a paper clip or any similar item in the hole. This will cause the red LED to flash slowly. Now press either the collar tone, shock, or vibrate button on the remote. This will cause the red LED on the collar to flash quickly. The remote and collar are now properly connected. Be sure to replace the rubber cover over the charging port.

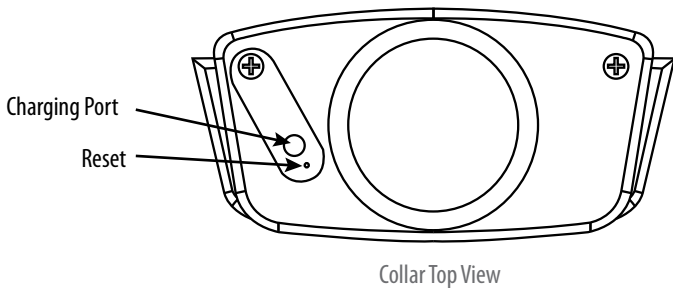

Sleep Mode



Both the collar and the remote have an automatic sleep mode to conserve battery life.

 
The **remote** will enter sleep mode after there is no activity for one and a half minutes. To awaken the remote, simply give the power button **1** or the programming button **4** a quick press.

The **collar** will enter sleep mode if the collar does not sense any movement for one minute. The collar will awaken once any movement is detected.

Remote Operation



- 1 Power Button
- 2 Collar Tone Button
- 3 Shock Button
- 4 Menu / Mode Button
- 5 Vibrate Button
- 6 Remote Tone Button

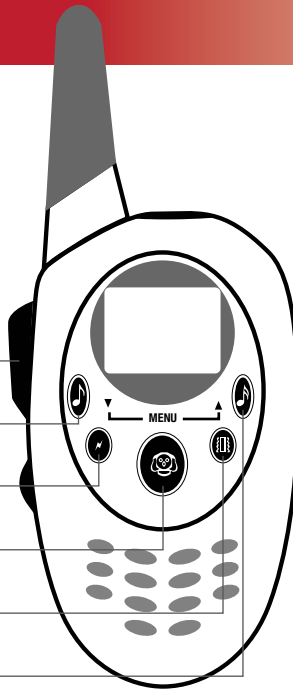



Power Button - Press and hold button down for 2-3 seconds to turn on/off remote. Quickly press button to awaken remote from sleep mode.



Collar Tone Button - Press button to cause the collar to produce an audible tone. The tone will continue to sound as long as the button is pressed. When the remote is in programming mode, this button is used to lower the settings being programmed.



Shock Button - Press the button to cause the collar to deliver a shock through the metal prongs. The shock will continue as long as the button is pressed.



Menu / Mode Button - Press and hold button down for 2-3 seconds to put the remote into programming mode. Repeat to exit programming mode. . A quick press of the button will change the collar mode from A, B, or A&B. Once in programming mode, a quick press of the button will scroll through the features to be programmed.



Remote Tone Button - Press the button to cause the remote to produce a tone. The tone will continue to sound as long as the button is pressed. When the remote is in programming mode, this button is used to raise the settings being programmed.



Vibrate Button - Press the button to cause the collar to vibrate. The vibration will continue as long as the button is pressed.

Warranty Registration

To register your training collar
for the Limited Lifetime Warranty,
please visit **WWW.LOBOCOMMANDER.COM**
and claim your **FREE GIFT!**



LOBO COMMANDER

lobocommander.com