


# firewood 5

## IMPORTANT SAFETY INSTRUCTIONS


MISUSE CAN CAUSE INJURY AND PROPERTY DAMAGE! Read instructions before use and only use vaporizer according to instructions.

- Only use with High Drain Lithium Ion 18650 cells that are rated for a **minimum of 20 Amps continuous discharge current** and have a nominal voltage of 3.7V. See the Firewood website for specific recommendations.
- Never use a battery that has been damaged or that has a damaged plastic covering.
- Only use a battery charger that is intended for use with 18650 cells and has over-charge circuit protections.
- Remove battery when traveling by air or sending by mail.
- Do not use near water or if wet.
- The tray can get **HOT** while in use. Please use caution and allow a few minutes for the tray to cool before handling.

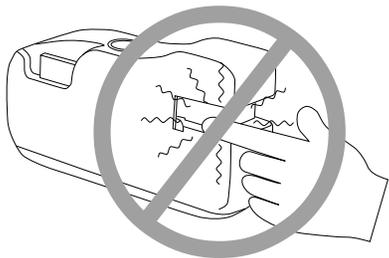



## Remove Mouthpiece/Battery Cover

Pinch and lift then slide out:

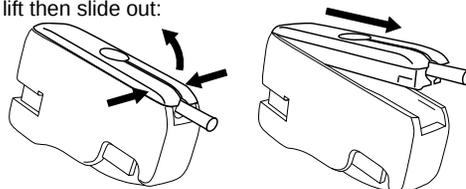

## Load Battery


Insert the negative terminal first. Push down against the spring and slide the positive terminal into place. If the battery is inserted the wrong way the vaporizer will buzz continuously – remove the battery immediately and fix. Put the Mouthpiece/Battery Cover back on ensuring it snaps into place

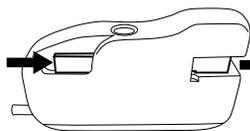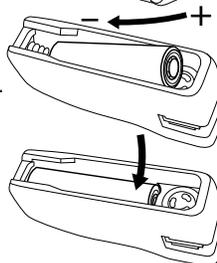

Remove Tray

Careful – Ceramic Tray Can Break if Dropped!


Grind Plant Material and Fill Tray

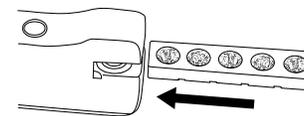

Slide Tray Into Vaporizer:

## Select the Chamber:

Push the tray all the way in, or align so that the o-ring is centered between the notches on the tray.

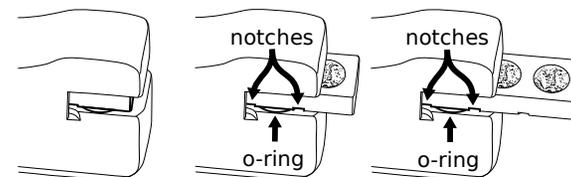

## Check Battery Level:

Click the button once quickly. The vaporizer will buzz between 1 and 5 times to indicate the battery level. 3 sets of 3 buzzes indicates the charge level is too low

to use (<3.5V) Recharge immediately to prevent battery damage! 3 sets of 4 buzzes indicates the charge level is too high (>4.3V), please check charger!

Buzzes	Battery Level
5	High (above 4.1V)
4	Medium-High (3.95V - 4.1V)
3	Medium (3.8V – 3.95V)
2	Medium-Low (3.7V – 3.8V)
1	Low (below 3.7V)

**Set Heat Level** - Click the button 2, 3 or 4 times:


# Clicks	Heat Level	Capsule Target Temp Range
2	low	250° - 350° F (121° - 177° C)
3	medium	350° - 400° F (177° - 204° C)
4	high	400° - 450° F (204° - 232° C)

The vaporizer will pause for a moment then buzz between 2 and 4 times to confirm your selected level. Click the button 5 times to get the currently stored heat level.


**Hold Button and Draw** - The vaporizer will buzz as it starts to heat up. You can start to draw as soon as it buzzes or wait a few seconds for the heater to warm up. The vaporizer will buzz rapidly if you are drawing too fast. Release the button when done with each draw. Continue to take draws until the vapor thins out and/or tastes cooked. The vaporizer will give a power down buzz within a few seconds of releasing the button after each draw.

**Cleaning** - The Tray, Glass Tube, Tubular Tube, and L joint need to be cleaned periodically.

Clearing the tray immediately after each use will help keep the tray clean (blow on screen side of tray to quickly remove contents while still warm). To thoroughly clean the tray, first remove the screens and soak in alcohol, burn clean, or replace with 1/2" SS pipe screens. Then clean the tray with

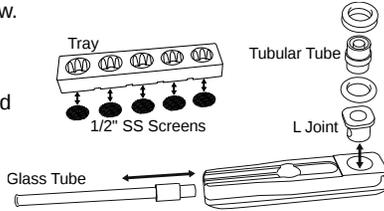

isopropyl alcohol. Push the screens back into place when done. Remove the Glass Tube by sliding it out from the Battery Cover/Mouthpiece then remove the L joint. Clean both with isopropyl alcohol and/or a pipe cleaner.

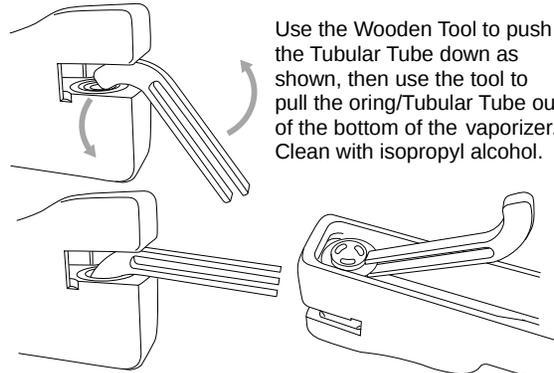

To re-assemble, start by putting the top two o-rings into place beneath the heater. Use the wooden tool to ensure they lay flat. Slide the tray all the way into place, turn the vape over, then push the Tubular Tube into the hole so that the 3 holes in the Tube are on the bottom side of the vaporizer. Push the final o-ring down around the Tubular Tube.

**Adjusting Heat Level Settings:**

Each of the three heat levels can be adjusted up or down to suit the user's preferences. Click the button 8 times to enter options mode, then click 2, 3, or 4 times to select the heat level to adjust. Finally click to adjust the level based on

the table below. Skip the final step to restore the selected heat level to the default.

**Adjusted Heat Level Based on Number of Clicks:**

Original Level ↓	1 click (+¼)	2 clicks (+½)	3 clicks (+¾)	4 clicks (+1)	5 clicks (-¼)	6 clicks (-½)	7 clicks (-¾)
2, low	2¼	2½	2¾	3	1¾	1½	1¼
3, med	3¼	3½	3¾	4	2¾	2½	2¼
4, high	4¼	4½	4¾	5	3¾	3½	3¼

**Finishing & Maintaining the Wood Surface:** Firewood vaporizers come either unfinished or with a 100% natural Tung Oil finish. For best results, unfinished wood should be sanded and finished with a natural oil/wax finish. Finished wood can be restored by lightly sanding and reapplying a fresh coat of the original finish.

**Warranty:** Firewood Vaporizers Inc. One (1) Year Limited Warranty Information  
Firewood Vaporizers Inc. grants purchasers of the Firewood Vaporizer a warranty against defects in materials and workmanship under normal use of the device for a period of one (1) year from the date of retail purchase by the original purchaser of the unit. If a physical defect arises and a claim is received within the Warranty Period Firewood Vaporizer Inc. will either (1) repair the device, (2) exchange the device, or (3) refund the purchase price of the device, at the discretion of the company.

**Exclusions and Limitations :**

The Limited Warranty applies only to devices manufactured by Firewood Vaporizer Inc. This warranty does not apply to: (a) to damage caused by accident, abuse, misuse, or other external causes; (b) to damage caused by operating the device outside the permitted or intended uses; (c) to a device or part that has been modified to alter functionality or capability; (d) to cosmetic damage, including but not limited to scratches, dents, and discolored wood; (e) to damage caused by use of unapproved batteries, charger or power supply; (f) damage to ceramic parts after 1 month from the purchase date.

The Warranty does not apply to normal performance degradation of batteries, neglecting to adhere to cleaning instructions, or heat damage due to improper use of the device. Intentionally disassembling or attempting repairs on your device will void the warranty.

Please email [service@firewoodvapes.com](mailto:service@firewoodvapes.com) for warranty service. Please include a description of the problem and the Name and Date of purchase.