


# firewood 6

## IMPORTANT SAFETY INSTRUCTIONS

MISUSE CAN CAUSE INJURY AND PROPERTY DAMAGE!  
Read instructions before use and only use vaporizer according to instructions.


- Only use with High Drain Lithium Ion 18650 cells that are rated for a **minimum of 20 Amps continuous discharge current** and have a nominal voltage of 3.7V. See the Firewood website for specific recommendations.
- Never use a battery that has been damaged or that has a damaged plastic covering.
- Only use a battery charger that is intended for use with 18650 cells and has over-charge circuit protections.
- Remove battery when traveling by air or sending by mail.
- Do not use near water or if wet.

• The heater can get **HOT** while in use. Please use caution and allow a few minutes for the heater to cool before handling.

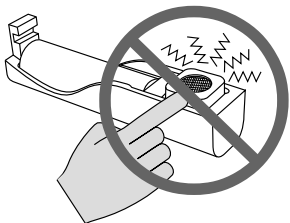


## Using the Switch:


Left position to open and close:

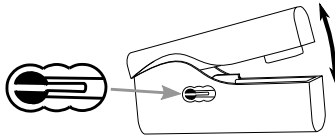

Middle position to use:


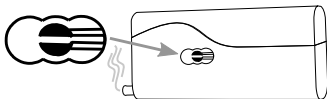 


 Right position to secure when not in use:

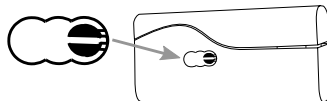


## Load Battery

Insert the negative terminal first. Push down against the spring and slide the positive terminal into place. If the battery is inserted the wrong way the vaporizer will not work – remove the battery immediately and fix

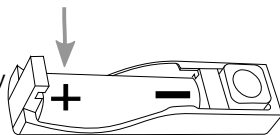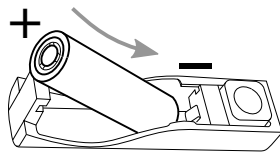


## Using the Storage Chamber


Remove the tool/lid

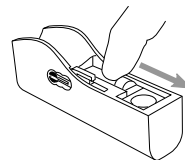


Load the chamber with ground herb

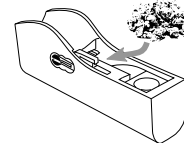


Use the flat end of the tool to load the bowl

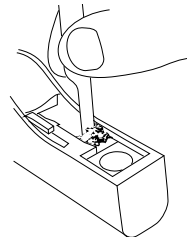

Use the wide end of the tool to pack the herb

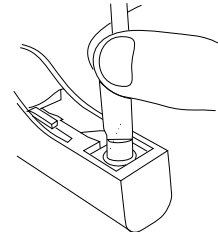


Replace the tool/lid

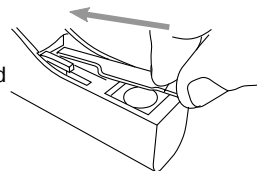

### Using the Internal Button:

All heater functionality is controlled with an internal button that is activated by setting the switch to the middle position, then squeezing the unit as shown:

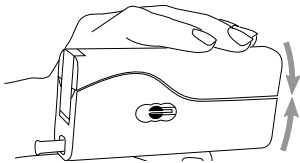

### Check Battery Level:

Click the button once quickly. The vaporizer will buzz between 1 and 5 times to indicate the battery level. 3 sets of 3 buzzes indicates the charge level is too low to use (<3.5V)

Recharge immediately to prevent battery damage! 3 sets of 4 buzzes indicates the charge level is too high (>4.3V), please check charger!

Buzzes	Battery Level
5	High (above 4.1V)
4	Medium-High (3.95V - 4.1V)
3	Medium (3.8V – 3.95V)
2	Medium-Low (3.7V – 3.8V)
1	Low (below 3.7V)

**Set Heat Level** – The Firewood 6 has 3 user programmable heat levels with the following default temperature settings:

# Clicks	Default Target Temp Range
2	300° - 310° F (149° – 154° C)
3	350° - 360° F (177° – 182° C)
4	420° - 430° F (216° – 221° C)

After clicking, the vaporizer will pause for a moment then buzz 2, 3, or 4 times to confirm your selected level. Click the button 5 times to get the currently stored heat level.


**Program Heat Level:** Each of the 3 heat levels can be set to any of 20 temperature ranges in the table below (skip to use the default temps shown in table above). To get the currently programmed temperature click the button 6 times.

Step 1	Step 2	Step 3 - Number of clicks/ buzzes	Step 4 - Number of clicks/ buzzes	Target Temperature Range	
Set Heat Level (2, 3, or 4 clicks) then wait a few seconds	Click 7 times and wait for device to buzz back 7 times	2	5	250-260° F	
			6	260-270° F	
			7	270-280° F	
			8	280-290° F	
			9	290-300° F	
		3	0	300-310° F	
			1	310-320° F	
			2	320-330° F	
			3	330-340° F	
			4	340-350° F	
	4	5	350-360° F		
		6	360-370° F		
		7	370-380° F		
		8	380-390° F		
		9	390-400° F		
				0	400-410° F
				1	410-420° F
				2	420-430° F
				3	430-440° F
				4	440-450° F

**Hold Button and Draw** - The vaporizer will buzz as it starts to heat up. Start drawing as soon as it buzzes or wait a few seconds for the heater to warm up. The vaporizer will buzz rapidly if you are drawing too fast. Release the button when done with each draw. Continue to take draws until the vapor thins out and/or tastes cooked. The vaporizer will give a power down buzz within a few seconds of releasing the button after each draw.

**Cleaning:** The glass tube and bowl will need to be cleaned periodically.

First remove the glass tube and clean with alcohol and pipe cleaner or cotton swab.

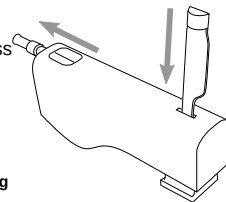

Then use the tool to remove the bowl and wipe clean with alcohol

### Finishing & Maintaining the Wood Surface:

Firewood vaporizers come either unfinished or with a 100% natural Tung Oil finish. For best results, unfinished wood should be sanded and finished with a natural oil/wax finish. Finished wood can be restored by lightly sanding and reapplying a fresh coat of the original finish.

**Warranty:** Firewood Vaporizers Inc. One (1) Year Limited Warranty Information  
Firewood Vaporizers Inc. grants purchasers of the Firewood Vaporizer a warranty against defects in materials and workmanship under normal use of the device for a period of one (1) year from the date of retail purchase by the original purchaser of the unit. If a physical defect arises and a claim is received within the Warranty Period Firewood Vaporizer Inc. will either (1) repair the device, (2) exchange the device, or (3) refund the purchase price of the device, at the discretion of the company.

Exclusions and Limitations : The Limited Warranty applies only to devices manufactured by Firewood Vaporizer Inc. This warranty does not apply to: (a) to damage caused by accident, abuse, misuse, or other external causes; (b) to damage caused by operating the device outside the permitted or intended uses; (c) to a device or part that has been modified to alter functionality or capability; (d) to cosmetic damage, including but not limited to scratches, dents, and discolored wood; (e) to damage caused by use of unapproved batteries, charger or power supply; (f) damage to ceramic parts after 1 month from the purchase date.

The Warranty does not apply to normal performance degradation of batteries, neglecting to adhere to cleaning instructions, or heat damage due to improper use of the device. Intentionally disassembling or attempting repairs on your device will void the warranty.

Please email [service@firewoodvapes.com](mailto:service@firewoodvapes.com) for warranty service. Please include a description of the problem and the Name and Date of purchase.