


The spout is stuck or difficult to swivel There is a leak at the base of the spout

Water supply valves need not be shut off.

Spout Removal

Unscrew knurled spout retaining ring
Pull spout straight up to remove

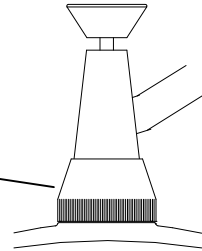

If there are lime or other deposits on surfaces:

Place assembled spout base in a cup, fill with white vinegar, allow to set overnight
Use paper towel to remove standing water from faucet body, fill with white vinegar, allow to stand overnight

Replace O-ring with standard 7/8" OD x 11/16" ID x 3/32" CS O-ring

Lubricate O-ring, inside surface of faucet body and outside surface of spout base with non-toxic silicone grease

Spout Assembly

Verify spout is assembled as shown

Spout Installation

Pull on knob to hold diverter assembly up into spout body while seating spout into the faucet body - triangle *MUST* be aligned in hole

Tighten knurled spout retaining ring

