

## Water is dripping from the mixer knob

Step 1

Unscrew 27

Loosen 26  
2.5mm Allen wrench

Remove 23

Unscrew 22

Step 2

Tighten 21  
There are four 'tabs' on the face of 21. Place the tips of a pair of needle nose pliers against two opposing tabs. Turn clockwise.

Step 3

Reassemble by reversing Step 1

If leak has not stopped  
P4020 Mixer Cartridge may need replaced

