

SMS COMMAND—VT08S

❖ Setting Part

COMMAND	DETAILS	DESCRIPTION
APN,cmnet#	Set APN	/
SERVER,1,vt.protrack365.com,8842,0#	Set Server	/
GPRSON,X#	Set GPRS Status	X=0 or 1;"1" means GPRS ON, "0" means GPRS OFF, default:1
TIMER,15,15#	Set GPS data upload interval	T1=0/5~18000s; GPS Uploading interval when ACC ON :default: 10 T2=0/5~18000s; GPS Uploading interval when ACC OFF: default: 10
DISTANCE,50#	Set distance interval of GPS data sending	Ranges 50~10000 or 0(meters), distance interval, default is 300
GMT,E,3,30#	Set time zone	Default: GMT+8
SOS,A,1064832653615#	Set SOS numbers	SOS,<A>,<Number 1>[,Number 2][,Number 3]#
CENTER,A,1064832653615#	Set center numbers	/
RELAY,0# RELAY,1#	Engine cut or restore	0: restore engine 1: stop engine
SENSOR,10,10,1#	Set vibration sensor detecting time	A=10-300 seconds, detecting time. Default: 10 seconds B=10-300 seconds, alert delay. Deault:180 seconds C=1-3000 minutes, vibration alert interval. Default: 30 minutes SENSOR# Check the parameter of the status
SENALM,[A],[M]#	Set the vibration alarm	A=ON/OFF, default: ON; M=0/1/2, way of alarming, 0 :GPRS only, 1: SMS+GPRS, 2 : GPRS+SMS+phone call, default:1

POWERALM,[A][M][T1][T2]#	Set the power cut-off alarm	A=ON/OFF, default: ON; M=0/1/2, way of alarming, 0: GPRS only, 1: SMS+GPRS, 2 : GPRS+SMS+phone call, default: 2; T1=2~60 (second), default: 5; T2=1~3600 (second), default: 300;
BATALM, [A][M]#	Set the low battery alarm	A=ON/OFF, default: ON; M=0/1/2, way of alarming, 0: GPRS only, 1: SMS+GPRS, 2 : GPRS+SMS+phone call, default: 1;

❖ Checking Part

COMMAND	DETAILS	REPLY
VERSION#	Check firmware version	[VERSION]VT08S****
PARAM#	Check parameters	GPS report on time interval: IMEI:35513908XXXXXX;TIMER:20,20; SENDS:5; SOS:13730454825,,; Center Number::Sensorset:10,1,5,1; Defense time:10; TimeZone:E,8,0; GPS report on distance interval: IMEI: 35513908XXXXXX;Distance:200; SENDS:5; SOS:13730454825,,; Center Number::Sensorset:10,1,5,1; Defense time:10; TimeZone:E,8,0;
GPRSSET#	Check GPRS setting	GPRS:ON; APN:CMNET,,; Server:1,vt.protrack365.com,8842,0; URL:http://maps.google.com/maps?q=;
STATUS#	Check GPRS/GPS status	Battery: 3.41V, Battery too low! Warning; GPRS: Link Up; GSM Signal Level: Strong; GPS: Successful positioning, SVS Used in fix:10(11), GPS Signal Level:32,31,32,31,28,29,29,36,32,33; ACC:OFF; Defense: OFF
WHERE#	Check location coordinates	Current position! Lat:N22.577156,Lon:E113.916748,Course:0.00,Speed:0.00Km/h,Date Time:2013-01-08 17:35:32

URL#	Check location Google link	<01-08 17:36> http://maps.google.com/maps?q=N22.577156,E113.916748
RESET#	Restart device	The terminal will restart after 1 minute!
FACTORY#	Factory reset	OK, The terminal will restart after 20 seconds!