



# PS4

Playstation 4



**XMOD** Modded Controller

**1.01**

**30 MODES**

**User's Manual**

## Using the wireless controller

Press the PS button on the controller, and then select a user.

- The first time you use a controller, you'll need to pair it with your PS4™ system.
- Up to four controllers can be used at the same time. When you press the PS button, the light bar will glow in a uniquely assigned color. The color that is assigned depends on the order in which each user presses the PS button. The first controller to connect is blue, the second is red, the third is green, and the fourth is pink.

## Pairing a device

The first time you use a controller or when you want to use the controller on another PS4™ system, you'll need to pair it with the system. Connect the controller to your system with a USB cable while the system is on.

When you want to use two or more controllers, you must pair each controller separately.

## Charging

The controller battery charges when you connect the controller to your PS4™ system with a USB cable. The system must be turned on or in rest mode. The charge level of the battery appears on-screen when you press and hold the PS button.

While the system is in rest mode, the light bar slowly blinks orange. When charging is complete, the light bar turns off.

It takes approximately 2 hours to charge the controller when the battery has no remaining charge.

Charge the controller when the temperature is between 10 °C and 30 °C (50 °F and 86 °F). You might not be able to efficiently charge the controller at other temperatures.

You'll need to completely charge the controller at least once a year to keep it functioning properly.

Battery life varies depending on how you use the controller and the environment in which the controller is used and stored.

To charge while the system is in rest mode, select an option other than [Off] in (Settings) > [Power Save Settings] > [Set Features Available in Rest Mode] > [Supply Power to USB Ports].

**STARTUP:** By default, the Rapid Fire mod is **turned OFF** at startup

 
Our **XMOD RAPID FIRE CONTROLLER** uses the RIGHT and LEFT TRIGGERS to fire your weapon. Simply choose the rapid fire setting you are most satisfied with and press the triggers to fire. It will dramatically increase your performance and accuracy during the game play.

With 5 fully adjustable speeds and many different sub-modes and special functions you can have more than 30 combinations making this controller complete enough for any game.

## Key Features

- **PS4 Dualshock 4 - SONY - Wireless Controller**
- **XMOD® RAPID FIRE MOD CHIP**
- **5 Rapid Fire Speeds - Fully adjustable**
- **Ultra-fast Rapid Fire ON/OFF**
- **Ultra-fast switch modes & functions**
- **Switch modes FORWARD & BACKWARD**
- **LED indicator**
- **Master Reset to Default Settings**
- **Drop Shot**
- **Drop Aim Shot**
- **Jump Shot**
- **Jump Aim Shot**
- **Akimbo-Mimic**
- **LT Cancellation**
- **Auto Quick Aim**

[www.xmodelectronics.com](http://www.xmodelectronics.com)

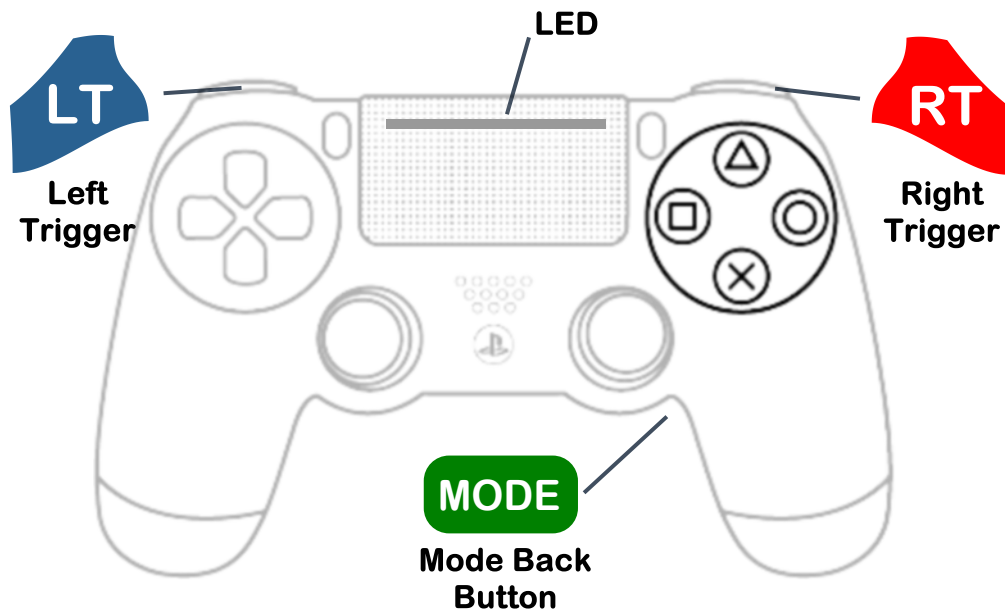

## TURN ALL MODES AND FUNCTIONS ON/OFF

This function will toggle **ALL modchip** Rapid Fire and Special Functions **on/off**.

*\*The modchip will be **OFF** at Startup (when the battery pack is inserted or the PS4 controller is turned on).*



## SWITCH RAPID FIRE ON/OFF

This function will just turn the Rapid Fire on/off, the Special Functions will remain active. Useful when primary and secondary weapons have different fire rates.

- Press and **Hold** the **MODE** button for **2 seconds**.
- LED - **1 Blink**: Rapid Fire **ON**
- LED - **2 Blinks**: Rapid Fire **OFF**

## RAPID FIRE

This controller comes by default with **5 pre-programmed speeds**.

**Every speed is adjustable.** This allows versatility across shooters and also with future games.

Each game, and sometimes each weapon within each game, require a different and specific speed setting to achieve the proper firing rate.

Although this chip is very fast, you are still limited by how fast the game allows a weapon to shoot. Shooting speed in some games are also limited in game by the weapon's rate of fire and animations.

You can **slow down full automatic weapons** to pinpoint precision or even **speed single shot weapons**.

In some Call of Duty games you must set the fire rate just below the allowed limit for some weapons, otherwise, **if your fire speed is too fast for the game, your weapon will be blocked**

## Changing Rapid Fire speeds:

This PS4 XMOD Controller has 5 different modes/speeds which are all Programmable. The default speeds for each mode are listed below.

 
To switch/cycle speeds:

- **Forward:** Hold the **X** button and tap the Mode button.
- **Backward:** Hold the **Circle** button and tap the mode button.

You will see the LEDs flash indicating the mode/speed you are current in.

*The controller will always remember the last mode you were using before powering down.*

*By Default, at startup all modchip Special functions and Rapid Fire will be **OFF**.*

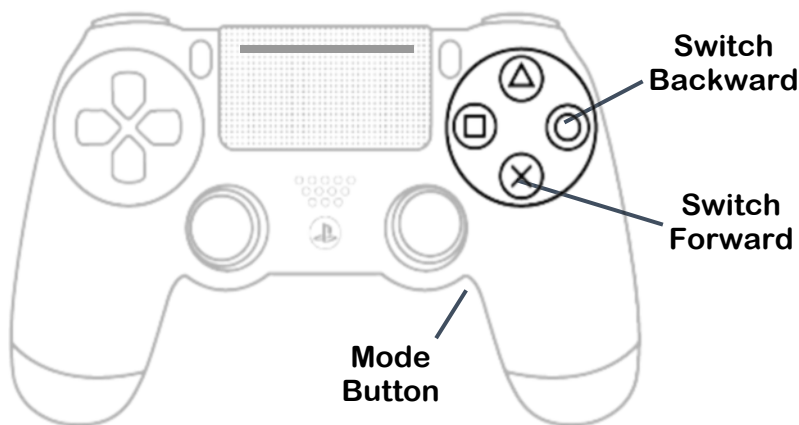

## MASTER RESET TO FACTORY DEFAULT

- Turn the **PS4 Controller OFF**.
- Press & **Hold the MODE** button.
- **While holding it**, turn the PS4 Controller **ON**.
- The LEDs will flash for 5 seconds.

FACTORY DEFAULT SPEEDS	
Speed 1:	8 sps.
Speed 2:	10 sps.
Speed 3:	15 sps.
Speed 4:	20 sps.
Speed 5:	30 sps.

All settings will be restored to default values.

## SPECIAL FUNCTIONS

This XMOD /PS4 modded controller has several special functions that can be quickly activated at any time, with or without Rapid Fire.

These functions will only work with **DEFAULT BUTTONS LAYOUT** settings and you can still use your PS4 buttons as normal.

- **DROP SHOT**

This automatic drop shot feature allows you to quickly lay down and fire with the click of the RIGHT TRIGGER (RT).

When you come face to face with an opponent just push the RT and it will **drop you all the way to the ground and shoot while** your opponent shoots over your head.

- **DROP AIM SHOT**

Same as the Drop Shot with aiming added, so just by pushing the RT, it will **drop you all the way to the ground, aim and shoot, all in one action.**

- **JUMP SHOT**

The automatic Jump Shot mode works similar to Drop Shot. Just push the Right Trigger (RT) to **jump at the same time while shooting.**

- **JUMP AIM SHOT**

Same as Jump Shot with aiming added (**jump and aim at the same time while shooting**).

- **LT CANCELLATION (Drop/Jump Shot/Akimbo)**

For the automatic Jump and Drop Shot modes, you don't always want to drop or jump, for example if you are behind a window. To prevent the drop or jump, these functions come with LT (Left Trigger) Cancellation, if you are already pressing LT (looking down the sight) when you fire you won't drop or jump.

- **QUICK AIM**

**Pressing RT will automatically initiate LT aim.** As long as RT is held, you will aim down the sights. It can be used with or without Rapid Fire.

- **AKIMBO - MIMIC**

Akimbo Mimic modes allow you to control dual-wielded guns with **only one fire trigger (RT)** instead of using two triggers. Trigger copy with or without rapid fire for all Call of Duty series.

 
When dual wielding or using akimbo, holding RT will rapid fire both pistols.

**In this mode you can aim with LT (Left Trigger Cancellation):** When LT is held, the controller shoots like normal (**with or without Rapid Fire**) and **automatically back to Akimbo** mode when LT is released. Perfect setup for using any fully automatic primary and dual pistols.

## OPERATING THE SPECIAL FUNCTIONS (SF)

To activate any Special Function (SF):

- Press & Hold the **LEFT Trigger (LT)** and **Tap the MODE** button.
- Release the 2 buttons.
- The LEDs will flash **waiting for your input**.

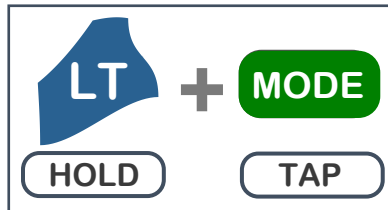

After entering in the “Special Function” (SF) mode you will have 4 options:

1. Tap the correspondent Button to **ENABLE** the desired function.
2. Tap the **same button to DISABLE** the current selected function.
3. Tap the **MODE** button to turn **ALL Special Functions OFF**.
4. Hold the **MODE button for 2 sec.** to **EXIT** without making any change.

### Example: How to enable Drop Shot

To Enable the Drop Shot:

- Enter in “SF” by holding the **Left Trigger** and then **Tap the MODE** button.
- Release the 2 buttons.
- The LED will stay flashing, **waiting for your input**.
- After entering in “SF”: Tap the “**Circle**” button to enable the Drop Shot.

To Disable the Drop Shot:

 
- Repeat the same actions to enter in “SF”.
- Tap the “**Circle**” button the **MODE** button to disable the Drop Shot.

You can also disable **all active** functions by tapping the **MODE** button after entering in “SF”.

If you have multiple functions active, let’s say you have Akimbo with Drop Shot and you want to disable just one of them, just tap the correspondent button after entering in “SF” to deactivate that function.

If you made a mistake or you changed your mind after entering in “SF” and you want to keep playing with the current function selected just hold the **MODE button for 2 seconds** to **EXIT/CANCEL** without making any change.

**AFTER** entering in "Special Modes": **TAP** the Function Button

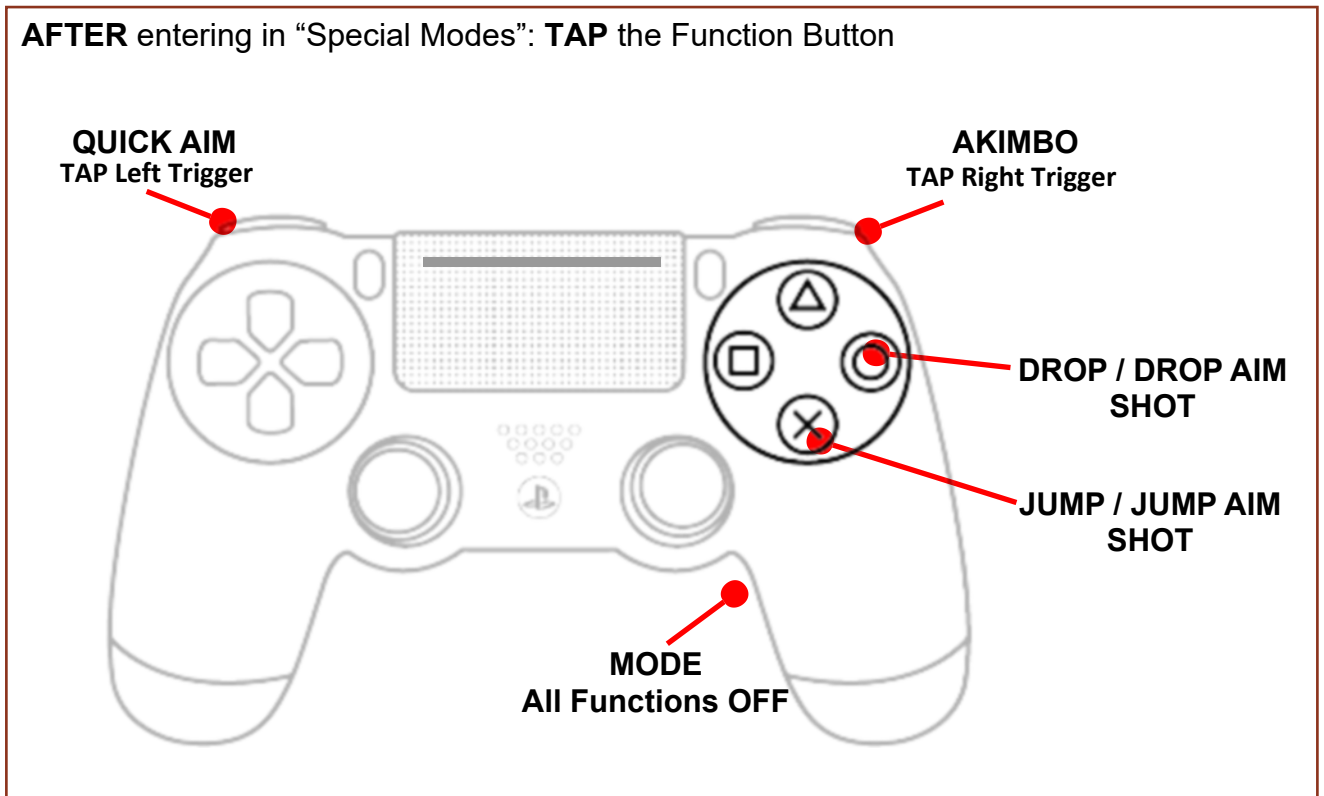

<b>SPECIAL FUNCTIONS</b>		
<b>DROP SHOT</b>	<b>Circle</b>	<b>Hold x 2 sec to toggle DROP AIM</b>
<b>JUMP SHOT</b>	<b>X</b>	<b>Hold x 2 sec to toggle JUMP AIM</b>
<b>QUICK AIM</b>	<b>LT</b>	
<b>AKIMBO-MIMIC</b>	<b>RT</b>	

*When Jump or Drop Shot are enabled, hold for 2 seconds the A or B button to toggle between regular Jump/Drop Shot and Jump Aim/Drop Aim Shot.*

<b>SPECIAL FUNCTIONS ON / OFF</b>		
<b>ALL FUNCTIONS OFF</b>	<b>MODE</b>	<b>Turn All functions OFF</b>
<b>CANCEL / EXIT</b>	<b>HOLD MODE x 2 sec</b>	<b>Cancel / No Change</b>



## PROGRAMMING RAPID FIRE SPEEDS

The controller can remember up to 5 different Rapid Fire speeds in "shots per second". It's important to know that **each video game may have a speed cap**.

This cap can be different for every game. If you try to set your Rapid Fire speed **above this cap**, your gun will actually **shoot slower, or not shoot at all**.

Always try starting out at a slower speed and increase your speed in **small intervals**. Start out at a low speed, then increase it until you feel that the gun is starting to "sputter" or slow down. **At that point, you are probably reaching the game's speed cap**.

Many different factors can affect the performance of your Rapid Fire controller, including your console, the quality of your Internet connection and whether or not you are the current host of the match.

### To modify any speeds:

- Set the XMOD Controller **on the speed you want to adjust (1-5)**.
- Turn **ALL modes/functions OFF (Hold X+Circle and Tap Mode button)**
- Hold the **LT+ RT + MODE button simultaneously for 2 seconds** to enter in "Speed Programming"
- Release the buttons.

### After enter in " Speed Programming":

- Tap **X button** to **INCREASE** speed.
- Tap **Circle button** to **DECREASE** speed.
- **TAP** the **MODE button** to set it **back to DEFAULT** speed.
- To **SAVE and EXIT**: Hold the **LEFT Trigger** and Tap the **MODE** button.

You can **TEST your speed** by pushing the **RIGHT Trigger (RT)** at any time.

The **LEDS** will flash when the **MAXIMUM** or **MINIMUM** speed are reached.

Repeat the **same actions** to adjust each speed.

Each speed must be **programmed individually**. They can be adjusted from 5 to 30 shots per second.

You can **RESET** to **DEFAULT** each speed individually or you can **RESET ALL SPEEDS** to **Factory Settings** just in one action.

## QUICK GUIDE

### XMOD MODCHIP- All Modes - Toggle ON/OFF:

Hold **X + Circle + MODE** simultaneously for 2 seconds.

### RAPID FIRE

**Toggle ON/OFF:** Hold **MODE** for 2 seconds (ON=1 Blink OFF=2 Blinks).

**Change Speed:** Hold **X + Tap MODE** (Forward) / Hold **Circle + Tap MODE** (Backward)

### SPECIAL FUNCTIONS:

To Enter in "Special Functions" Hold the **LEFT Trigger + TAP MODE**

After entering in "Special Functions", to **enable/disable** the desired function, **TAP:**

- **Jump Shot:** .....X button
- **Jump Aim Shot:**.....Hold X button for 2 sec.
- **Drop Shot:** .....Circle button
- **Drop Aim Shot:** .....Hold Circle button for 2 sec.
- **Quick Aim:** .....Left Trigger
- **Akimbo-Mimic:** .....Right Trigger
- **Exit/Cancel/No change:** .....Mode button

### SPEED PROGRAMMING

Set the speed you want to adjust (1-5).

Turn all modes **OFF** (Hold **X+ Circle + MODE** for 2 seconds)

With the Modchip turned **OFF:**

Hold **Left Trigger + Right Trigger + MODE for 2 seconds**

**Release all button** when the LED start to flashing.

**Tap X** button to **increase** speed

**Tap Circle** button to **decrease** speed.

**Tap MODE** button to set the current speed, **back to default** setting.

Hold **LEFT Trigger + Tap MODE** to **SAVE & EXIT**

### RESET - FACTORY DEFAULT SETTINGS

Turn XBOX ONE controller **OFF**.

**HOLD** the **MODE** button. **While holding it**, turn the XBOX controller back **ON**.



**XMOD** Modded Controller

[www.xmodelectronics.com](http://www.xmodelectronics.com)

**XMOD Modded Controller - PlayStation 4 PS4 - 30 MODES v1.01**