 


### Remove Your Existing Handle



1. Latch your RV door in the open position.
2. Remove the 4 screws from the back of your existing handle.
3. Remove 2 screws from the strike plate on door's edge & remove handle.

### Install Your RVLock Keyless Handle

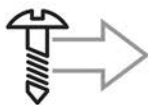


1. Carefully place all included installation parts on a flat, non-abrasive, easily accessible surface.
2. Gently slide the front of your new handle into the door opening while carefully pulling the wires ahead of the lock. Then, hold the lock in place and attach the new strike plate with the 2 machine screws.



3. Connect the battery wires. You will hear a confirmation beep when the connection is made. **NOTE:** "ON/OFF" switch does NOT need be in the "ON" position. (This switch only turns on the ability to use a fob/remote).

4. Align and attach the back handle while tucking excess wires into the void. Hold the paddle of the back handle closed while inserting the paddle tooth into the front handle housing.

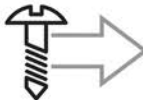

5. Use a #2 Phillips screwdriver to install the 4 longer machine screws. Only tighten the screws enough to keep the lock securely against the door.
6. Adjust and straighten the handle in the opening. Once straight, fully tighten the 4 longer screws (be careful not to over tighten).

**1234**  
DEFAULT CODE

7. Key in the numeric code and press the "LOCK" button on the keypad (default code is "1234"). Your handle should now be functioning correctly.

—If the handle does not function correctly, press the "CODE RESET" button for 10 seconds on the interior handle until you hear a long beep (Approx 5 secs). This will reset your keypad to the default code of "1234".

### **NOTE:**

Do NOT place your mechanical keys inside your trailer. Keep them somewhere outside of the trailer, like a magnetic Hide-a-Key, or a glove box, so they are available if you need them.

If the door is hard to shut or will not shut tight, simply adjust the strike plate on the jamb side of your door.





### Program Your Keypad

**PLEASE READ:** You will have 10 seconds to complete steps 1-5.

1. Hold down the "8" button, do not release.
2. While holding down the "8" button, press the "LOCK" button, then release both.
3. Type the default code "1234" (or your existing code) then press "LOCK."
4. Type in your NEW CODE, then press "LOCK"
5. Again, type in your NEW CODE & press "LOCK" - this will complete programming.
6. To ensure your new code is working, key in the new code and press the "LOCK" or "UNLOCK" button. The keypad should confirm the accepted code by actuating the deadbolt.

\* If you make a mistake, wait 10 seconds & start over.

\* If programming is unsuccessful, press and hold the "CODE RESET" button for 10 seconds returning the code to the default code of "1234" then repeat steps above.

\* **Quick Lock Feature™** - Hold the "LOCK" button down for 2 seconds to engage.

\* **Silent Feature™** - Hold number "1" button for 3-5 seconds until the lock beeps twice. Repeat to reactivate sound.



### Program Your Fob/Remote

1. Turn switch to "ON" at the back of your handle. Then, press and release the "FOB LEARN" button located next to the ON/OFF switch. A short, quick beep will confirm that the handle has entered programming mode.
2. Press & release a "LOCK" button on your remote until the handle confirms a sync with a long beep. (May take 2 - 3 clicks).
3. Finally, press the "LOCK/UNLOCK" button to confirm the successful actuation of your handle.

\*If programming did not work, or if you have additional remotes to program, simply repeat steps above.

**All Fobs have 2 lock/unlock functions.**  
**All Remotes have 4 lock/unlock functions.**

\*Holding down the "LEARN" button for 10 seconds (or until you hear a beep) will remove all previously synced remotes from the handles memory.

#### NOTE:

Up to 10 remote fobs can operate the same RVLock Keyless Handle. Remote fobs also have the ability to control multiple RVLock Keyless Handles.

My mechanical key number is:

# RVL \_\_\_\_\_  
— KEEPING THIS NUMBER IS ESSENTIAL —  
CONTACT RVLOCK FOR PRODUCT HELP



### Changing Handle Batteries

- \* Fast beeps before the lock actuates means the batteries are low. Remove 2 screws on the back battery cover near "ON/OFF" switch & install 4 AA batteries.
- \* Changing the batteries will not change the current code or remote programming.
- \* To save battery life and avoid handle damage, remove the batteries in the handle when not in travel season.