

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

INSTALLATION INSTRUCTIONS



FEATURES

The new BAKER Hydraulic Side Cover is yet another part that we added to the ever growing stable of H-D® Cruise Drive 6 Speed compatible parts. We were the first company 10 years ago to come out with a 6 speed transmission for the Harley Davidson aftermarket, so it only makes sense that we are the first company to turn to for parts now that The Factory sells 6 speeds right off of the production line. The Function Formed styling is unmistakably BAKER and follows in the same foot steps of our Hydraulic Actuators that we have perfected over the years. The vacuum wrapped side cover is machined from virgin 6061-T6 aircraft grade aluminum, then polished and chrome plated to a mirror finish. It is an easy install, looks great and using our low profile 1.500" diameter hydraulic piston the clutch operation will be smooth and effortless every time, for years to come.

FITMENT (for P/N DD7-106C-KIT)

- 2006-Later Dyna®
- 2007-Later Softail®
- 2007-Later Touring

The BAKER CD6 Hydraulic Side Cover is designed to work with 11/16" Bore Diameter Hydraulic Clutch Master Cylinders.

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

TABLE OF CONTENTS

- 2) Table Of Contents
- 3) Included Parts Breakdown
- 4) Tools, Resources, Required Parts
- 5) Disassembly, Start Installation
- 6) Installation Continued
- 7) Bleeding The Hydraulic Clutch System
- 8) Bleeding Steps Continued, Finish line
- 9) Terms
- 10) Disclaimer

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

INCLUDED PARTS DETAIL

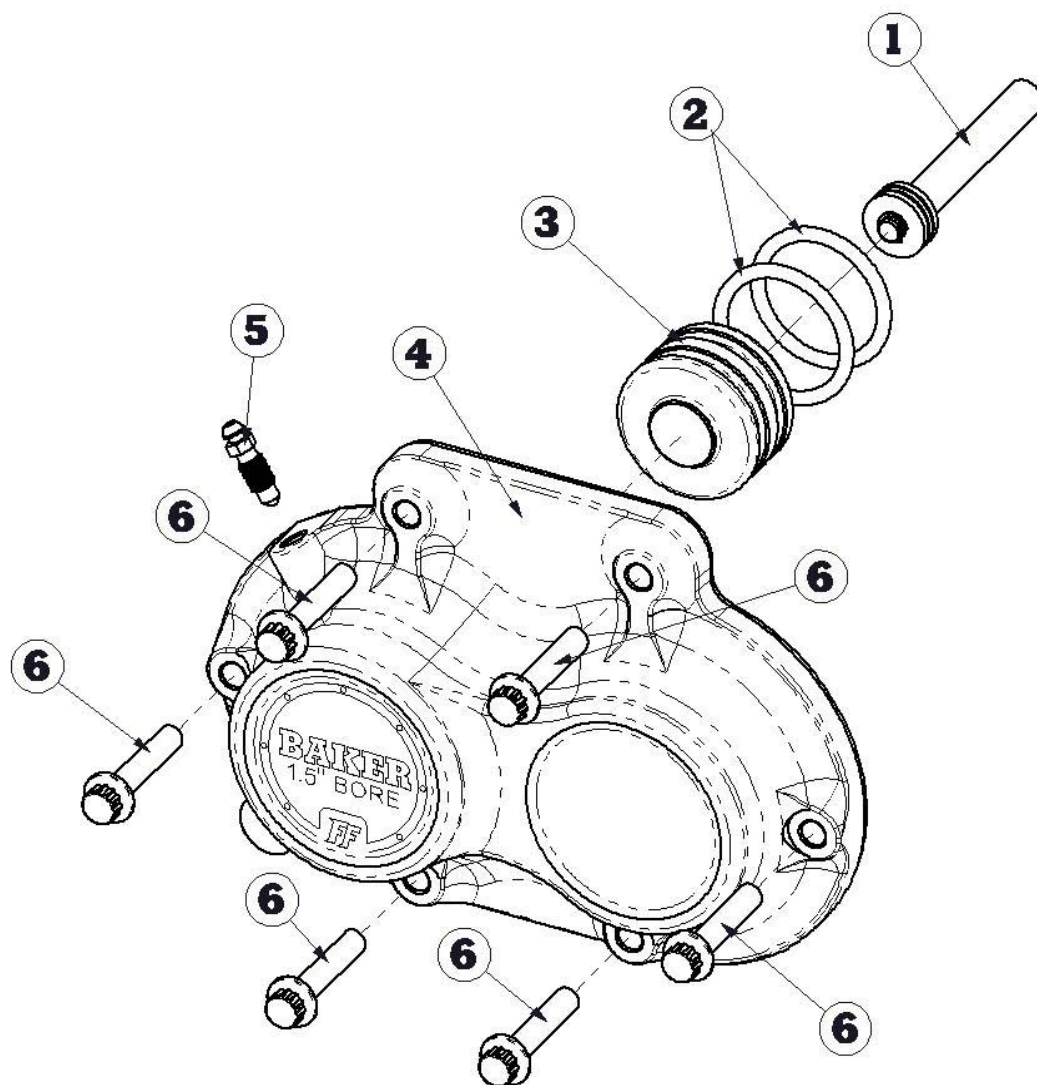


Figure 1

ITEM	QTY	P/N	DESCRIPTION
1	1	37089-84	Clutch Actuator Rod Assembly (2.625" Overall)
2	2	66855	Hydraulic Piston O-Ring
3	1	124-56L	Hydraulic Piston, 1.500" Diameter, LSD
4	1	DD7-106C	CD6 Hydraulic Side Cover, 1.500" Bore
5	1	94-4508	Bleeder Valve (1/4-28 Thread)
6	6	2AL1.250-12SL	Bolt, ARP™, 12pt, 1/4-20 x 1.250" Stainless

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

TOOLS, RESOURCES, REQUIRED PARTS

- Factory Service Manual For Your Motorcycle
- Factory Parts Manual For Your Motorcycle
- Common Hand Tools Are All That Is Needed For This Installation
- In-lbs Torque Wrench
- Brake Bleeder Pump
- Transmission Fluid 32 oz Needed, BAKER Recommends:
Spectro™ Heavy Duty Platinum 6 Speed Transmission Oil, P/N R.HDPG6
- Hydraulic Fluid, BAKER Recommends: H-D® Dot 5 Brake Fluid, P/N 99902-77
 - On 2008 and later models factory equipped with DOT4 brake fluid, use H-D® DOT4 brake fluid
- AN -3 Brake Line
- 10mm Banjo Fitting for both ends of brake line
- 3/8"-24 Banjo Bolt for the side cover end of the brake line
- Banjo Fitting Washers
- 11/16" Diameter Bore Hydraulic Clutch Lever Assembly

Quality aftermarket brake lines and fittings can be purchased from your local Drag Specialties™ or Custom Chrome™ Dealers. Or if you prefer shopping on the web, J&P Cycles™ is another source. All 3 choices have a full selection of parts to match the aesthetic style of your bike, personality or your budget.

Customers who have CVO™ Model Motorcycles that come with Factory installed Hydraulic Side Covers will need to purchase the following parts from a H-D® Dealer to be able to use the BAKER CD6 Hydraulic Side Cover. All of our RSD & LSD Hydraulic Actuators are designed to use mechanical ball and ramp components for the center rod that goes through the transmission mainshaft, as well as the release plate, adjuster screw, jam nut and retaining ring that are in the clutch basket. The BAKER Hydraulic Feed port is designed to work with aftermarket style banjo fittings and bolts and is not compatible with the CVO™ style straight entry, formed end hydraulic clutch line.

- | | |
|-----------------|----------------------------------------------|
| • P/N 37092-06 | Push Rod, Clutch Release (through mainshaft) |
| • P/N 37090-98A | Screw, Adjuster |
| • P/N 7848W | Jam Nut |
| • P/N 37903-90 | Release Plate |
| • P/N 37909-90 | Retaining Ring, Internal |

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

DISSASSEMBLY

- 1) With your bike securely supported on a bike lift or jack, drain the transmission fluid. Refer to your Factory Service Manual for the location of your drain plug.
- 2) Depending on the style of exhaust that you have on your motorcycle, the exhaust may need to be removed at this time as well to allow access to the transmission side cover. While referencing the Factory Service manual, remove the clutch cable, cable style clutch lever and set aside. Unbolt the side cover from the transmission. Remove the stock side cover, as well as the factory clutch actuator rod and set aside.
- 3) Remove the derby cover and back off the jam nut for the clutch adjustment. If you have a CVO™, remove the clutch rod and snap ring at this time, set those parts aside.
- 4) Take the time to wipe down the gasket surface of the bearing door and inspect to make sure it is free of residual oil, old gasket material and debris.

INSTALLATION

- 1) Install the supplied side cover gasket on the bearing door at this time. Place the provided clutch actuator rod assembly into the hole in the end of the mainshaft on the right side of the bike in preparation for side cover installation.
- 2) Remove the hydraulic piston from the side cover. The best way is to use the light touch of an air blow gun in the hydraulic feed port. It should be noted that you should have the side cover back side down on a couple of towels on the work bench when doing this as the piston will shoot out. When you have the piston out, give it a bath of H-D® DOT 5 Brake Fluid making sure to fully coat the o-rings in the brake fluid.
- 3) Double check that the inside of the hydraulic bore is free of debris and dirt. Also check the entire inside surface of the side cover to eliminate introducing dirt or packing material into your transmission. With the inside of the part checked and determined to be clean, coat the inside walls of the hydraulic bore with the same H-D® DOT 5 Brake Fluid used to lubricate the o-rings.



THESE EXTRA STEPS OF LUBRICATION MAKE A VERY DRAMATIC DIFFERENCE IN THE WEAR LIFE OF THE SEALING O-RINGS IN YOUR BAKER LSD HYDRAULIC SIDE COVER AND ARE NECESSARY FOR CORRECT PART FUNCTION.

(INSTALLATION CONTINUED ON NEXT PAGE)

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

INSTALLATION CONTINUED

- 4) Using a gentle touch, slide the piston back in the side cover until it bottoms out. Take care to not force the piston into place, in such a way that o-ring damage could occur on the edge or opening of the Hydraulic Bore.
- 5) With the piston lubricated and slid into the side cover, place the side cover on the bearing door using the 3/16" diameter dowels to locate it into proper position.
- 6) Using the provided ARP™ Fasteners, torque the side cover down to 130 in-lbs using 'Blue' Thread Lock while referring to the torque sequence diagram below. (Figure 2)

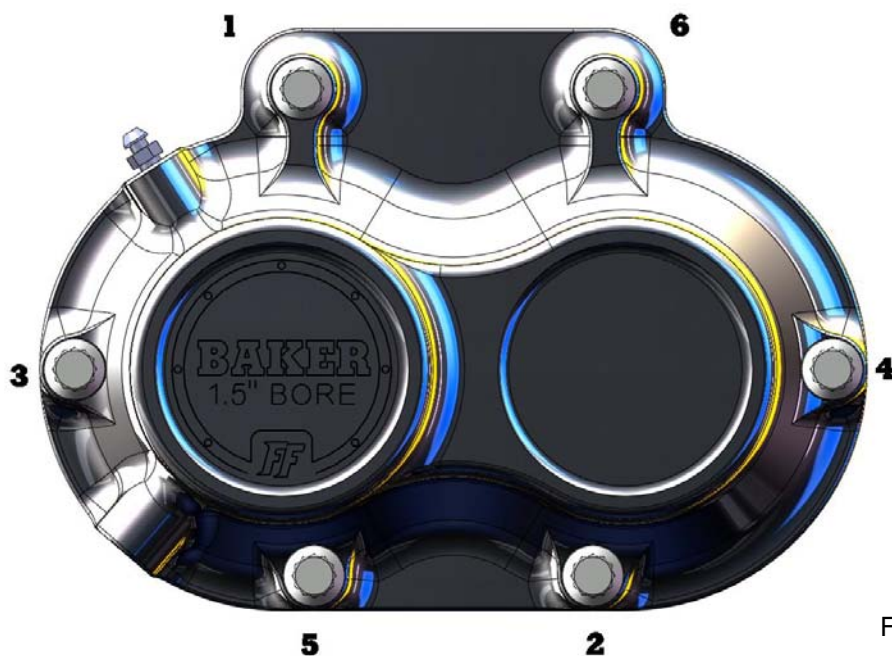


Figure 2

- 7) Bolt to the handlebars the 11/16" bore clutch lever assembly of your choice. When you have the line routed to your satisfaction, with no kinks, torque the 3/8-24 banjo bolts to 17-22 ft/lbs.



TAKE THE NECESSARY TIME AND PROPER PRECAUTIONS TO ROUTE THE HYDRAULIC LINE AWAY FROM MOVING PARTS AND ANY EXHAUST PIPES THAT COULD DAMAGE THE LINE IN ANY WAY. MAKE SURE THAT YOU ARE ABLE MOVE THE FRONT END THROUGH ITS FULL RANGE OF MOTION LEFT TO RIGHT WITHOUT BINDING, KINKING OR PINCHING THE HYDRAULIC LINE. FAILURE TO DO SO COULD RESULT IN PART FAILURE OR PERSONAL INJURY.

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

BLEEDING THE HYDRAULIC CLUTCH SYSTEM



BAKER DRIVETRAIN MAKES THE STRONG RECOMMENDATION THAT A POWER BLEEDER SYSTEM BE UTILIZED, WHETHER THAT IS A HAND OPERATED PUMP OR PNEUMATIC, TO BLEED THE HYDRAULIC CLUTCH SYSTEM ON YOUR MOTORCYCLE. IT IS THE MOST EFFECTIVE AND ONLY SUREFIRE WAY TO ENSURE THAT ALL OF THE AIR BUBBLES ARE PURGED FROM THE SYSTEM. IF YOU DO NOT OWN A POWER BLEEDER, THE FOLLOWING SET OF INSTRUCTIONS WILL ENABLE YOU TO BLEED YOUR CLUTCH SYSTEM. GREAT CARE AND ATTENTION NEEDS TO BE USED IN FOLLOWING THESE STEPS TO ENSURE A PROPERLY BLED AND FUNCTIONING SYSTEM TO ENSURE YOUR SAFETY AS A RIDER.

- 1) Before you can bleed the Hydraulic Clutch system you need to adjust the free play and rod length at the clutch. Using an allen wrench, run the adjuster bolt (center of the clutch) inboard until it can be felt to bottom the piston out in the side cover. You will also know that you have hit the bottom point as the clutch will begin the move. At the point where it is fully bottomed out, back the adjuster off $\frac{1}{2}$ to 1 full turn. The closer to the 1 full turn point that you adjust it too, the more reserve you will have in the lever before the motorcycle begins to move, with the full engagement of the clutch being proportionally closer to the end of the sweep of the lever. This amount can be adjusted to rider comfort and riding style. Tighten the jam nut to 120 in-lbs while holding the adjuster screw from rotating.
- 2) Place a clear tube over the bleeder valve on the side cover and run it into a clean container.
- 3) Stand the motorcycle upright so that the master cylinder on the clutch lever is level. Remove the master cylinder lid and gasket.
- 4) Add new DOT 5 Silicone Brake Fluid to the master cylinder reservoir under to the fluid level is at or below the full line. **DO NOT OVERFILL THE MASTER CYLINDER**
- 5) Squeeze the lever 5-10 times. Open the bleeder valve on the side cover and clutch fluid should flow through the tubing. If not, keep pumping the lever as it may take a few minutes for the fluid to make it all of the way through the line and cover. Once fluid begins to flow through the clear tube, close the bleeder valve. It may be necessary to add more fluid during this time even before any fluid begins to flow out of the clear tubing.

(BLEEDING STEPS CONTINUED ON NEXT PAGE)

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

BLEEDING STEPS CONTINUED

6) Squeeze the clutch lever multiple times to the handlebar to build up hydraulic pressure. While slowly squeezing the clutch lever in, open the bleeder valve on the side cover ½ turn. Close the bleeder valve before the clutch lever reaches the end of its travel. Repeat this step until no air bubbles flow out of the bleeder valve and there is a solid stream of brake fluid.

7) When the system has been fully bled and the clutch lever no longer feels mushy, fully tighten the bleeder valve on the side cover to 80 in-lbs. It may be necessary to fill the fluid in the reservoir to the full line at this time. **DO NOT OVERFILL THE MASTER CYLINDER.**

8) Place the cover back on the master cylinder and tighten down according to the control manufacturer's specifications.

9) Replace the derby cover on the primary, referring to the Factory Service Manual for the proper tightening sequence.

FINISH LINE

1) Fill the Transmission with 32 oz, per the Factory Service Manual, at this time. Re-install the exhaust and double check that all fasteners are tight on the motorcycle, any ancillary parts that you removed to perform this installation are back in their intended place on the motorcycle and that your hydraulic clutch fluid line is secured to the motorcycle frame.

2) Once the maiden voyage has been made around the block or down the road, take the time to double check all fasteners and hydraulic fittings for tightness. Make sure that you have no leaks around the side cover or on any part of the hydraulic clutch system. With the bike securely on the kickstand and the transmission fluid warmed up, double check the level of the transmission fluid. Drain off any excess fluid if the transmission is overly full.

TERMS & CONDITIONS

ORDERS

Orders can be pre-paid using VISA, MasterCard, American Express, and Discover or via wire transfer (\$30 wire transfer fee applies). All orders not pre-paid will be sent C.O.D. certified check or money order only unless pre-approved for company check acceptance. Any orders from outside the USA must be pre-paid in US funds via wire transfer (\$30 transfer fee applies). Prices shown are F.O.B. Haslett, MI. BAKER™ ships via UPS Ground or USPS Parcel Post for all orders. UPS air shipment or USPS Priority/ Express services are available upon request. Customer is responsible for all shipping charges unless otherwise arranged at the time of sale.

CUSTOMER SUPPORT

For any installation or service questions, please contact our BAKER technical department: 1-517-339-3835.

LIMITED WARRANTY

NOTE: Warranty card must be returned within 45 days of purchase for your warranty to be valid.

BAKER™ transmission assemblies and transmission builder 's kits, are guaranteed to the original purchaser to be free of manufacturing defects in materials and workmanship for a period of 5 years from the date of purchase or up to 50,000 miles, whichever occurs first. All other BAKER products are guaranteed to the original purchaser to be free of manufacturing defects in materials and workmanship for a period of 2 years from the date of purchase or up to 24,000 miles, whichever occurs first, except for the following; Warranty does not cover clutch plate wear, throw out bearing failures or mainshaft breakage due to improper clutch nut installation.

Electrical components carry a 30-day warranty; cosmetic finishes (chrome plating, hard anodizing, powder coating) are covered for 60 days. Certain promotional products may carry a shorter warranty as specified at the time of purchase. If the product is found by BAKER to be defective, such products will, at the option of BAKER, be replaced or repaired at cost to BAKER.

In the event warranty service is required, the original purchaser must call or write BAKER immediately with a description of the problem. If it is deemed necessary for BAKER to make an evaluation to determine whether the transmission assembly or transmission kit or accessory is defective, the entire transmission assembly, whether originally purchased as an assembly or kit, must be properly packaged and returned prepaid to BAKER with a copy of the original purchase invoice. If after evaluation by BAKER a defect in materials and/or workmanship is found, BAKER will, at their option, repair or replace the defective part of the assembly.

RETURNS AND EXCHANGES

Any merchandise returned for any reason (exchange, credit or modification) must be accompanied by a Return Goods Authorization (RGA) number or it will be refused. Call BAKER to obtain this number prior to returning goods for any reason. There is a 15% re-stocking fee for all returned items.

BAKER is not liable for any shipping.

ADDITIONAL WARRANTY PROVISIONS

NOTE: Limited warranty does not cover labor or other costs or expenses incidental to the repair and or replacement of BAKER products.

This warranty does not apply if one or more of the following situations is judged by BAKER to be relevant: BAKER OEM transmissions ; (these are subject to the OEM manufacturers warranty only), Improper installation , accident, modification (including but not limited to use of unauthorized parts, transmission oils or lubricants), racing, high performance application, mishandling, misapplication, neglect (including but not limited to improper maintenance), or improper repair.

BAKER shall not be liable for any consequential or incidental damages arising out of or in connection with a BAKER transmission assembly, transmission kit, component or part. Consequential damages shall include without limitation, loss of use, income or profit, or losses sustained as the result of injury (including death) to any person or loss of or damage to property.

BAKER transmissions, transmission kits and accessories are designed exclusively for use in American V-Twin motorcycles. BAKER shall have no warranty or liability obligation if BAKER parts are used in any other application.

If it is determined that a BAKER product has been disassembled during the warranty period for any reason, this limited warranty will no longer apply unless you were instructed to do so by a BAKER Drivetrain technician for diagnostic purposes.

BAKER CRUISE DRIVE 6 SPEED HYDRAULIC SIDE COVER

DISCLAIMER:

The words Harley, and H-D are registered trademarks and are for reference only. Use of H-D model designations and part numbers are for reference only. BAKER Drivetrain has no association with, and makes no claim against, these words, trademarks, or companies.

It is the sole responsibility of the user to determine the suitability of this product for his or her use, and the user shall assume all legal, personal injury risk and liability and all other as well as all other obligations, duties and risks associated therewith.

CUSTOMER SUPPORT

For any installation or service questions, please contact our BAKER technical department toll free: 1-517-339-3835.

BAKER DRIVETRAIN

9804 Old M-78

Haslett, MI 48840

On the web:

www.bakerdrivetrain.com

