 


INSTRUCTIONS FOR THE GUERRILLA ULTRALIGHT TRIPOD™ (300LK)

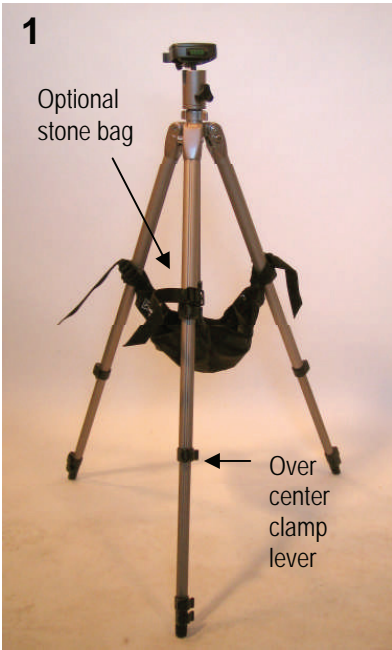

TRIPOD ADJUSTMENTS

The tripod has several adjustments which will allow you to use it under a wide range of field conditions:

1. Leg Length: The tripod has legs with 5 sections that can be independently adjusted with the over-center clamp levers on each leg.

Adjust the length of each leg to adapt to uneven terrain. Use the larger diameter leg extensions first, reserving the smallest for uses only when necessary—this will help provide maximum stability.

2. Leg Angle: Each leg can also be adjusted independently for three different angles. This adjustment is especially useful for very uneven terrain (steep hillsides). All three legs may be adjusted out to a wider stance to provide maximum stability by pushing the silver button to your right at the top of each leg.

3. Center Column: Vertical height can be adjusted by loosening the wing-screw at the base. With heavy devices, like the Guerrilla Painter® Box, extending the center column is not advised because this will tend to reduce stability. When using the Guerrilla Painter® Box with the tripod, we suggest that you keep the center column in its lowest position and keep the wing-screw securely tightened.

4. Head Angle : To rotate or tilt the tripod mount, loosen the black adjusting knob and move it to your desired angle. Tighten the adjusting knob to hold this position.



5. ATTACHING THE QUICK RELEASE PLATE TO THE GUERRILLA PAINTER® BOX

The tripod is supplied with a Quick Release Plate. Once installed, it is most useful to leave the plate attached to your box at all times.


To install the Quick Release Plate on your box, open the lever and remove the top plate(Fig.A).

Use the small silver fingerhold to screw the plate into the base of the box(Fig. B).

Tighten an additional 1/4 turn with a pair of pliers. Fold down the silver fingerhold until it is flush with the plate.

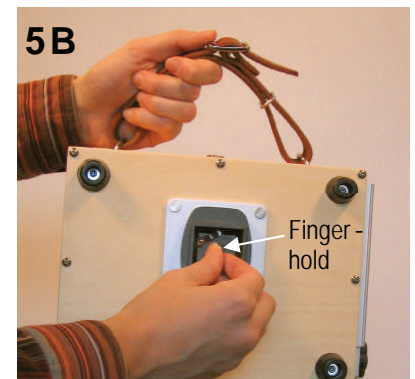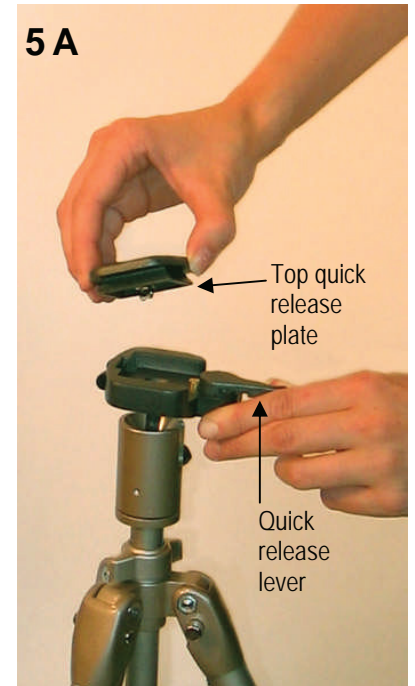

(continued on reverse)

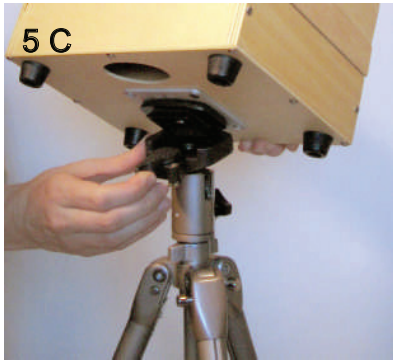

With the Quick Release Plate attached to the Guerrilla Painter® Box, first slip the plate into the tripod head on the side away from the quick release plate lever. Catch the lip of the plate on the head of the tripod, then push the box down on the head until the lever snaps closed (Fig.C). Make sure that the lever is pushed in securely.

6. Quick Release Plate Lever: The Quick Release Plate can be removed by pulling on the quick release plate lever. The quick release plate lever will automatically lock in the open position. When a device (such as a camera or the Guerrilla Painter® Box) with a Quick Release Plate attached is replaced and pressed down on the brass button, the lever will lock in place automatically.

7. Quick Release Lock: There is a small rotating brass locking-pin that serves as a quick release lock. When the locking pin is in its locked position, the Quick Release Plate cannot be removed. Rotate the small lever on the brass locking-pin 90° to unlock.

OPTIONAL STONE BAG

The optional Stone Bag is installed on the tripod and should never need to be removed. Place a rock in the bag to provide extra stability in breezy conditions or use it as an extra place to stash your odds and ends.

CUSTOMER SERVICE

Please call if you have any questions or problems 1-970-493-0217.

