

# INSTRUCTIONS FOR THE GUERRILLA FIELD TRIPOD KIT™ (305K)

## TRIPOD ADJUSTMENTS



The tripod has several adjustments which will allow you to use it under a wide range of field conditions:

**1. Leg Length:** The tripod has legs with 3 sections that can be independently adjusted with the over-center clamp levers on each leg. Adjust the length of each leg to adapt to uneven terrain. Use the larger diameter leg extensions first, reserving the smallest for uses only when necessary—this will help provide maximum stability.

**2. Leg Angle:** Each leg can also be adjusted independently for three different angles. This adjustment is especially useful for very uneven terrain (steep hillsides). All three legs may be adjusted out to a wider stance to provide maximum stability by pushing the silver button to your right at the top of each leg.

**3. Center Column:** Vertical height can be adjusted by loosening the wing-screw at the base. With heavy devices, like the Guerrilla Box™, extending the center column is not advised because this will tend to reduce stability. When using the Guerrilla Box™ with the tripod, we suggest that you keep the center column in its lowest position and keep the wing-screw securely tightened.


**4. Head Angle (Front-to-Back):** The long adjusting handle is used to tilt the tripod head back and forth. This is the head adjustment that you will use to adjust the angle of your Guerrilla Box™ either tilted toward you or away from you.

**5. Head Angle (Side-to-Side):** The small lever-knob located above the long adjusting handle can be loosened to make this adjustment. While this adjustment is useful for photography, we strongly advise that you do not use this adjustment with the Guerrilla Box™, but rather keep this adjustment in the full horizontal position and the adjusting lever-knob securely tightened. Because of the weight of the Guerrilla Box™ (heavier than most cameras), any side-to-side leveling should be done by adjusting the length of the tripod legs, and the bubble leveler can be used as a guide while doing this before attaching the Guerrilla Box™ to the tripod.

**6. Head Rotation:** The rotation of the head on the tripod can be achieved by loosening the wing-screw on the side of the head. This will allow you to rotate the tripod head without moving the tripod.



(continued on reverse)

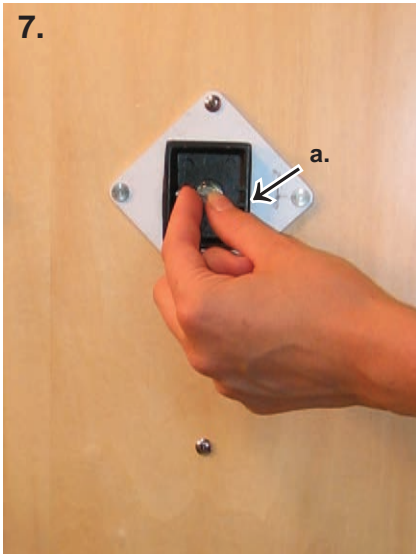

### 7: ATTACHING THE QUICK RELEASE PLATE TO THE GUERRILLA BOX

The tripod is supplied with two Quick Release Plates so that you can put one on your Guerrilla Box™ and one on your camera or camcorder. To install the Quick Release Plate on your box, open the lever and remove the top plate. Use the small silver fingerhold to screw the plate into the base of the box. Tighten an additional 1/4 turn with a pair of pliers. Please note the small pin (a.) in the head of the tripod that is designed to fit into the slot on the Quick Release Plate. Fold down the silver fingerhold until it is flush with the plate. With the Quick Release Plate attached to the Guerrilla Box, first slip the plate into the tripod head on the side away from the quick release plate lever, catching the lip on the head, then push the box down on the head until the lever snaps closed. Once installed, it is useful to leave the plate attached to your box at all times.



**8. Quick Release Plate Lever:** The Quick Release Plate can be removed by pulling on the quick release plate lever. The quick release plate lever will automatically lock in the open position. When a device (such as a camera or the Guerrilla Box™) with a Quick Release Plate attached is replaced and pressed down on the brass button, the lever will lock in place automatically. Make sure that the lever is pushed in securely.



**9. Quick Release Lock:** There is a small rotating brass locking-pin that serves as a quick release lock. When the locking pin is in its locked position, the Quick Release Plate can not be removed. Rotate the small lever on the brass locking-pin 90° to unlock.

### THE STONE BAG

The Stone Bag is installed on the tripod and should never need to be removed. Place a rock in the bag to provide extra stability in breezy conditions or use it as an extra place to stash your odds and ends.


### THE ALLEN WRENCH

The Allen Wrench that comes with the tripod can be used for making occasional field adjustments to the tripod or your other equipment. You will find this tool in the pocket of your shoulder bag.

### CUSTOMER SERVICE

Please call if you have any questions or problems—1-970-493-0217.

### LOCKED

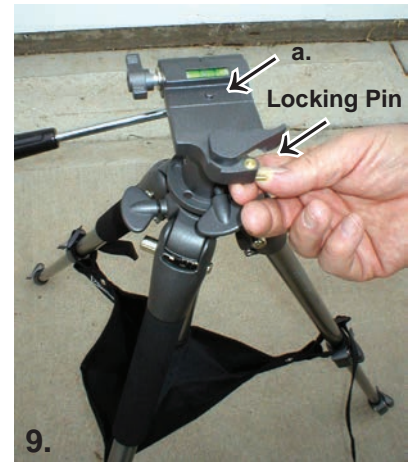

### UNLOCKED

