


Hints for your new Multi-Mount Plein Air Umbrella™



Due to the many small parts that allow it to collapse to such a small size, the Multi-Mount Plein Air Umbrella is not recommended for use in anything more than a mild breeze.

Opening the Umbrella

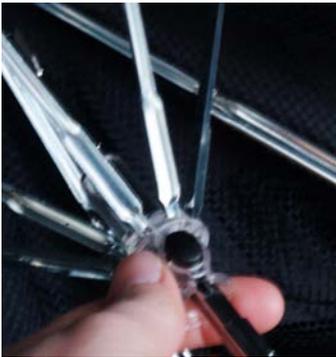

When opening the umbrella, push the clear plastic runner up taking care **not to push the release button** while opening. The top spring catch will catch **inside** the runner when you have reached full opening. - **DO NOT push the runner past the top spring catch.** If you have opened the umbrella correctly, closing the umbrella is as easy as pressing the release button on the runner and pushing on the top of the umbrella to collapse the shaft. The telescoping shaft bends easily - only hold the umbrella at the top and bottom. The first few times you open it, you may have to press the ribs out gently into place.



Incorrect - top spring is caught under the runner



adjustable clamp



base neck



goose neck

Attaching the Umbrella to your setup

The Multi-Mount Plein Air Umbrella can be attached to almost any chair, table, or easel system by using the adjustable clamp that is included. The adjustable clamp opens to 2" wide. The base neck will provide greater stability for the umbrella, while alternatively, the goose neck can be tweaked as the sunlight shifts. The base neck or goose neck attachment can be used in any of the 8 threaded holes on the clamp. This allows you to attach the clamp to your easel or tripod at any angle and still have the umbrella upright.



Connecting the Umbrella to the base and adjustable clamp

Once you have attached the adjustable clamp and the base or goose neck to your setup, you can easily connect the umbrella. You will notice there is a release button on the umbrella that will pop into the hole on both the base and goose neck to hold it in place.