

Item No	Everwin Part No	Part Name	Q'ty	Item No	Everwin Part No	Part Name	Q'ty
1	PN50-001	Hex.Soc.Hd.Bolt	2	51A	PN50-051	Lower Safety Lever Assy.	1
2	PN50-002	Deflector, Exhaust	1	52	PN50-052	E-Ring	1
3A	PN50-003	Cap Assembly	1	53	PN50-053	Gasket	1
4	PN50-004	Piston Stopper	1	54	PN50-054	Nose	1
5	PN50-005	Spring	1	55	PN50-055	Hex.Soc.Hd.Bolt	4
6	PN50-006	O-Ring	1	56	PN50-056	Flat Washer	4
7	PN50-007	O-Ring	1	57	PN50-057	Feed Pawl	1
8	PN50-008	O-Ring	1	58	PN50-058	Spring	1
9	PN50-009	Piston,Head Valve A	1	59	PN50-059	O-Ring	1
10	PN50-010	Piston,Head Valve B	1	60	PN50-060	O-Ring	1
11	PN50-011	Spacer, Piston,Head Valve	1	61	PN50-061	Feed Piston	1
12	PN50-012	Guide Cover	2	62	PN50-062	Roll Pin	1
13	PN50-013	Anti-Skid Grip	2	63	PN50-063	O-Ring	3
14	PN50-014	Casket, Cap	1	64	PN50-064	Gasket	1
15	PN50-015	Hex.Soc.Hd.Bolt	5	65	PN50-065	Feed Piston Cover	1
16	PN50-016	Seal	1	66	PN50-066	Hex.Soc.Hd.Bolt	2
17	PN50-017	O-Ring	17	67	PN50-067	Feed Piston Cover	1
18A	PN50-018	Driver Assembly	1	68	PN50-068	Nail Guide	1
19	PN50-019	O-Ring	1	69	PN50-069	Check Pawl A	1
20	PN50-020	Cylinder Spacer	1	70	PN50-070	Check Pawl B	1
21	PN50-021	O-Ring	1	71	PN50-071	Spring Pin	1
22	PN50-022	O-Ring	1	72	PN50-072	Spring	1
23	PN50-023	Cylinder	1	73	PN50-073	Spring	1
24	PN50-024	Bumper	1	74	PN50-074	Nail Guide Cover	1
25A	PN50-025	Body Assembly	1	75	PN50-075	Hex.Soc.Hd.Bolt	2
26	PN50-026	O-Ring	26	76	PN50-076	Spring	1
27	PN50-027	End Cap	1	77	PN50-077	Nail Guide Latch	1
28	PN50-028	O-Ring	28	78	PN50-078	Lock Shaft	1
29	PN50-029	O-Ring	1	79	PN50-079	Spring Pin	1
30	PN50-030	Valve	1	80	PN50-080	Shaft Pin Nail Guide	1
31	PN50-031	O-Ring	2	81	PN50-081	Nose, Cover	1
32	PN50-032	O-Ring	1	82	PN50-082	Hex.Soc.Hd.Bolt	2
33	PN50-033	O-Ring	1	83	PN50-083	Magazine	1
34	PN50-034	Valve Plunger	1	84	PN50-084	Nail Holder	1
35	PN50-035	Spring	1	85	PN50-085	Tension Post Bushing(Upper)	1
36	PN50-036	O-Ring	2	86	PN50-086	Spring	1
37	PN50-037	Plunger	1	87	PN50-087	Tension Post Bushing	1
38	PN50-038	Plunger Cap	1	88	PN50-088	Magazine Cover	1
39	PN50-039	Spring Pin	1	89	PN50-089	Shaft Pin Cover	1
40	PN50-040	Spring Pin	3	90	PN50-090	Flat Washer	1
41A	PN50-041	Trigger Assembly	1	91	PN50-091	Locknut	1
42	PN50-042	Pin Trigger	1	92	PN50-092	Driver Guide	1
43	PN50-043	Grommet	1	93	PN50-093	Spring Pin	1
44	PN50-044	Guide, Contact Trip A	1				
45A	PN50-045	Upper Safety Lever Assy.	1				
46	PN50-046	Adjusting Spring	1				
47	PN50-047	Adjusting Post	1				
48	PN50-048	O-Ring	1				
49	PN50-049	Safety Guide	1				
50	PN50-050	Guide, Contact Trip B	1				

