

USER MANUAL

A. HOW TO PAIR

1. Press **HOLD ON/OFF** button for 5-10 seconds continuously until **RED/BLUE** flashes.
2. Once light is flashing **RED/BLUE**, this indicates **EXO** is ready to pair and will appear in the Device List. or YouTube Search: "How to Pair EXO Wireless Adapter"
3. Once Paired, Insert **Exo** **FIRMLY** into Aux Port.

B. HOW TO TURN OFF/ON

1. To Turn **ON**, hold button for 3-5 seconds until **Blue** light appears.
2. To Turn **OFF**, hold button for 3-5 seconds until **Red** light appears.
3. If pairing is not completed within 2 minutes, **Exo** will turn off.

C. BATTERY TIP

1. **DO NOT** charge battery until it is completely dead.
2. Once Dead, Charge Fully or Until red light is gone (approx 2 hours).
The full achievement of the **Lithium Polymer Battery** is not reached until the battery is fully Charged 2-3 times. These Steps will maximize the life of the battery (Refer to Manual Note 5)

1. NOTICE BEFORE USING Thank you for purchasing **exo_studio / solo2®** wireless audio adapter. Please read User's Manual completely before you use the adapter. **exo_studio / solo2®** is designed for wired **Beats®** to get rid of wire *restriction*, for listening to high quality music wirelessly that is based on the latest **Bluetooth®** wireless technology. **exo_studio / solo2®** works as an accessory for the **Beats®** headphone, it can be easily connected to a mobile phone for call conversation and music listening, it is also capable to connect to other **Bluetooth®**-enabled devices like Notebook, iPod, etc. **exo_studio / solo2®** is compliant with **Bluetooth V4.1** specification, supports **HSP, HFP, A2DP** and **AVRCP** profiles. Please make sure your phone or other devices support these profiles.

2. SPECIFICATIONS

- 1) **Bluetooth** specification: **V4.1**
- 2) **Operation** frequency: **2.4GHz**
- 3) **Supported** profile: **HSP, HFP, A2DP, AVRCP**
- 4) **Operation** range: Up to 10 meters
- 5) **Talk** time: 7 hours
- 6) **Play** time: 7 hours
- 7) **Standby** time: 150 hours
- 8) **Charge** time: 2 Hours
- 9) **3.5 mm** stereo audio output

3. PACKAGE CONTENTS LIST Please inspect this package and refer to the package contents list below to verify all items were included in this package:

- **Exo_studio / solo2®** Wireless Audio Adapter (1)

- Extension for car AUX port (1)
- USB Charging Cable (1)
- User's Manual (1)

4. EXO studio / solo2® WIRELESS AUDIO ADAPTER OVERVIEW



- <1> Multi-functional button
- <2> 3.5 mm stereo audio output
- <3> Micro USB Charge Port
- <4> Extension for car AUX port

5. BATTERY INFORMATION The device is equipped with an integrated lithium-polymer battery. The battery cannot be replaced. Do not attempt to remove the battery from the device since it would damage the device. The full performance of a new battery is not achieved until after two or three complete charging-discharging cycles. The battery can be charged and discharged several hundred times, but it loses its capacity over time.

Disconnect exo from the power supply as soon as the battery is fully charged; Overcharging would reduce the service life of the battery. A charged battery will lose its capacity if it is not used on a regular basis.

Important: Ensure that the battery is fully charged if you do not use the device for a long period of time. To avoid a complete discharge of the battery, exo should be charged at least every 3 months.

6. CHARGING THE BATTERY The exo is operated with a rechargeable battery. Read the section "Battery information" before starting the charging process.

- Connect USB cable to a general USB power supplier.
 - Connect the charger to the correct outlet.
 - When the charger is connected to the exo, the red indicator light will turn on. Charging the battery fully may take up to 2 hours.
 - When the battery is fully charged, the red indicator light will turn off. Disconnect the charger from the exo and the outlet. exo is ready to use.
- The fully charged battery has power for up to 7 hours of talk-time, 7 hours music playing time, and up to 150 hours of standby time. However, the talk and standby times may vary when used with different mobile phones or other compatible Bluetooth® devices, usage settings, usage styles, and environments. For using exo with iPhone, an additional battery meter () will be activated and the remaining battery capacity will display on your phone.

-To conserve power, if the Exo is not connected to a device for approximately 5 minutes, Exo will turn off automatically.

7. WEARING EXO



<1> For Beats® headphone:



<2> For car :

8. BUTTON SETTINGS

- On/off: Long-press button for 3 seconds to power on; Long press for 3 seconds to power off.
- Pause: When media is playing, short-press means Pause or Play.
- Calls: Press Button shortly to answer the incoming call; Press and hold button for 2 seconds to reject the incoming call; At standby status, double press the button, the last number you dialed will be re-dialed. Press the button shortly to end a call.

1. LED indicator settings

- Press and hold the button for about 3 seconds, the indicator light will flash red and blue intermittently; The device is now in pairing mode.
- Blue light twinkles every 10 seconds when in working mode.
- When in charging mode, the red LED keeps bright. When charged fully, the red LED turns off.

2. Safety and general information

- Please read this User's Manual carefully and follow all instructions.
- To avoid any damage or malfunction of the device do not drop the device from high places.
- Keep device away from humidity, water and any other liquid. If the device is exposed to water, moisture, and other liquids, do not operate it to avoid any electrical shock, explosion, and damage to the device or yourself.
- Do not place or keep this device near any heat sources, such as direct sunlight, radiators, stoves, or other apparatus' that produce heat. This may cause an explosion, degrade the performance, and/or reduce battery life.
- Do not modify, repair, or disassemble device (Especially the battery). Doing this will void the warranty.
- Do not place heavy objects on the device.
- Use only the supplied and approved chargers.
- Unplug this device when unused for long periods of time or during lightening storms.
- The battery used in this device may present a risk of fire or chemical burn if mistreated.

9. FCC & IC STATMENT Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for ANY interference, for example RADIO or TV interference, caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

WARRANTY The condition of this warranty and supplier's responsibilities under this warranty are as follows: Warranty is non-transferable and is limited to the original purchaser only.

- You must be able to prove the date of original purchase of the unit with a dated receipt.
- The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification, or repair by an unauthorized third party.
- Supplier's responsibility shall be limited to the repair or replacement of the product at its sole discretion.
- Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decoratives, and other accessories.
- Supplier is not responsible for failure resulting from accident, abuse, misuse, or any unauthorized repair, or modification.
- Modification and repair of the unit should be done by an authorized and qualified service center or returned to the manufacturer.
- This warranty gives you specific legal rights, and you may also have other rights, which vary under local laws.