

OontZ

Angle 3 ULTRA Firmware Upgrade Instructions

Step 1: Click the 'Download Now' button and select 'Open' from the options provided by your browser.

Download Now

Step 2: The contents of the installation folder will be displayed. Double-click the file named 'setup' to launch the installation.

Chrome Users: if the download did not open automatically, then click "OontZ Angle 3 ULTRA 2.1.5.windows.zip" in the bottom left corner of the browser window.

MSI
Msien
setup

Step 3: A dialog box will appear asking you to allow the app to run. Click 'Yes'.


Step 4: The welcome dialog box for the OontZ Update Setup Wizard will appear.

- Click 'Next', then click "Next" on the two screens that follow
 - When the 'Installation Complete' dialog box appears, click 'Close'.
- The OontZ Angle 3 ULTRA Update will automatically launch.

Step 5: Plug the Micro USB Charging Cable that came with your speaker into your PC.

Step 6 - IMPORTANT : Make sure your OontZ Angle 3 ULTRA is turned OFF, with no lights on and no cables plugged in. We recommend you stand the speaker up for this following step.

- First, press and hold down the + button on your speaker.
- Second, continue holding the + button down and plug the Micro USB cable into the speaker, then release the + button

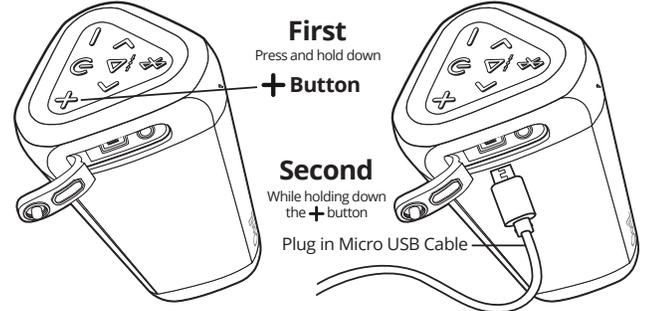

Step 7: The arrow button in the bottom right corner of the Update window will turn blue with a white arrow, indicating it is now active. Click the arrow button and the update process will begin.



- IMPORTANT : If the arrow button does not turn blue with a white arrow, please unplug the Micro USB cable from the speaker only and make sure the speaker is turned off and that you are using the 6 foot Micro USB cable that came with the speaker. Repeat step 6, being sure to hold down the button while plugging in the Micro USB cable.

Step 8: When the progress bar shows 'Successful' your update is complete.

Step 9: - Unplug the Micro USB cable from your speaker.

- If you have a second OontZ Angle 3 ULTRA, you will need to update it as well by following Step 6 on your second speaker.

Step 10: After you have updated your OontZ Angle 3 ULTRA to Version 2.1.5, your device will not reconnect to the speaker until you do the following:

- First, remove the OontZ Angle 3 ULTRA from the Bluetooth List on your Device. On an iPhone or Smartphone go to the Bluetooth list and press the small icon which is next to the OontZ Angle 3 U and then select "Forget" or "Unpair", this will remove the speaker from the Device List.
- Second, on your device pair and connect to the OontZ Angle 3 ULTRA and you are ready to play.

Note: If you have two OontZ Angle 3 ULTRA speakers, to play together with Wireless Dual Stereo you will need to pair them together again.