

noctic[⚡]
bright technology

FOCUS

MANUAL



BOX CONTENTS



Noctic Focus



Nylon Strap



Battery encapsulator
(for type 18860 battery)



AAA battery adapter



2400 mAh Lithium-ion
rechargeable battery
(type 18860)



Charger



MODES

Use the multifunctional switch for switching between different modes.



- **Power on / off:** Fully press the switch to turn the Noctic Focus® on / off.
- **Operating the different modes:** To switch between the 5 modes (Strong beam, Medium beam, Soft beam, Flash, SOS), gently press the multifunctional switch half way. Turning the flashlight on within 10 seconds after it has been turned off, will make the flashlight turn on in the next mode.
- **Strong beam reset:** When the Noctic Focus® is off for over 10 seconds, it automatically turns on the strong beam when turned on.

MODE	LUMENS*	OPERATION TIME(HOURS)*	DISTANCE (METERS)*
STRONG BEAM	500	3	200
MEDIUM BEAM	250	8	100
SOFT BEAM	125	20	50
FLASH	500	6	200
SOS	500	6	200

*Tested values when using the provided 2400 mAh Lithium-ion batteries

ZOOM

- **Zoom in:** Push the lens outwards. When fully zoomed in, the shape of the super LED can be seen on the projected surface.
- **Zoom out:** Pull the lens inwards.

ZOOM	
	PUSH LENS OUTWARDS TO ZOOM IN (NARROW BEAM)
	PULL LENS INWARDS TO ZOOM OUT (WIDE BEAM)

1 STRONG CLICK: ON/OFF - 1 SOFT CLICK: NEXT MODE

BATTERIES

INSERTING THE BATTERY

- Unscrew the end cap, then insert the batteries correctly inside the Noctic Focus® flashlight.
Chose:
 - 1x 18860 lithium ion battery:**
 - Insert the battery in the plastic battery encapsulator.
 - Insert the encapsulator in the flashlight, with the + pole pointed inwards.
 - OR
 - 3x AAA batteries:**
 - Place the AAA batteries inside the AAA adapter.
 - Insert the adapter in the flashlight, with the arrow pointing inwards.
- Screw the end cap tightly back on the flashlight.

IMPORTANT NOTES

- Fully charge the 18860 lithium ion battery before first usage.
- If using AAA batteries, do not combine new batteries with old ones.
- **Remove batteries during storage and transport, to extend battery life.**
- Dispose of the used batteries properly.

CONDITIONS OF USE

The Noctic Focus® has a IPX5 waterproofness rating: it can be used in any weather condition.

- Do not subject the flashlight to saline or high alkane fluids.
- Do not submerge the flashlight in water.
- Do not use the flashlight at temperatures above 60°C.
- At very cold temperatures, battery life will be diminished.

WARNINGS

- A responsible adult must supervise use by children under the age of 12.
- Do not stare directly into the beam or shine it directly into other's eyes. Intense light can damage your eyes, or the eyes of those around you.
- Always inspect the flashlight for proper operation prior to using and, for critical situations, carry a second light and sufficient spare batteries.

TROUBLESHOOTING

After pressing the multifunction switch, the flashlight does not work:

- Check if the batteries are entered correctly inside the flashlight or the AAA adapter.
- If using the AAA adapter, make sure the arrow on the adapter is facing inwards the flashlight.
- If using the 18860 Lithium Ion battery, make sure it has been placed inside the battery encapsulator, with the + pole facing inwards.
- If using a 18860 Lithium Ion battery, make sure it is charged.
- If charging does not work, try replacing the batteries.

CARE AND CLEANING

- Ensure that the flashlight is clean and dry before and after each use. Do not store a wet flashlight.
- If the flashlight fell into water, switch it off, take out the batteries, and air dry it thoroughly. If water penetrated the lens, carefully unscrew it, and air dry it.
- Wipe the flashlight with soft fabric after using it.
- In case of corrosion causing roughness on the flashlight's zoom movement, clear and air it. Use a small amount of silicon grease to smoothen the operation of the zoom.
- If the flashlight has been exposed to saline water, the salt has to be cleaned off the flashlight to prevent corrosion. Use small quantities of fresh water if necessary.
- Do not clean the flashlight in a washing machine, dishwasher, or with a high pressure hose.
- Do not scrub with abrasive substances or surfaces.
- If the battery contacts are corroded, remove the corrosion by sanding lightly with a fine-


WARRANTY INFORMATION

This product comes with a **30 days money back warranty**, and a limited **3 year warranty**.

The **30 days money back warranty** allows the buyer to return the product within 30 days of reception of the product, without any need for explanation. At Noctic® we are confident that our products will procure the greatest satisfaction; and if not, we will accept returns within 30 days with no questions asked.

The **3 year limited** warranty ensures that the product is free from defects in materials and manufacturing. Please visit www.noctic.com/help for instructions on how to return the product in the event there is a product defect. The warranty excludes normal wear and tear. The warranty is voided in the event of unauthorized alterations, improper use or care, or from accidents.

The warranty is limited to replacement of the product. Noctic® is not liable for direct, indirect, incidental or other types of damages arising out of, or resulting from the use of its product. This

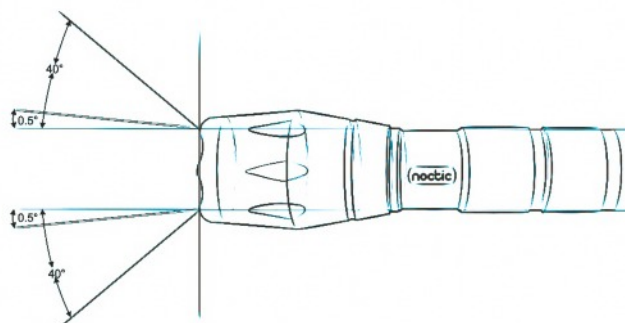

To view the manual online, please go to www.noctic.com/support.