

Customer Service: (803) 591-9500
(M-F 9:00 am - 5:00 pm Eastern Time)

- Do not use an appliance for other than intended use.
- Always unplug an appliance from an outlet when not in use, as heaters, reflectors, lamp bulbs, etc.
- To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
- Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
- Do not use an appliance for other than intended use.

- If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
- Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- Do not operate any appliance if it is malfunctioning or if it is dropped or damaged in any manner.
- To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop" should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the use or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in the receptacle.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
- Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
- Do not use an appliance for other than intended use.

 
IMPORTANT SAFEGUARDS

WARNING: To guard against injury, basic safety precautions should be observed, including the following.

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: To avoid possible electric shock, special care should be taken in the use of aquarium equipment. For each of the following situations, do not attempt repairs yourself. Return the appliance to an authorized service facility for service or discard the appliance.

- If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
- Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
- Do not operate any appliance if it is malfunctioning or if it is dropped or damaged in any manner.
- To avoid the possibility of the appliance plug or receptacle getting wet, position aquarium stand and tank to one side of wall mounted receptacle to prevent water from dripping onto the receptacle or plug. A "drip loop" should be arranged by the user for each cord connecting an aquarium appliance to a receptacle. The "drip loop" is that part of the cord below the level of the receptacle or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the receptacle. If the plug or receptacle does get wet, DON'T unplug the cord. Disconnect the use or circuit breaker that supplies power to the appliance. Then unplug and examine for presence of water in the receptacle.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
- Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
- Do not use an appliance for other than intended use.

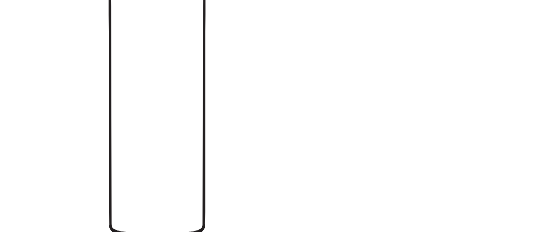


- Modern, super flat design
- Easy to set "one touch" system
- Accurate electronic thermostat $\pm 0.5^{\circ}\text{F}$
- LED displays both Set Temp and Tank Temp simultaneously
- Set temperature range up to 96°F
- Thermal protection circuitry
- Shatterproof outer casing

www.cobaltaquatics.com

WARNING:
NEVER operate Neo-Therm Heater outside of the filled aquarium.
ALWAYS unplug appliance when inspecting for any reason.

Customer Service: (803) 591-9500

| ITEM DESCRIPTION | ITEM NO. |
|---------------------------|----------|
| Suction Cups, 4 pack | P0512 |
| Bracket w/ 4 Suction Cups | P0515 |

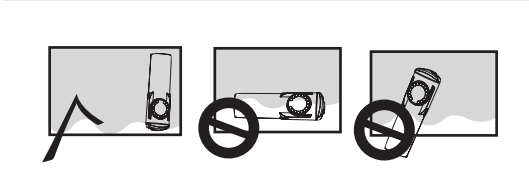 

- Never** disassemble, tamper with, or try to repair your heater.
- Never** touch the component housing when heater is in operation.
- Always** keep cords dry and outside of the aquarium. **Always** maintain the indicated minimum water level. **Always** disconnect the heater before performing water changes.
- Always** allow your Neo-Therm to cool for at least 15 minutes after unplugging and before removal from water.
- Never** operate heater with bottom of heater exposed to air.

 
ADDITIONAL SAFETY CONSIDERATIONS

SAVE THESE INSTRUCTIONS

- The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
 - Make sure an appliance mounted on a tank is securely installed before operating it.
 - Read and observe all the important notices on the appliance.
 - If an extension cord is necessary, cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
 - This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

MESURES DE SÉCURITÉ SUPPLÉMENTAIRES

- Ne jamais** démonter, altérer ni tenter de réparer la chaufferette.
- Ne jamais** toucher au boîtier des composantes pendant le fonctionnement de la chaufferette.
- Toujours** garder les cordons secs et à l'extérieur de l'aquarium.
- Toujours** maintenir le niveau d'eau minimal indiqué.
- Toujours** débrancher la chaufferette avant d'effectuer des changements d'eau.
- Toujours** laisser la chaufferette Neo Therm refroidir pendant au moins 15 minutes après l'avoir débranchée avant d'enlever de l'eau.
- Ne jamais** faire fonctionner chauffe avec le bas de chauffe exposé à l'air.

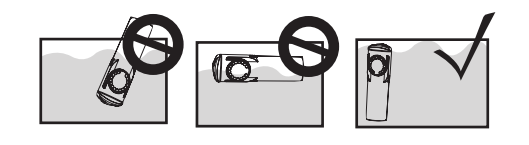

GARANTIE LIMITÉE DE 3 ANS

Dans les trois ans à compter de la date d'achat originale. Elle ne peut pas être cédée ni transférée à tout acheteur ou utilisateur subséquent. À tout moment à compter de la date d'achat originale, **Cobalt Aquatics** réparera ou remplacera, à son choix, toute chaufferette d'aquarium **Neo-Therm** qui présente un défaut de fabrication ou de matières premières. **Veillez appeler au (803) 591-9500 pour obtenir l'autorisation de retourner le produit ainsi que l'adresse d'expédition.**

REMARQUE : S'assurer de bien envelopper la chaufferette pour la protéger pendant le transport. Le client est responsable des frais d'expédition après la réparation. Si le problème n'est pas couvert en vertu des modalités et conditions de la présente garantie, le client en sera informé et recevra une estimation des frais de réparation (tous les frais d'expédition étant facturés au client). Si le client refuse l'estimation, le produit sera retourné fret payable à l'arrivée. Les dommages, bris de verre ou blessures qui résultent d'une négligence ou d'une utilisation abusive ne sont pas couverts par cette garantie. La perte de poissons, les blessures et les pertes et dommages matériels qui découlent de l'utilisation de cette chaufferette ne sont pas couverts par cette garantie. Les dommages accessoires ou indirects sont expressément exclus*. Cette garantie vous confère des droits spécifiques. Vous pouvez également jouir d'autres droits qui varient selon votre lieu de résidence.

*Étant donné que certains États ne permettent pas l'exclusion des dommages accessoires ou indirects, cette exclusion peut ne pas s'appliquer dans votre cas.

Within three years from the date of original purchase, Cobalt Aquatics will repair or replace, at its option, any Neo-Therm heater which is deemed defective in workmanship or materials. Please return the unit, together with proof of date of purchase. Call 803-591-9500 for return authorization and shipping address. Damage or injuries resulting from negligence or misuse are not covered by this warranty. Incidental or consequential damages are specifically excluded. This warranty gives you specific legal rights. You may also have other rights which vary from state to state. *Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.

LIMITED 3-YEAR WARRANTY

 
- Attach the suction cups (included) to the Mounting Bracket. Slide bracket over heater to position indicated.
- Place heater in aquarium by firmly pressing suction ends against wall surface. Choose an algae-free location with adequate circulation. This ensures even heat distribution and optimum operation. No part of the heater housing should contact aquarium gravel, rocks or decorations.
- Wait at least 15 minutes before plugging in your heater. When first plugged in, the LED's will cycle and then stop and display set temp with a solid LED and the tank temp with a blinking LED. A slow blinking LED indicates Tank temp is below the Set Temp. A fast blinking LED show tank temp is above set temp. Single solid LED shows tank and set temp are at the same point.
- NOTE:** Before plugging in heater, create a "drip loop" to prevent water from reaching receptacle. Select the desired temperature. Press button on top of heater. Each push will increase tank temp 2°F. When adjusting temp only 1 LED will be lit and will move from temp to temp with each push. When desired temp is reached, wait a few seconds and LED's will circle and stop on new set temp and display tank temp again as in step #3. If you would like to lower the temp, push button until temp reaches maximum, with the next push the temp will cycle to lowest temp again, keep pushing until you reach desired temp.

DIRECTIONS

IMPORTANT: Do not plug in heater until instructed.

MEDIDAS DE SEGURIDAD ADICIONALES

- Nunca** desarme, manipule ni intente reparar su calentador.
- Nunca** toque el soporte del dispositivo cuando el calentador esté funcionando.
- Siempre** mantenga los cables secos y fuera de la pecera.
- Siempre** mantenga el nivel mínimo de agua indicado.
- Siempre** desconecte el calentador antes de realizar cambios de agua.
- Siempre** deje que su calentador Neo Therm se enfríe al menos durante 15 minutos después de desconectarlo y antes de quitarlo del agua.
- Nunca** opere el calentador con el fondo del calentador se expone al aire.

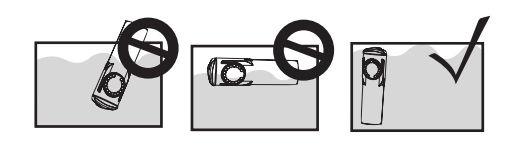

GARANTÍA LIMITADA DE 3 AÑOS

Dentro de tres años a partir de la fecha de compra original. La garantía no puede ser asignada ni transferida a ningún otro comprador o usuario posterior. En cualquier momento a partir de la fecha de compra, **Cobalt Aquatics** reparará o reemplazará, a su discreción, los calentadores de pecera **Neo-Therm** con defectos en la fabricación o los materiales. **Llamar al (803) 591-9500 para obtener una autorización de devolución y una dirección para el envío.**

NOTA: Asegúrese de envolver el calentador con cuidado para protegerlo durante el envío. El consumidor pagará el costo del envío luego de la reparación. Si el problema no está cubierto por los términos y condiciones de esta garantía, se avisará al consumidor y se le dará un presupuesto de los costos de reparación (con todos los costos de envío a cargo del consumidor). Si el presupuesto no es aceptado, el producto será devuelto con los costos de transporte por cobrar. Los daños, la rotura de vidrios y las lesiones que sean consecuencia de la negligencia o uso incorrecto no están cubiertos por esta garantía. La pérdida de peces, las lesiones personales, la pérdida de bienes o los daños que resulten del uso de este calentador no están cubiertos por esta garantía. Están específicamente excluidos los daños incidentales o a consecuencia de*. Esta garantía le otorga derechos legales específicos. Usted también puede tener otros derechos que varían de un estado a otro.

*Debido a que algunos estados no permiten la exclusión de los daños incidentales o consecuenciales, es posible que esta exclusión no se aplique en su caso.