

HEY YOU!

BE THE REASON SOMEONE SMILES TODAY

Furore Watches is a collection of beautiful luxury watches that owes her name to one of the most beautiful villages of Campania, Italy.

SMILE & ENJOY

The brand Furore Watches stands for enjoyment in the broadest sense of the word.

Femininity, elegance and simplicity combined with playfulness and style.

We have created a line of luxury designer watches because it is our passion to give your everyday outfit the extra touch!



CONTACT

For specific questions, you can contact us by e-mail or telephone.

We respond to every e-mail within 24 hours from Mon - Fri, 9:00 am to 5:00 pm.

+31 (0) 341 - 363 269 | hello@furorewatches.com By the way, we offer worldwide shipping.

WARRANTY

Furore Watches offers a 24 months warranty on your watch.

This includes technical errors such as incorrectly closing clasp, dial, hands and movement will be compensated. Keep in mind that there is no warranty on your strap,

the glass, the battery and the crown.

RETURNS AND EXCHANGES

Congratulations with your new watch!

You have 30 days to have a good look at your watch at home.

You picked the wrong one?


No worries, just send it back!

JUST A FEW RULES

The watch must be unworn and undamaged.

Return the watch in the same packaging, including labels and/or stickers.

Return the watch within 30 days. The return costs and risks are on you.

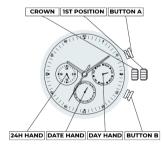

SETTING THE TIME

- 7 Pull the crown out to the 1st click position when the second hand is at the 12 o'clock position.
- 2 Turn the crown to set the hour and minute hands.
 Take a.m./p.m. into consideration when setting
 - the hour and minute hands to the desired time.

 The 24 hour hand moves correspondingly with the hour hand.
 - When setting the hour hand, check that the 24 hour hand is correctly set.
 - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- 3 Push the crown back to the normal position,

SETTING THE DATE AND DAY OF THE WEEK

- 1 Day Correction: with each pressing of the button A, the day hand advances to the next day of the week.
- 2 Date Correction: with each pressing of the button B, the date hand advances I day.
- 3 Do not set the date and the day hands between 9:00 p.m. and 4:00 a.m., otherwise they may not change properly.

FOR MORE INFORMATION ABOUT RETURNING, REPAIRS AND ADJUSTING YOUR WATCH, SCAN THE QR CODE.

