
## **METALLICA SPARKY INSTALLATION**

1. Take out the pinballs and lift the playfield all the way up. Remove the 4 screws that hold the Sparky from the bottom of the playfield

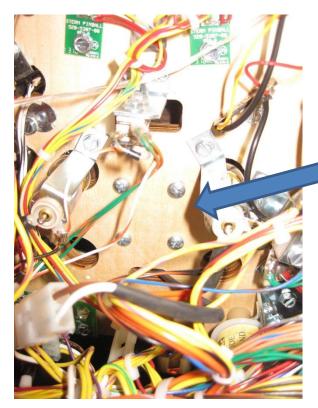



2. Rest the playfield in the extended service position



Remove the clear plastic around Sparky's feet.
 There is a 5/16" nut holding the plastic on the pop bumper side.
 There is a 1/4" Hex spacer holding the plastic on the drop target side of Sparky.
 I also removed the clear plastic above the hex spacer. 4 screws hold that plastic on.





- 4. Remove the back panel behind Sparky.

  There are four screws holding on the panel. 2 on the back of each side. Use your 1/4" nut driver to remove the panel. Lay the panel on the floor of the cabinet.
- 5. Remove the 2 screws holding Sparky to the back of the chair and he is now free except for the spring in his back that should come off the coil bracket easy when you lift him out.

