

Metallica James Hetfield Interactive Guitar INSTALLATION



DANGER ELECTRICAL SHOCK





Pinball machines have high voltages which can cause DANGER TO LIFE AND LIMB. TURN POWER OFF and UNPLUG PINBALL MACHINE prior to installation. Pinball machines are high voltage and can cause electrical shock.

1. Remove glass and pull the playfield into resting position
2. Carefully feed the wiring harness through the hole next to the drop target



3. Detach the bracket in the back of the guitar and wrap it around the ramp wire, attach the guitar back onto the bracket. The small magnet at the tip is used for extra support and rests on the wire ramp.
4. Make sure the guitar is tightly secured, remove pinballs, and lift the playfield all the way up
5. Locate the flasher under the "M" of the left ramp and attach the alligator clips, secure any loose wires with enclosed zipties

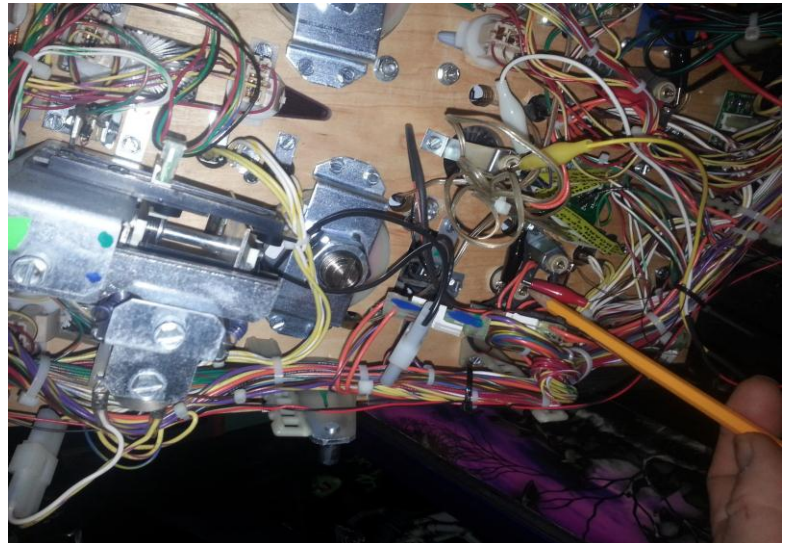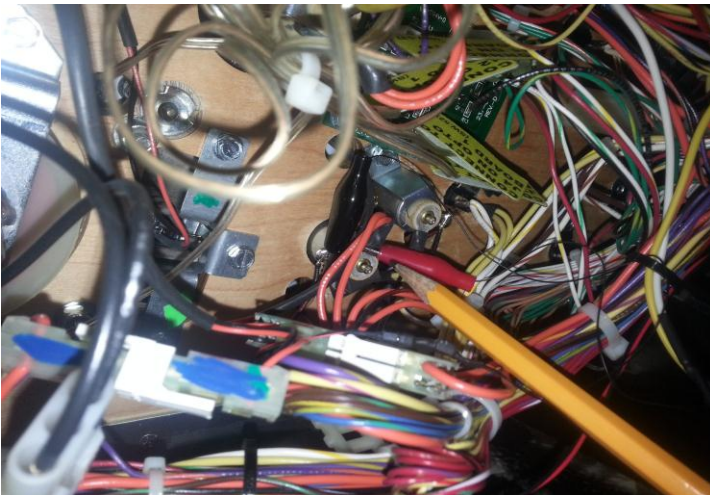

6. Make sure to check for clearances prior to starting the game play.