CUSTOM BOW EQUIPMENT

TACTIC MICRO INSTRUCTIONS

TACTIC SERIES SIGHTS - FROM THE NAME YOU TRUST IN ARCHERY ACCESSORIES -DELIVERS FEATURES EVEN THE MOST DEMANDING BOWHUNTERS NEED IN A COMPACT, LIGHT-WEIGHT, AND VERSATILE PACKAGE.

MOUNTING YOUR SIGHT

Your Tactic Micro has an adjustable elevation mounting system which is offered with CBE's exclusive Smart Mount[™] system. With the Smart Mount[™] system, you have three sets of hole options (1:A) to mount your sight at the optimal elevation position. Mount your sight to the bow with the two 10-24 X 5/8" screws provided. There are 2 #10-24 holes located on the riser bracket (1:B) for quiver mounting if necessary.



ELEVATION ADJUSTMENTS

To gang adjust elevation, loosen the elevation lock knob (1:C) and turn the elevation micro knob (1:E) until the housing is in the desired position. Tighten the elevation lock knob when complete.

WINDAGE ADJUSTMENTS

To gang adjust windage, loosen the windage lock knob (1:D) and turn the windage micro knob (1:F) until the housing is in the desired position. Tighten the windage lock knob when complete.

The Smart Mount[™] riser bracket's offset design on the Tactic Micro allows the riser bracket to be flipped to achieve additional windage adjustment. To do this, remove the elevation lock knob (1:C) from the sight. Next, loosen the set screw (1:G) in the elevation micro knob and remove the knob from the lead screw (3:A), <u>being careful not to lose the click ball or</u> <u>spring under the micro knob</u> (refer to figure 2:A). **Note:** It is easiest to hold the elevation micro knob, and remove the lead screw with a hex wrench (rather than turning the micro knob). Remove the lead screw, taking care not to lose the plastic washers on each end. Remove the Smart Mount[™] riser bracket and flip it over (3:B). Reinstall the bracket using the same procedure in the reverse order.

To adjust the micro knob tension, loosen the set screw on the micro knob and adjust the lead screw with a hex wrench to the desired tension and retighten the set screw. This will result in the micro knob being easier or harder to turn.



WINDAGE ADJUSTMENTS CONTINUED

If more windage adjustment toward the riser is desired, the windage mount block (shown in 4:A-B) must be flipped. To do this, remove the elevation lock knob (1:C) from the sight. Next, loosen the set screw (1:G) in the elevation micro knob and remove the knob from the lead screw (3:A), being careful not to lose the click ball or spring under the micro knob (refer to figure 2:A). NOTE: It is easiest to hold the elevation micro knob and remove the lead screw with a hex wrench (rather than turning the micro knob). Remove the lead screw, taking care not to lose the plastic washers on each end. Remove the windage assembly and scope housing from the riser bracket (4:A).

Next, remove the windage lock knob (1:D). Using the same procedure as above, remove the windage micro knob and windage lead screw (2:B) making sure not to lose the windage click ball and spring. Flip the windage nut and clamp block so that they are on the opposite side of the windage frame. Reinstall the windage lead screw using the same process that was used to remove it in the reverse order. (4:B). Reinstall the windage mount block to the riser mount bracket, ensuring that the riser bracket is in the same orientation as it was previously. Reinstall the elevation micro knob and lead screw as described previously.



2ND AXIS LEVELING ADJUSTMENT

To adjust the 2nd axis on the Tactic Micro, loosen the 2 hex screws connecting the windage body to the pin plate (5:A). Level the 2nd axis by rotating the housing until level and retighten the screws (6:A-B).





SIGHT PIN ADJUSTMENT

Pins can be moved individually by loosening the hex screw and moving the pin to the desired location. Retighten the screw when complete (7:A).

CONVERTING SIGHT FOR LEFT HANDED ARCHERS

To convert the Tactic Micro to left handed, simply remove the 4 screws that connect the sight housing to the pin plate. Flip the housing and reinstall the screws (7:B).



THANK YOU FOR CHOOSING **CUSTOM BOW EQUIPMENT!**

THE OUTDOOR GROUP, LLC 1325 John Street, West Henrietta, NY 14586 (877) 503-5483

www.custombowequipment.com



LIABILITY DISCLAIMER

The Outdoor Group, LLC is not liable for any personal injury, death, or property damage that may result from your use of this product. The user of this product assumes all risks of property damage or injury to yourself and others that may arise from its use. Use of this product binds the user to this agreement.

WARRANTY SERVICES: GUARANTEE

TOUGH AS

IMPORTANT: In the unlikely event that you require service on your product, please contact Customer Service at 1 (877) 503-5483. If necessary, our Customer Service Agents will provide you with a Return Merchandise Authorization (RMA) number and instructions on how to ship the product(s) back. It's important that you contact a Customer Service Agent before returning any item. Please be sure to include your RMA number when returning an item, so that we can identify the return as yours. Without the RMA, we will not be able to process your return, and your item will not be returned to you.

PATENT INFORMATION

This product is covered by one or more patents. A complete list of Custom Bow Equipment patents can be found by visiting custombowequipment.com/pages/patents