


# CHASING DORY

## Quick Start Guide V2.0

- This quick start guide only covers basic operations and precautions.
- This content is subject to change, please download the latest version from <https://www.chasing.com/service-support-dory>

## Main Components

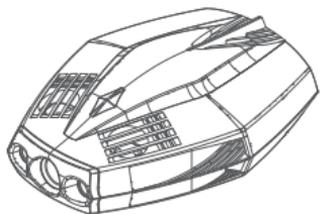

Drone



Wi-Fi Buoy



15m Tether

## Installation & Connection

### **1** Download CHASING DORY APP


Scan QR code or visit iOS app store /  
Google Play to download.  
(iOS 9.0 / Android 5.0 and above)



## 2 Connect Drone and Wi-Fi Buoy

Insert one end of the tether into the drone and the other end into The Wi-Fi buoy. Securely hand-tighten both coupling bolts.

- Note:** Check the O-rings on the tether connectors. If they are missing or damaged, please replace them. Make sure the tether connectors are dry before connecting.

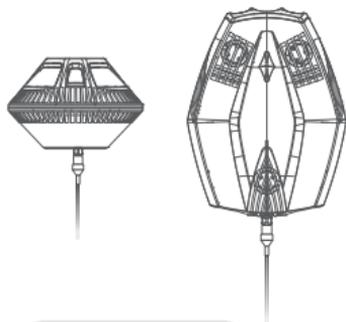

## 3 Booting Up

Once the Dory and the Wi-Fi buoy are connected, the LED lights on the drone will flash and you will hear two self-test sounds. A flashing green light will indicate that both the Dory and Wi-Fi buoy are powered on.



## 4 Wi-Fi Connection

On your mobile device, go to Wi-Fi settings. Click “Dory\_xxxxx” network and enter password 12345678.


## 5 Registration & Login

When you open the CHASING DORY App for the first time, please follow the interface prompts to register for an account and log in to the App. A network connection is required during the registration and login process.



## 6 CHASING DORY App Tutorial

Open the App, when you see "connected" on the bottom left corner, click "start" on the right. Now you will see the main App interface (below). Click the power button to unlock the drone and use the virtual joystick on screen to control the drone's movement.

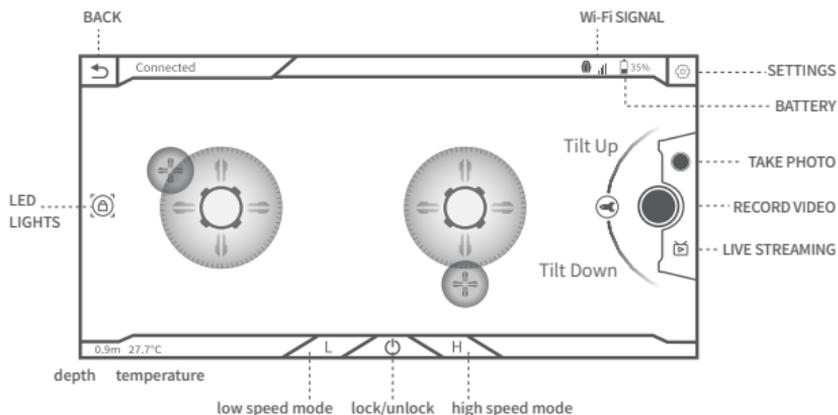


- ⚠ Note:** 1. Do not start the Dory motors while out of the water. Doing this can seize the motors.  
2. For better user experience, we are constantly updating software interface & features.

## Charging Guidelines

### Power adapter indicator light:


A solid red light indicates normal charging is in process.  
A solid green light indicates a complete charge. After charging, please unplug the power adapter.

**⚠ Note:** Wi-Fi buoy does not have a battery and requires no charging. Please DO NOT charge the Wi-Fi buoy.

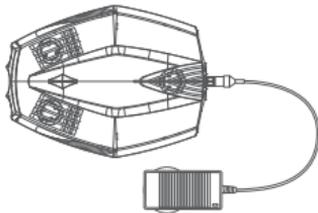

## Precautions

### 1 Navigation Safety

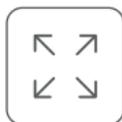

Open sea  
navigation



Suggested to use  
in calm waters



For best results dive  
in clear waters, avoid  
heavy seaweed areas.



No dense radio  
or radar signals




Do not dive  
more than 15m



The buoy's Wi-Fi range is 15 meters. If distance between Wi-Fi buoy and phone exceeds this distance, the connection will be lost.

## 2 Battery Protection

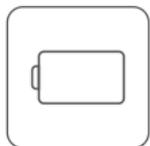

Do not run out of  
battery power



Charge it when the  
power is less than 25%



When not in use,  
keep battery power  
at 50% - 70%



Working temperature  
-10 °C ~ 60 °C  
( 14°F-140°F )

## 3 Others



When not in use, do not  
expose the drone to sunlight.  
Store it in a cool dry place  
or in the protective case



Children must use  
product under  
adult supervision



Before use, check for  
water on the tether  
connectors. If present,  
wipe with a towel.



After each use please  
wash the motor and  
propellers with clean  
water.

### ⚠ Warning:

- Whenever there is a major change of location, please perform a depth calibration before use. After each calibration please reconnect the drone and buoy, then kill and restart APP.
- To protect battery life, when the battery level is below 1%, the drone will be locked in low speed mode and restrict camera access.
- After each use, make sure the connector on the drone is dry. Wipe with a towel if necessary.

**CHASING**

www.chasing.com  
support@chasing.com