

Wingspan: ---- 1450mm (57.08in) Overall Length: ---- 1014mm (39.92n) Wing Area: ---- 32.5g/dm² Wing Loading: ---- 51.08g/dm² Servo: ----- 9g x 6pcs Speed Controller: ---- 40A brushless

Motor: ---- BM3720A-KV650 **Brushless Motor**

Battery: ----- 14.8v 2200mAh 25C LI-PO

Flying Weight: --- 1660g Propeller: ---- 13*6 2-blade Flap: ---- slotted trailing-edge

Transmitter: ---- 2.4G 6CH+

SPARE PART LIST:



PRM-01 Fuselage PRM-02 Wing









PRM-04 Vertical



PRM-13 Screws

@@@@ !!!!!



DY-3003 Glue

DYP-1019 13*6 Propeller

PRM-05 Wing parts

PRM-10 Push rod



PRM-11 carbon fiber tube



BM3720A Motor Mount

PRM-12 Decal





Digital Transmitter balance charger



DTM-C001 Supermate 4


DY-6015 14.8V 2200mAh 25C






DTM-A001,A002, A003,A004

DIRECTIONS FOR ASSEMBLY AND ADJUSTMENT

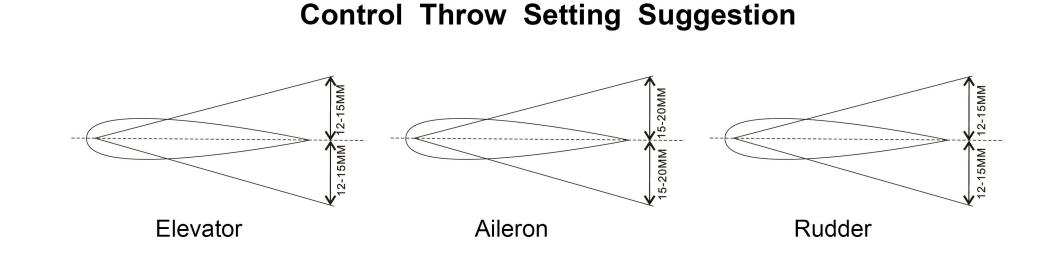

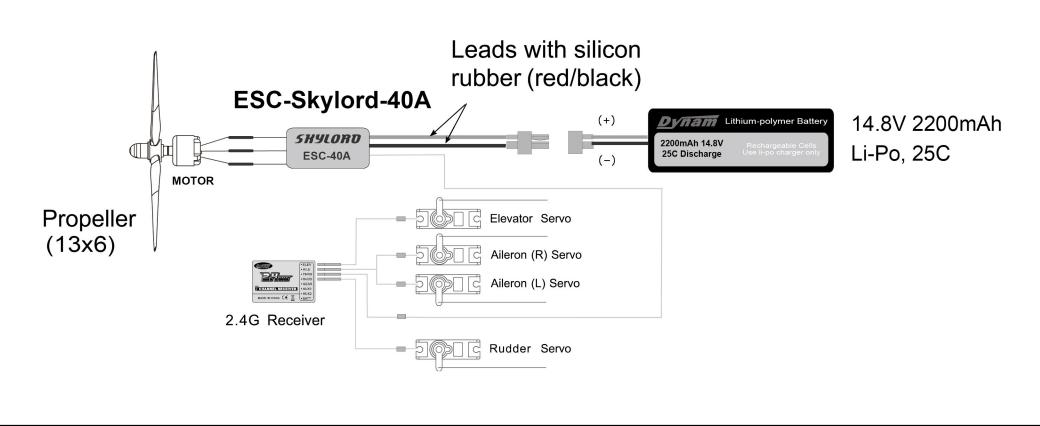

ASSEMBLY:



1 Put the carbon fiber tube into the hole to connect



the left and right wings.



7 Insert the horizontal stabilizer and vertical stabilizer in place.



DTM-R001 2.4G Receiver DTM-T006 GAVIN-6A

2 Fix the wing with

B Glue the plastic accessory

of rear wheel to fuselage



Install the servo horn of

rudder with M2*14 screw.



4 Fix the wing on fuselage



with M6*35 screw.



10 Fix the accessory of rear wheel with M3*25 screw.



5 Install the chocks of




Install the propeller.




6 Install the front landing gear with PT M3*6 screw.



12 Install the battery and

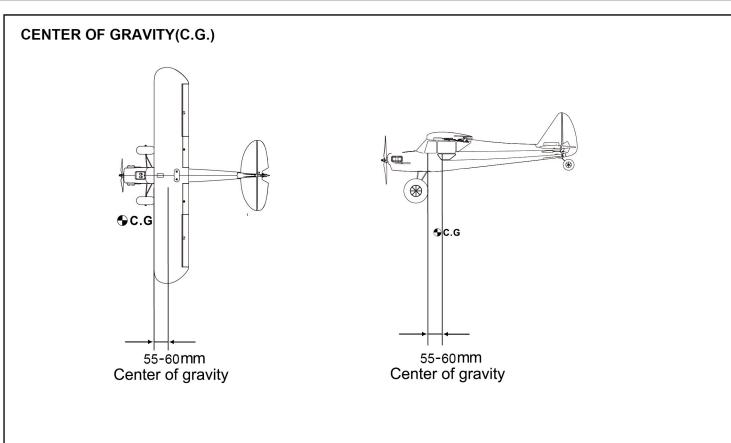

DECAL:

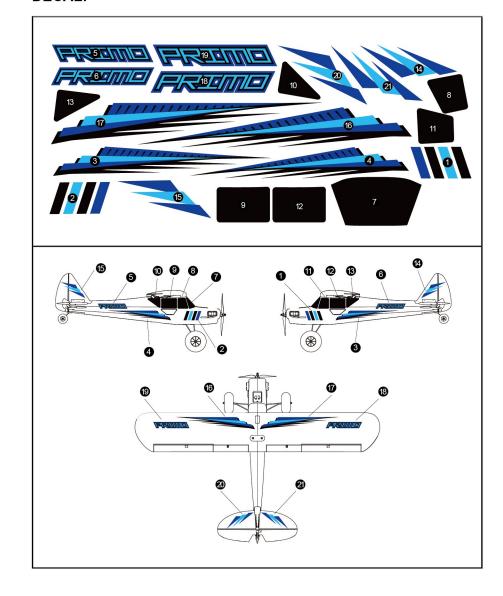

WARNINGS

• The product is not intended for those under 14 years of age without proper adult supervision. The product is not a toy. It is a precision machine requiring proper assembly and setup to avoid accidents and it is the responsibility of the owner to operate this product in a safe manner as it can cause serious personal injury and damage to property due

• The spinning rotors on this product can be dangerous! When operating/flying, always be aware of the spinning rotors. Be careful not to let them come close to your body other people or loose clothing. Keep your hands, fingers and any articles of clothing away from the rotors

• Do not attempt to disassemble or modify any of the product components without the assistance of an experienced RC user.

• Only use the correct type of battery to operate. Using any wrong type of battery will damage the product and possibly make it dangerous to operate • The motor(s) may get hot during use. Always allow 10-15

minutes between each flight for the motor to cool down. This

will prolong the life of your product.

• Choose an appropriate operating site consisting of flat, smooth ground, and clear open field. Do not operate near buildings, high voltage cable lines, or trees to ensure safety operation. Operate in safe area only, away from other people RC models are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, pilot error, and radio interference. Pilots are responsible for their actions and damage or injury occurring during the

• Do not operate in inclement weather, such as rain, wind,

• The product is composed of precision electrical components. It is critical to keep the product away from moisture and other contaminants. Do not allow them to get wet. Electrical damage may occur that could affect

• After each use, always allow the battery to cool down before recharging. When charging the battery pack, do not overcharge! If batteries get hot during charging, discontinue charging immediately and disconnect the battery from the charger. Never leave battery unattended while charging. If you are unsure of how to charge this battery, please seek the advice of experienced RC users. Never let children charge the battery without adult supervision.

 Always turn on the transmitter before connecting the battery on the model. When turning off the model, always disconnect the battery first, and then turn off the transmitter. If the order is reversed, the model may become uncontrollable and cause serious damage.

• If you are in doubt of your ability to operate the model, we strongly recommend that you seek assistance from experienced RC users or join your local model flying club to gain the required knowledge and skill. As the manufacturer and distributor, we assume no liability for the use

• Before turning on your model and transmitter, please check to make sure no one else is operating under the same frequency. Frequency interference can cause your model or other's models to crash. The guidance provided by experienced RC users will be valuable for the assembly, tuning, trimming, and actual first flight.

• Never allow batteries to run low or you might lose control of

 You should complete a successful pre-flight check of your radio equipment and model prior to each flight

 Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Do not store the model near any source of heat such as oven or heater. Store the model indoors in a climate-controlled room temperature

Dynam RC guarantees this product to be free of manufacturing faults and material defects. This product has been checked and fine tuned individually by professional pilot and quality control pilot. The warranty does not cover any component parts damaged by use and modification. Please visit http://www.dynam-rc.cn for updated product information

This product is not a toy. It is not recommended for children under 14 years old and any minor should be accompanied by an adult when operating. This product is a precision machine that requires proper assembly and setup to avoid accidents. Failure to take caution when operating this product may result in serious injury or property damage. It is the owner's responsibility to operate this product in a safe manner. Manufacturer and its distributors are not responsible in any way for any and all bodily injury(s) and/or property damage that may occur from the use of or caused by in any way of this product. This product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Please recycle

Charge the Li-Po battery pack

Disconnect the battery from the charger when the charging process completed. Do not charge the battery unattended at all time.

Lithium Polymer (LiPo) Battery Warnings

- Never charge a lithium polymer battery with a charger designed for NiCd, NiMH, or any other type of battery chemistry. Use ONLY charger designed for LiPo battery.
- Do not leave LiPo battery unattended during charging.
- Do not overcharge the battery.
- Always put the LiPo battery inside a charging protection container while charging. • Do not allow LiPo cells to overheat at any time. Cells which reach greater than 140
- Fahrenheit (60°C) will usually become damaged and will catch fire.
- Do not allow LiPo cells on or near combustible materials including paper, plastic, carpets, vinyl, leather, and wood, inside an R/C model or full size automobile.
- Do not over discharge LiPo; doing so will damage the battery.
- Do not expose LiPo cell to water or moisture at any time.
- Do not store battery near open flame or heater.
- Do not assemble LiPo cells or pre-assembled packs together with other LiPo cells or packs.
- Always store LiPo battery in a secure location away from children. Always remove the LiPo battery if model is involved in any kind of crash. Carefully inspect
- the battery and connectors for even the smallest damage. CAUTION: cells may be hot! • Do not allow the electrolyte to get into eyes or on skin. Wash affected areas immediately if they come into contact with electrolyte. Do not alter or modify connectors or wires of a
- LiPo battery pack. Always inspect the condition of the battery before charging and operationg.
- Do not short circuit the LiPo battery.
- Do not have contact with a leaky/damaged battery directly.
- Do not charge battery out of recommended temperature rang (0°C-45°C)