
PIAGET II

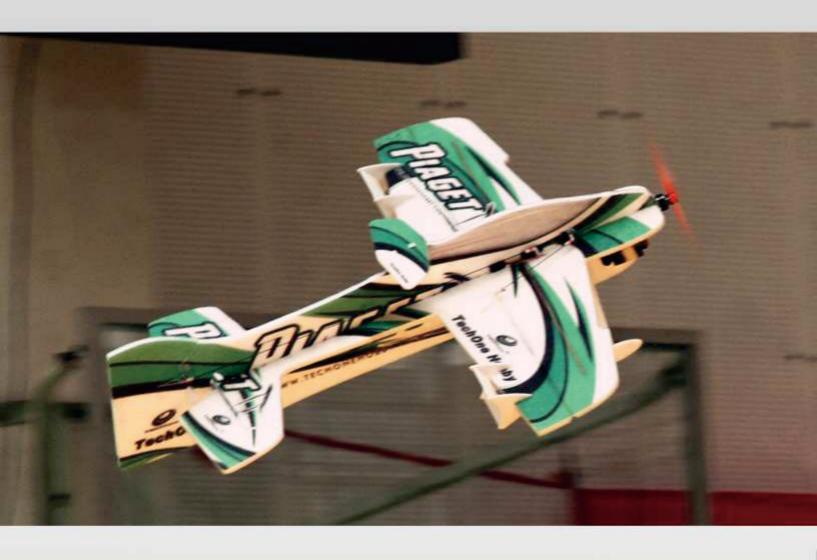

USER MANUAL





Features

- 1. The graceful and beautiful appearance, very clean and tidy coating
- 2.Piaget II use special 10MM 45 times EPP material, it's with good flexibility and anti crash, easy installation and maintainance.
- 3. We specially cut crack in the hinges of Aileron, stabilizer, rudder, anti-resistance when swing back and forth, to decrease the servo's loading, it's very flexible and easy control.

Product Specifications

Fuselage Length:890mm (35.0in.)Wingspan: 822mm (32.4in.)Flying Weight:210-230g (with battery)Motor:AT2206 V2 KV1500ESC: 10AmpPropeller: 9050Servos:8g micro servo *3pcs

Radio: 4/more channel Battery: 7.4v 2S 350mAh-500mAh Li-po

Do not fly under the conditions as below

Wind strong enough to make the trees rustle A street with many trees or street lamps Close to high voltage electrical wires High Population density areas

Cautions for flying

Large gyms, front lawns and parks make excellent flying areas. Make sure you have permission to fly and follow safety guidelines set by local authorities. The calmer the wind, the better!

Note for Storage

Please disconnect the lipo packs when finished flying Do not press or crush the airplane when storing The best way to store is to hang the airplane to keep the control surface rigid

Recommended Flying Setup

Max servo travel of aileron: 45degrees up and 45degrees down (55mm) Max servo travel of elevator:50 degrees up and 50 degrees down (65mm Max servo travel of rudder: 50degrees left and 50 degrees right (70mm)


CG Position: 75-85mm away from the leading edge of the wing.





Parts included in the packing



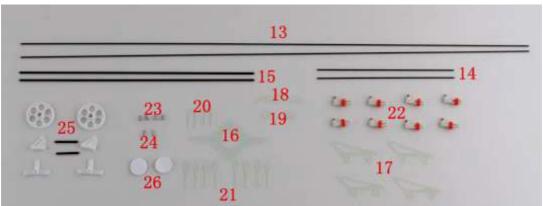


 Vertical fuselage Wing Horizontal fuselage Rudder Stabilizer Wheel cover Landing gear baffle Wing fences Fuselage reinforcing foam strip Lower Fuselage Wingtip Wing reinforcing batten Elevator & rudder push rod Aileron push rod 	1pc 1pc 1pc 1pc 2pcs 2pcs 4pcs 2pcs 1pc 1pc 1pc 2pcs 2pcs	15: Landing gear carbon fiber rod 16: Motor mount 17: Glass fiber control horn 18: Servo arm extension 19: Round doubler 20: U reinforcement 21: Push rod knighthead 22: Plastic clip 23: Self-tapping screw 2*8 24: Self-tapping screw 1.4*6 25: Wheel 26: Round velcro	2pcs 1pc 4pcs 1pc 2pcs 2pcs 8pcs 8pcs 4pcs 2pcs 1pc 2pcs




The assembly steps





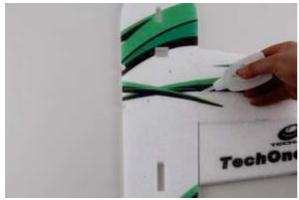

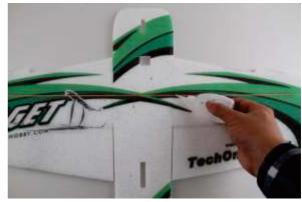




Insert the batten into the slot and fix with glue.



1. Glue left and right wing together as picture shown.

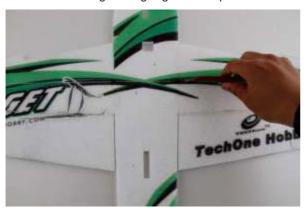

THE PARTY OF THE P

2. Wing reinforcing batten installation.
Cut off the cutting seam on the wing.

3. Stabilizer installation.







4.Lower vertical fuselage installation.
Cut off the joints between upper and lower vertical fuselage as picture shown.



Install lower vertical fuselage on horizontal fuselage in place.





Make sure vertical fuselage is perpendicular to horizontal fuselage, then fix with glue.







5. Fuselage reinforcing foam strip installation.





6.Landing gear assembly.



Press 2mm axis into T plastic part.



Then install wheel and triangle part as picture shown.




Fix axis and triangle part with glue.




Insert 2×220 mm carbon fiber rod into the slot on triangle part, then fix with glue.




7. Landing gear installation.

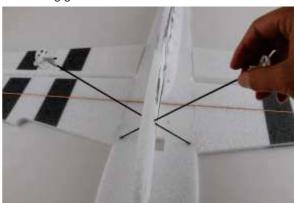

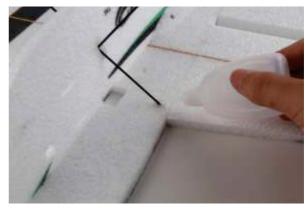

Glue round doublers on pre-reserved holes on wing, then install landing gear as picture shown and fix with glue.

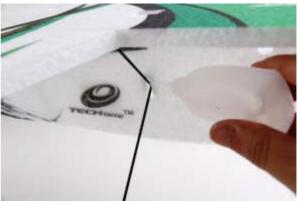

Place the U reinforcements on the joints of landing gear and lower fuselage as picture shown, then fix with glue.













Landing gear baffle and wheel cover installation



9. Upper fuselage installation.





Insert upper fuselage into the slots on horizontal fuselage, then fix with glue.







10.Rudder installation.









11. Wing fences and motor mount installation.



12. Control horns installation.














Separately insert 4pcs control horns into prereserved holes on rudder, elevator and ailerons, then fix with glue. Make sure the rudder control horn is on the right of rudder.

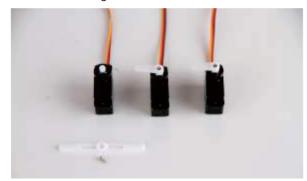

13. Servo and servo arm extension installation.





Put aileron servo inside the servo house that is the closest to the nose, and fix with glue, then install servo arm extension on the servo.



Put elevator and rudder servo into the middle and rear servo house, then fix with glue.




14. Plastic clip installation.








Separately install 4pcs plastic clip on 4pcs control horns.

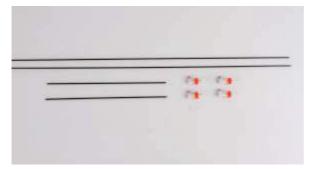

15. Push rod installation.

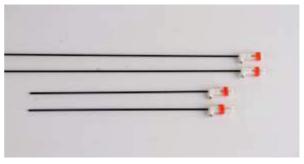


Install the plastic clip on one end of the 4 push rods each.





Connect one end with plastic clip to the aileron servo arm, and then connect another end to the plastic clip of the aileron servo horn. Adjust well the length and tighten the screws as picture shown.

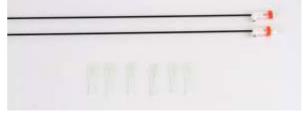



Put on 3pcs knightheads each on rudder and elevator push rod.











When install rudder and elevator push rod, connect one end with plastic clip to the servo arm, and insert knightheads into pre-reserved holes on fuselage, then connect another end of push rod to the hole on plastic clip. Make sure servo arm, rudder & elevator are in neutral, then adjust the height of knightheads to make push rod in a straight line. After that, fix the knightheads with glue and screw down the screws on plastic clip.



Finished push rods.











16. Motor and propeller installation.








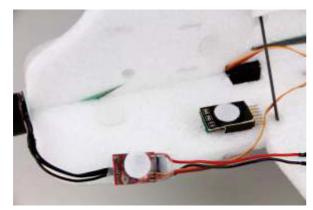

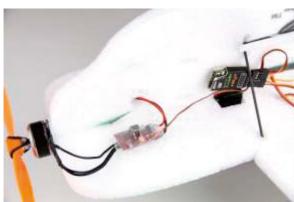

17.Receiver and battery installation.

Stick one side of round velcro on receiver and ESC, another side on proper places on fuselage, then fix receiver and ESC by velcro.

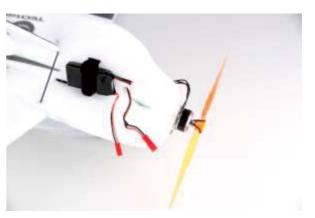

Fix battery with velcro.



All installation finished.



A perfect piaget-2-EPP 3D is done after your careful assembly. While assembly, the flying weight is really critical to the flight performance and will be affected by adding weight, so you should reduce any unnecessary weight while assembly. Then you'll get the best flying performance.