


Removing the Motor and Motor Mount from the Fuselage



1) Remove the propeller by popping it off the motor. Then, remove the two screws that hold the cowling on.



2) Remove the two screws that hold the motor mount in the fuselage.

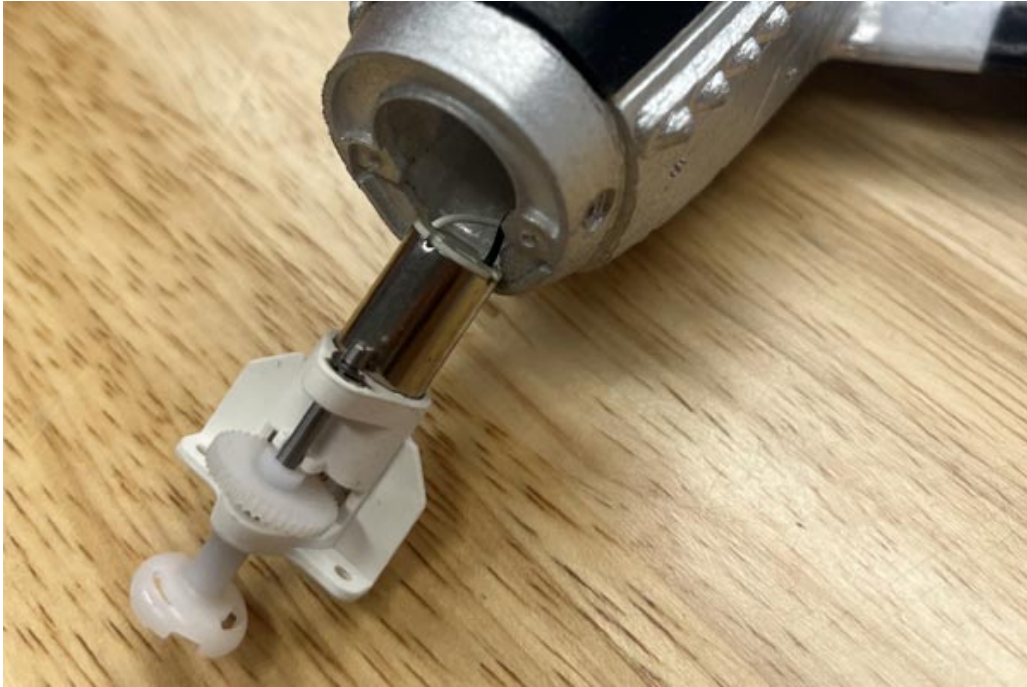

3) The motor and motor mount can now be pulled out of the fuselage.