


ZTW User Manual Of Air Program Card

Specification:

1. Size: 55.0mm*42.5mm*3.5mm (L*W*H)
2. Weight: 6.5g

How to Use the Air Program Card:

1. Connect the ESC to the motor.
2. Set the blue jumpers on the programming card for the settings you want (see ESC instructions for details on individual options).
3. Connect the Signal Wire to the programming card connector marked " - + P".
4. Connect the ESC to the battery pack. For the ESC without a built-in BEC (OPTO), you need to connect the extra power (4.8-6.0V) or UBEC to the connector marked " - +".
5. You should hear one short beep to confirm that your settings are valid and have been stored. If you hear a long beep (about 10 seconds), the settings are invalid and have not been stored. Check you settings and start over.
6. Disconnect your battery pack and the programming card.
7. Your ESC is now programmed and ready to run.

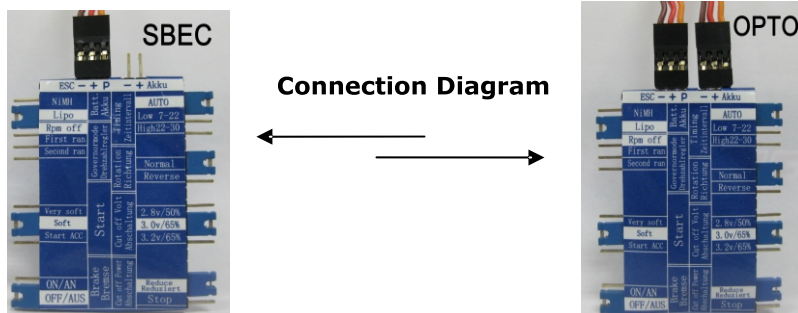

Shenzhen ZTW Model Science & Technology Co., Ltd

ADD: 5/F B, Block A4, Anle Industrial Estate, St. Hangcheng, Gushu, Baoan, Shenzhen, Guangdong,
P. R China, 518001

TEL: +86 755 29120026, 29120036, 29120056

FAX: +86 755 29120016

Http://www.ztwoem.com

Email:sales@ztwoem.com