


LED STATUS INDICATIONS DURING STARTUP

Main LED Status Indicator

- Initialization in progress
- Initialization failed
- The aircraft is in 'bind' mode
- The aircraft is not connected/linked to the transmitter
- The aircraft is in a no-fly zone*

*Please see the instruction manual for more information regarding no-fly zones

- Flashes red, green and blue (2 times per second)
- Pulses red (3 times per second)
- Flashes orange very rapidly (10 times per second)
- Flashes blue rapidly (5 times per second)
- Flashes red and white rapidly (5 times per second)

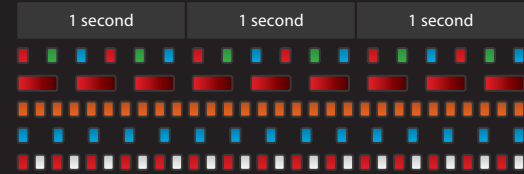

LED STATUS INDICATIONS BEFORE/DURING FLIGHT

Main LED Status Indicator

- The aircraft is in Smart Mode with GPS lock
- The aircraft is in Smart Mode without GPS lock
- The aircraft is in Angle Mode with GPS lock
- The aircraft is in Angle Mode without GPS lock
- The aircraft is in Home Mode
- First level low voltage battery warning
- Second level low voltage battery warning
- GPS lost
- Compass calibration required

- Glow solid green
- Flashes green (3 times per second) then off (for 1 second)
- Glow solid purple
- Flashes purple (3 times per second) then off (for 1 second)
- Flashes red rapidly (5 times per second)
- Flashes red, green and blue every 3 seconds
- Flashes red, green and blue continuously
- Flashes purple (1 flash per second)
- Flashes orange twice between any LED indication (when in the air)



Below Motor Led Status Indicators

- Low voltage battery warning


- Flash rapidly (5 times per second)

LED STATUS INDICATIONS FOR CALIBRATION MODES

Main LED Status Indicator

- Compass calibration Mode entered
- Compass calibration started
- Accelerometer calibration started
- Accelerometer calibration Mode entered/data collection finished
- Calibration failed

- Flashes red and green slowly (2 times per second)
- Flashes red and green rapidly (5 times per second)
- Flashes red, green and blue rapidly (3 times per second)
- Flashes red, green and blue slowly (1 time per second)
- Glow solid white

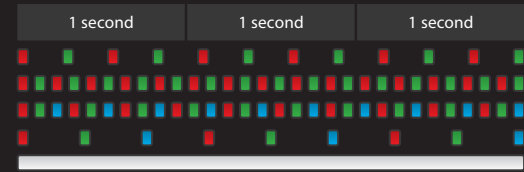

CGO2-GB CAMERA LED STATUS INDICATIONS

- WiFi / camera initialization in progress
- MicroSD card error or missing microSD card
- Ready
- Taking still photo
- Recording video

- Glow solid red
- Flashes yellow (1 time per second)
- Glow solid green
- Glow solid blue (1 time for 2 seconds)
- Flashes green, blue slowly (1 time per 2 seconds)

