



Head Kandy

Travelista Brushless Motor
Professional Hair Dryer

MD-DF08

**WARNING: PLEASE READ THE MANUAL PRIOR TO USE.
SAVE THESE INSTRUCTIONS.**

As with any other electrical appliance, keep out of reach of children. Read through the instructions prior to use. Do not place, store, or use the device near water or where it can be pulled into water. DO NOT submerge in water; keep surrounding area dry. If the hair dryer falls into water unplug it immediately. DO NOT reach into the water. Even when the hair dryer is off electrical parts are still live and can cause injury.

Do not use if there is damage to the electrical cord or if the body shows clear signs of damage. If the hair dryer is not working properly, disconnect from the power source and contact our warranty department.

Keep the hair dryer and its electrical cord away from heat sources. Do not hold or pick up the appliance by the power cord. After use, do not wind the cord around the hair dryer while it's still hot.

Do not wrap the electrical cord around the appliance.

Do not bend or twist the electrical cord in a way that will impair its ability to function correctly.

Lack of compliance with the above instructions could cause a short circuit resulting in irreparable damage to the appliance as well as putting the user's safety at risk. If there are any signs of damage or wear to the electrical cord please contact our warranty department. Do not use fittings or accessories that are not approved by the manufacturer.








Unplug the hair dryer when not in use and allow for it to cool down before storing in a safe place. To disconnect the appliance, unplug the electrical cord from the wall outlet. This appliance should only be used for its intended purpose. Do not use near bathtubs or other vessels containing water.

This appliance has been designed with a double-insulation system for your safety.

FEATURES:

- Ergonomic Handle
- Compact Design, Perfect for Travel
- Three Air Flow Settings
- Cool Shot Cold Air Option
- Four Temperature Settings
- Temperature & Speed Memory
- Auto Cleaning Function
- Releases Negatives Ions to Reduce Frizz
- 1500W Single Voltage 125V
- NEW Brushless Motor is Quiet & Lightweight
- Delivers Strong Airflow

INSTRUCTIONS FOR USE:

1. Ensure that the appliance is dry before plugging into an electrical outlet.
2. Press the power button  to turn the hair dryer on. After starting, the airflow speed and temperature indicators will light up.
3. The airflow speed  is divided into three settings:
 - low;  middle;  high.
4. Press the upper part  of the airflow button to increase speed and the lower part  of the airflow button to decrease speed.
5. To pause the hair dryer and maintain your settings, press the power  button. If it is not used for a long time, the power will automatically shut off.

TEMPERATURE SETTINGS:

1. The temperature is divided into four settings:

- low; • middle, • high.

2. Press the upper part ▲ of the temperature range button ↕ to increase temperature and the lower part ▼ of the temperature range button to decrease temperature.

3. The cold air setting is the same temperature as the cool air shot except that it's continuous. When the cool air setting is on, all of the red lights will be off.

The Travelista Hair Dryer is equipped with a cool air shot button. When the button is pressed, the hair dryer will supply cold air. When released, it will return to the original settings.

Cool Air Button



MEMORY FUNCTION:

The Travelista Hair Dryer has a memory function that will preserve the temperature setting that was selected from the previous use.

This function allows your appliance to establish the temperature and airflow speed that's ideal for your particular hair type.

AUTOCLEANING FUNCTION:

The Travelista Hair Dryer features an autocleaning function to clean the inner components.

Once the hair dryer is off, carefully rotate the external filter in a counterclockwise manner and pull towards the outside. Then select the wind key and temperature button together. Continue pressing for five seconds.

The motor will turn on in reverse for 10 seconds while the other buttons won't be active. At the end of the autocleaning session, reposition the external filter and turn on the hair dryer.




ERROR INDICATORS:

ERRORS	LED 1	LED 2	LED 3	LED 4	LED 5	LED 6
HARDWARE PROTECTION AGAINST OVERCURRENT	BLINKING	OFF	OFF	OFF	OFF	OFF
OUT-OF-RANGE TEMPERATURE SENSOR	OFF	BLINKING	OFF	OFF	OFF	OFF
SOFTWARE PROTECTION	BLINKING	BLINKING	OFF	OFF	OFF	OFF
VOLTAGE BEYOND UPPER RANGE	BLINKING	BLINKING	BLINKING	OFF	OFF	OFF
VOLTAGE BELOW LOWER RANGE	BLINKING	BLINKING	BLINKING	BLINKING	OFF	OFF
MOTOR JAMMED	BLINKING	BLINKING	BLINKING	BLINKING	BLINKING	OFF
DEFECTIVE PHASE	BLINKING	BLINKING	BLINKING	BLINKING	BLINKING	BLINKING
GENERIC MALFUNCTION	BLINKING	OFF	BLINKING	OFF	BLINKING	OFF



VENTURI EFFECT:

The air outlet has been designed to multiply airflow dispensed by the motor. The extra airflow is produced by the vacuum effect without using additional power.

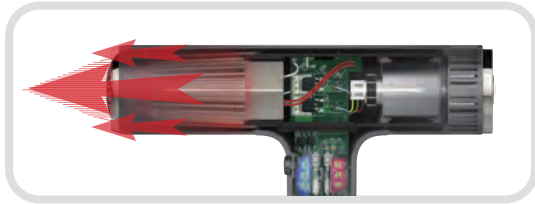

ACCESSORIES:

Small Concentrator Nozzle

Large Concentrator Nozzle

Diffuser

63mm
7mm



small nozzle

93mm
5mm



large nozzle



diffuser

IMPORTANT:

Use only original accessories included with this product.

CLEANING AND MAINTENANCE:

The Travelista Hair Dryer features an innovative system that prevents hair from coming in contact with motor parts.

Keep your appliance well maintained in order to ensure efficient performance and to extend the life of your hair dryer. A well kept and maintained hair dryer lasts much longer than one that is not properly taken care of.

- Before cleaning, unplug from the power outlet and allow to cool.
- Periodically remove hair and dust from the unit.
- To remove the back filter, hold the hair dryer by the handle and turn the back cover (filter holder) counterclockwise. Remove the internal filter. Wipe clean with a damp cloth or sponge.

- Make sure that it is completely dry before returning the filter to the hair dryer.
- Clean the outside of the hair dryer with a damp cloth or sponge.
- Make sure the hair dryer is completely dry before plugging it into an outlet and powering on.

LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the Head Kandy Travelista Hair Dryer and is non-transferable. Head Kandy, LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.

For 1 year from the date of purchase, Head Kandy, LLC will repair or replace, on its own accord, any Head Kandy Travelista Hair Dryer or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your Head Kandy Travelista Hair Dryer is found to be defective within the time period of this warranty, please contact the Head Kandy, LLC warranty department. If this product is discontinued or

LIMITED 1-YEAR WARRANTY

no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Distributed by Head Kandy, LLC

Salida, CO 81201

800-937-1917

office@headkandypro.com

warranty@headkandypro.com