


The Head Turner 25mm Folding Wand

- 60 second heat up time
- Infrared ionic heat to minimize frizz & damage, smooth hair & boost shine
- Tourmaline infused ceramic barrel emits hair conditioning ions for soft, smooth, frizz free, shiny hair
- 60 minute auto shut off
- Folding design for different angles
- 360° swivel cord
- Cool tip for extra control while styling
- Easy to read LCD temperature display
- Ultra lightweight, ergonomic design
- Temperature range of 250F- 410F

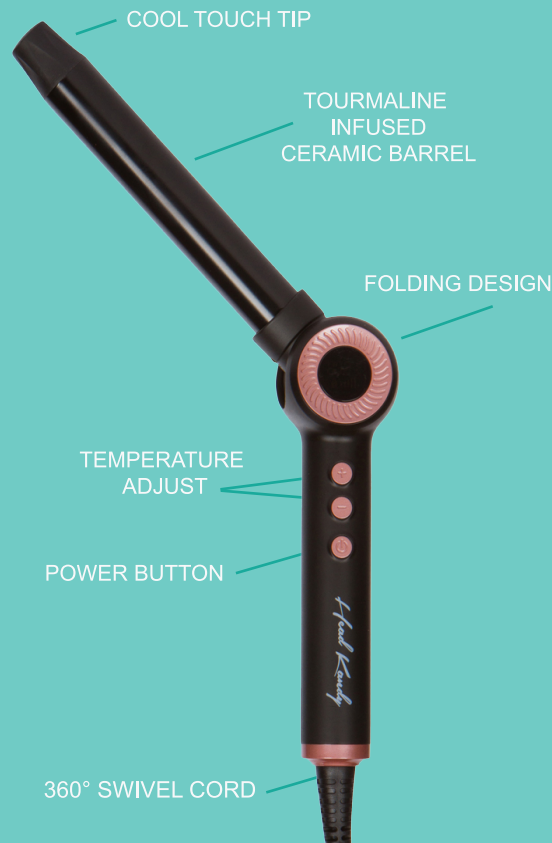

OPERATION:

1. Insert power plug into an electrical outlet, ensuring that the plug matches the socket.
2. Never use this appliance near water where it can fall or be pulled into a tub, basin, or shower.
3. Do not touch the ceramic barrel while the wand is plugged in, operating, or before it has cooled down. It will be hot and may result in injury.
4. When styling is complete, power off and unplug your styling tool.
5. Safety precautions included, but not limited to those stated herein, should be observed at all times while the appliance is in use, especially when used around children.
6. Do not disassemble the product.
7. Do not use on anything other than human hair.
8. Do not forcibly pull the power cord or wrap the cord around the appliance.

Important:

When using The Head Turner for the first time, select the lowest heat setting and test on one section of hair for five to eight seconds. If you want to use a higher setting be sure to GRADUALLY increase the temperature.

Never style on a high heat setting with the first use as this may cause damage to your hair. Use only as much heat as you need for effective styling. Using more heat than what is necessary may result in damage to your hair.

INSTRUCTIONS FOR USE:

1. Plug the appliance into an electrical outlet and press the “ON/OFF” switch. Select the desired heat setting by using the temperature control buttons and allow at least two minutes for the wand to reach maximum desired temperature and begin emitting negative ions.
2. To unlock the temperature, press and hold the - (minus) button until the lock symbol on the display disappears.
3. Using a detangle brush, work through tangles or knots until your hair becomes manageable.
4. Section hair and begin curling piece by piece. Hold hair onto the wand barrel for five to eight seconds at a time.

CARE:

- Do not rinse with water as it may damage the appliance.
- Do not use harsh products, benzene, or paint thinner to clean your appliance.
- Dropping your appliance or misuse may damage the product.
- To minimize buildup on your appliance do not spray product onto your hair while it is wrapped around the wand barrel.

STORING:

- Turn the appliance off by pressing the power button until the appliance shuts off. Unplug from the outlet. Allow for the appliance to cool before storing.
- Store in a dry, safe place out of the reach of children.
- The Head Turner will fit in the Heat Catcher, Over Protector, and RBF Bag.

WARNING! KEEP OUT OF REACH OF CHILDREN

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water.
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink.
- DO NOT submerge or drop into water or other liquid.
- Do not wrap the cord around the appliance.
- Do not use if power cord is damaged.

WARNING!

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If the appliance is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- Do not use while sleeping.
 - Do not use with an extension cord.
 - Do not use this appliance with a voltage converter.
 - Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.
 - Use this appliance only for its intended use as described in this manual.
 - Do not wrap cord around the appliance.
 - Do not use if the power cord is damaged.
- In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.
- Do not use any harsh or abrasive cleaners on the product.

FOR HOUSEHOLD USE ONLY

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the *Head Kandy* Head Turner and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.

For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Head Turner or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your *Head Kandy* Head Turner is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Head Kandy

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

Salida, CO 81201