

The Knockout Wand and Tag Team

PRODUCT PROFILE:

- Barrels: 32mm, 25mm, pearl (bubble) 25/18mm tapered, 19/10mm tapered
- LCD temperature display
- Auto shut off
- Temperature range 140-430F
- 360 degree 2.5m swivel cord
- Dual voltage 110-240V, 50/60HZ
- Power: 49W (32mm), 42W (25mm), 29W



OPERATION:

1. Select a barrel and insert it into the handle (base). Make sure it is in the unlocked position, then lock.
2. Lock the attachment into the base by twisting the top piece of the handle from one side to the other side.
3. Insert the plug of the curling wand into an electrical outlet, ensuring that the plug matches the socket.
4. Turn on your curling wand by pressing the ON/OFF button. The screen will indicate 360F by default.
5. Select your desired temperature by pressing the + or - buttons.
6. Once your appliance stops counting up or down to the desired temperature, wait one minute for it to fully heat up and is ready to use.
7. When you are finished, press the power button to shut off your appliance and then remove the plug from the electrical outlet.
8. Never use this appliance near water.
9. The product will remain hot after each use. Place on a heat resistant stand or surface and avoid any contact.
10. Safety precautions included, but not limited to those stated herein, should be observed at all times while appliance is in use, especially if the appliance is used around children.

RECOMMENDED HEAT SETTINGS:

Delicate, thin, easy to curl hair
140F - 285F

Average to thick or color treated hair
285F - 320F

Thick, wavy, or coarse hair
320F - 430F

INSTRUCTIONS FOR USE:

1. Use on dry hair only.
2. Brush hair prior to using the curling wand and curl section by section.
3. Allow your hair to cool before running your fingers through it.
4. For longer lasting curls, pin each curl up as it cools before allowing it to fall.
5. Use the heat glove (included) to avoid burns or scalding.

WARNING:

The barrels will be **HOT!** To avoid scalding, **DO NOT TOUCH** the barrel while the wand is heating up, during operation, or after use until it has completely cooled down.

CARE:

- After powering off, unplug the curling wand and let it cool down.
- Do not rinse with water as it may damage the curling wand. For cleaning the handle or barrel attachments, wipe with a moist cloth. Do not use harsh products, benzene, or paint thinner as it may damage your appliance.
- Clean after each use to avoid build up; especially when using with hair products.

STORING:

- Turn the appliance off by pressing the power button. The red light on the display will shut off. Unplug from the outlet.
- Be sure that the barrel has cooled down completely before handling. Do not wrap the cord around the wand.
- Store in a dry, safe place out of the reach of children.
- **DO NOT** place the wand ON or IN the heat pad or storage case until it has cooled. The Backbone heat resistant stand may be used with the wand while it is in use.

WARNING: KEEP OUT OF THE REACH OF CHILDREN!

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water.
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink.
- DO NOT submerge or drop into water or other liquid.

WARNING!

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If the appliance is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- **Product is hot when in use.** Do not let eyes or bare skin touch heated surfaces.

- Use this appliance only for its intended use as described in this manual.
 - Do not wrap cord around the appliance.
 - Do not use if the power cord is damaged.
- In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.
- Do not use any harsh or abrasive cleaners on the product.

FOR HOUSEHOLD USE ONLY

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SERVICING OF DOUBLE INSULATED APPLIANCES

In a double insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double insulated appliance requires extreme care and knowledge of the system and should only be done by qualified service personnel. Replacement parts for a double insulated appliance must be identical to the parts they replace. A double insulated appliance is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED". The symbol (a square within a square) may also be marked on the appliance.

LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the *Head Kandy* Knockout Wand and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase.

Keep the original sales receipt for proof of purchase to attain warranty provisions. For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Knockout Wand or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes. If your *Head Kandy* Knockout Wand is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Head Kandy

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

131 Crane Lane

Salida, CO 81201