

The One Upper Brush Straightener

PRODUCT PROFILE:

- 60 minute auto shut off
- 170F-450F temperature range
- Dual voltage 110-240V
- AC 50/60HZ 45W



The One Upper creates an electrostatic “spark” from the anion and ion generators performing their charge. This will not cause burns or damage to your hair. The One Upper is ETL certified and deemed safe by Intertek.

INSTRUCTIONS FOR USE:

1. Use on dry hair only.
2. Brush hair prior to use and straighten hair section by section.
3. Place the brush straightener under each section close to the scalp, bristles facing outward. Hold hair ends firmly to create tension and pull brush down the length of hair from scalp to ends.
4. When you’ve finished straightening from the underside, go over the outer layer of your hair in sections (like you would with a regular hair brush) so that the tourmaline infused plate comes in direct contact with all of your hair.
5. Repeat as necessary.
6. Allow your hair to cool before running your fingers through it.

To create volume: With the straight edge close to the scalp and the bristles facing up, lift upward and outward using a rainbow motion. As the hair cools, finger lift hair at the roots. We also recommend using the Drama Queen volumizing powder mist from our Style Me line (sold separately).

RECOMMENDED HEAT SETTINGS:

Delicate, thin, easy to style hair
140F - 300

Average to thick or color treated hair
300F-375F

Thick, wavy, or coarse hair
375F - 450F

To avoid damage, use the heat setting that is appropriate for your hair type.

WARNING:

To avoid scalding, DO NOT TOUCH the inner brush while it is heating up, during operation, or after use until it has completely cooled.

OPERATION:

1. Insert power plug into an electrical outlet, ensuring that the plug matches the socket.
2. To turn on your straightener, press the power button. Select your desired temperature by pressing the </> button once for each heat setting.
3. Once the hair styling process is complete, press the power button and hold it down until your One Upper shuts off. Unplug it, and allow your appliance to cool prior to storage.
4. Never use this appliance near water.
5. Safety precautions included, but not limited to those stated herein, should be observed at all times while appliance is in use, especially if the appliance is used around children.
6. The first time using this appliance there may be a slight burning smell or very light smoke which is caused by the residual oil on the PTC heater metal parts burning off when heated. It is normal and safe to use.

CARE:

- After powering off, unplug the brush straightener and let it cool down.
- Do not rinse with water as it may damage the styling tool.
- For cleaning the handle, wipe with a moist cloth. Do not use harsh products, benzene, or paint thinner as it may damage your appliance.
- Clean after each use to avoid build up; especially when using with hair products.

STORING:

- Turn the appliance off by pressing the power button. Unplug from the outlet.
- Do not wrap the cord around the brush.
- Allow for the appliance to cool before storing. Store in a dry, safe place out of the reach of children.

WARNING!

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If it is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Use this appliance only for its intended use as described in this manual.
- Never allow the ceramic plate to come in contact with the cord, plug, or heat sensitive materials or surfaces.
- Do not use if the power cord is damaged. In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.

IMPORTANT INFORMATION ABOUT ALCI SAFETY PLUG:

1. "TEST" button ensures that the ALCI plug device is operational. "RESET" button clears the ground fault and restores the ALCI to normal operation.
2. The ALCI should be tested every use.
3. When the RED button extends out, the ALCI has operated. This indicates that the appliance is not in proper functioning condition and is to be discarded or returned to *Head Kandy* for examination and repair.
4. If there is any indication that the appliance does not operate in the proper functioning condition, please contact *Head Kandy* for repair options (see "Limited 1-Year Warranty" section).

WARNING: KEEP OUT OF THE REACH OF CHILDREN! As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink
- DO NOT submerge or drop into water or other liquid
- Unplug the appliance before cleaning

AUTOMATIC SHUT OFF FEATURE:

The One Upper has an automatic shut off feature for your safety. The One Upper will shut off after 60 minutes of use. If you want to use it again, press the power button.

FOR HOUSEHOLD USE ONLY

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the *Head Kandy* One Upper and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original receipt for proof of purchase to attain warranty provisions. For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* One Upper or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes. If your *Head Kandy* One Upper is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Head Kandy

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

131 Crane Lane

Salida, CO 81201