

## The Perfectionist Heated Round Brush

- Heat resistant nylon polyflex bristles
- Tourmaline infused ceramic barrel emits hair conditioning ions for soft, smooth, frizz free, shiny hair
- 60 minute auto shut off
- LCD temperature display
- 360° swivel cord
- Cool tip for extra control while styling
- Available in 32mm or 45mm diameter
- 32mm = 45W / 45mm =55W
- Dual voltage 100/240v
- Blue LED ion indicator light
- Temperature range of 250F- 450F

### RECOMMENDED HEAT SETTINGS:

Delicate, thin, easy to style hair  
250F - 285F

Average to thick or color treated hair  
285F - 320F

Thick, wavy, or coarse hair  
320F - 450F



### OPERATION:

1. Insert power plug into an electrical outlet, ensuring that the plug matches the socket.
2. Never use this appliance near water where it can fall or be pulled into a tub, basin, or shower.
3. Do not touch the bristles or ceramic barrel while the brush is plugged in, operating, or before it has cooled down. The appliance will be hot and may result in injury.
4. When styling is complete, power off and unplug your styling tool.
5. Safety precautions included, but not limited to those stated herein, should be observed at all times while the appliance is in use, especially if the appliance is used around children.
6. Do not disassemble the product.
7. Do not use on anything other than human hair.
8. Do not forcibly pull the power cord or wrap the cord around the appliance.

### Important:

When using the heated round brush for the first time, select the lowest heat setting and test in one small section of hair for five to eight seconds. If you want to use a higher setting, be sure to GRADUALLY increase the temperature.

Never style on a high heat setting with the first use as this may cause damage to your hair. Use only as much heat as you need for effective styling. Over time, using more heat than what is necessary can result in hair damage. Please refer to the recommended heat settings according to hair type and texture.



### INSTRUCTIONS FOR USE:

1. Plug the appliance into an electrical outlet and press the "ON/OFF" switch. Select the desired heat setting by using the temperature control buttons and allow at least two minutes for the brush to reach temperature and to begin emitting negative ions.
2. The display will flash until it reaches the desired heat setting. Because of the open design, the display may continue to flash as the brush will need to maintain desired temperature during use.
3. Section dry hair in small pieces after properly detangling and work the Perfectionist from the scalp to the ends of your hair section by section.
4. The Perfectionist can be used to enhance body and volume, straighten, or create a slight natural looking curl.

### CARE:

- Do not rinse with water as it may damage the appliance.
- For cleaning, simply remove hair, lint, or dust from the bristles.
- Do not use harsh products, benzene, or paint thinner to clean your appliance.
- Dropping your appliance or misuse may damage the product.

### STORING:

- Turn the appliance off by pressing the power button until the appliance shuts off. Unplug from the outlet. Allow for the appliance to cool before storing.
- Store in a dry, safe place out of the reach of children.
- The Perfectionist will fit the Over Protector case, Kandy on the Run Bag, Heat Catcher, or RBF Bag.

### WARNING: KEEP OUT OF THE REACH OF CHILDREN!

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water.
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink.
- DO NOT submerge or drop into water or other liquid.
- Do not wrap the cord around the appliance.
- Do not use if power cord is damaged.

### WARNING!

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If the appliance is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Use this appliance only for its intended use as described in this manual.
- Do not wrap cord around the appliance.
- Do not use if the power cord is damaged. In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.
- Do not use any harsh or abrasive cleaners on the product.

### FOR HOUSEHOLD USE ONLY

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the *Head Kandy* Perfectionist and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.

For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Perfectionist or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your *Head Kandy* Perfectionist is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

*Head Kandy*

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

131 Crane Lane  
Salida, CO 81201