


The Party Animal Beach Crimper

PRODUCT PROFILE:

- 70W 110v/220v dual voltage
- 60 minute auto shut off
- 240-450F temperature range
- Uses infrared heat and emits negative ions to minimize damage, boost shine, smooth frizz, and retain moisture
- Unique three barrel design with an extra wide middle plate creates deep, smooth, long lasting waves

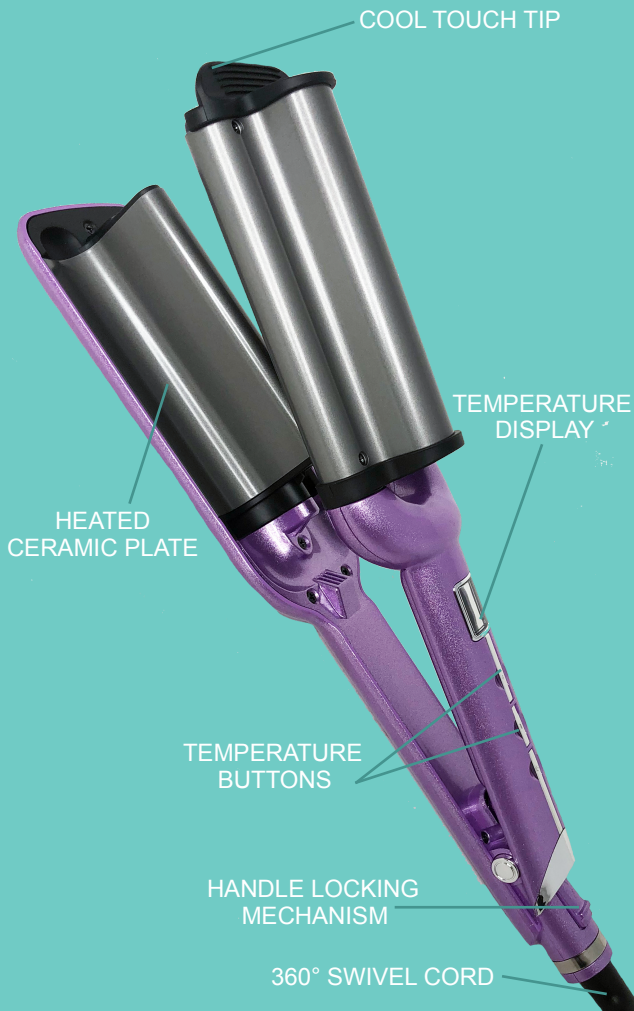

OPERATION:

1. Insert power plug into an electrical outlet, ensuring that the plug matches the socket.
2. Press the power button to turn on. Select desired temperature by pressing the + or - buttons. Allow 60 second heat up time.
3. Once the hair styling process is complete, press the power button and hold it down until your appliance shuts off. Unplug it, and allow your crimper to cool prior to storage.
4. Never use this appliance near water.
5. Safety precautions included, but not limited to those stated herein, should be observed at all times while appliance is in use, especially if the appliance is used around children.
6. The first time using this appliance there may be a slight burning smell or very light smoke which is caused by the residual oil on the PTC heater metal parts burning off when heated. It is normal and safe to use.

RECOMMENDED HEAT SETTINGS:

Delicate, thin, fine hair
250° - 320°

Average to thick or color treated hair
340° - 390°

Thick, wavy, or coarse hair
390° - 440°

IMPORTANT! When using this styling tool for the first time, select the **LOWEST** heat setting on one small section of hair for 5-8 seconds. If you want to use a higher heat setting, **GRADUALLY** increase the temperature. Never style for the first time on a high setting as this may damage your hair. Use only as much heat as you need for effective styling.

INSTRUCTIONS FOR USE:

1. Use on dry hair only.
2. Brush hair prior to use.
3. Work from the scalp to the ends of hair. Starting at the roots, lightly clamp a small section of hair between the barrels. Hold the crimper in this position for a few seconds, depending on your hair type. Release the handles and let the hair slip out. For continuous waves, match the outermost wave of your hair with the barrel and hold in position again for a few seconds. Repeat the process until desired look is achieved.
4. Allow your hair to cool before running your fingers through it.
5. To minimize damage, always use a thermal protectant prior to styling with a heated hair appliance.
6. Finish the look with a few spritzes of Air Head texture spray (sold separately) to set the style.

NOTE: Smooth curly hair by gently pulling the crimper through hair to relax curls.

WARNING: To avoid scalding, **DO NOT TOUCH** the ceramic plates while your crimper is heating up, during operation, or after use



CARE:

- After powering off, unplug the appliance and allow it to cool down.
- Do not rinse with water as it may damage the styling tool. Do not use harsh products, benzene, or paint thinner as it may damage your appliance.
- Clean after each use to avoid build up; especially when using with hair products. Unplug from the outlet and use a moist cloth to wipe down the ceramic plates after your appliance has cooled.

STORING:

- Turn the appliance off by pressing the power button. Unplug from the outlet.
- Do not wrap cord around the crimper.
- Allow for the appliance to cool before storing. Store in a dry, safe place out of the reach of children.
- The Party Animal will fit the RBF Bag, Over Protector, or Heat Catcher.
- DO NOT place the crimper in the heat pad or storage case until it has cooled.

WARNING: KEEP OUT OF THE REACH OF CHILDREN!

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink
- DO NOT submerge or drop into water or other liquid

WARNING!

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If it is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Use this appliance only for its intended use as described in this manual.
- Never allow the ceramic plate to come in contact with the cord, plug, or heat sensitive materials or surfaces.
- Do not use if the power cord is damaged. In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.

FOR HOUSEHOLD USE ONLY

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

LIMITED 1-YEAR WARRANTY

This warranty is for the original purchaser of the *Head Kandy* Party Animal and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.

For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Party Animal or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your *Head Kandy* Party Animal is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

Head Kandy

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

131 Crane Lane
Salida, CO 81201