

# The Sidekick Brush Straightener

## PRODUCT PROFILE:

- Temperature adjusting ON/OFF button
- 60 minute auto shut off
- 248-410F temperature range
- 360 degree swivel cord
- Dual voltage 100-240V
- AC 50/60HZ 30W



## OPERATION:

1. Insert power plug into an electrical outlet, ensuring that the plug matches the socket.
2. To power on your brush straightener, press the ON/OFF button. Select your desired temperature by pressing the power button once for each heat setting (there are five heat settings).
3. Once the hair styling process is complete, press the power button and hold it down until your Sidekick shuts off. Unplug it, and allow your appliance to cool down prior to storage.
4. Never use this appliance near water.
5. Safety precautions included, but not limited to those stated herein, should be observed at all times while appliance is in use, especially if the appliance is used around children.
6. The first time using this appliance there may be a slight burning smell or very light smoke which is caused by the residual oil on the PTC heater metal parts burning off when heated. It is normal and safe to use.

## AUTOMATIC SHUT OFF FEATURE:

Your Sidekick has an automatic shut off feature for your security and safety. The Sidekick will shut off after 60 minutes of use. If you want to use it again, press the power button.

## INSTRUCTIONS FOR USE:

1. Use on dry hair only.
2. Brush hair prior to use and straighten hair section by section.
3. Allow your hair to cool before running your fingers through it.

## RECOMMENDED HEAT SETTINGS:

- 248F Delicate, thin, easy to curl hair
- 302F - 336F
- Average to thick or color treated hair
- 375F - 410F
- Thick, wavy, or coarse hair

To avoid damage, use the heat setting that is appropriate for your hair type.

## WARNING:

To avoid scalding, DO NOT TOUCH the inner brush while it is heating up, during operation, or after use until it has completely cooled down.

## CARE:

- After powering off, unplug the brush straightener and let it cool down.
- Do not rinse with water as it may damage the styling tool.
- For cleaning the handle, wipe with a moist cloth.
- Do not use harsh products, benzene, or paint thinner as it may damage your appliance.
- Clean after each use to avoid build up; especially when using with hair products.
- Use our Kandy Clean Scrub Brush with rubbing alcohol to clean the ceramic plate between the bristles while your Sidekick is warm. Unplug prior to cleaning.

## STORING:

- Turn the appliance off by pressing the power button. Unplug from the outlet.
- Do not wrap the cord around the brush.
- Allow for the appliance to cool before storing. Store in a dry, safe place out of the reach of children.
- The Sidekick will fit in the Over Protector, RBF Bag, Heat Catcher, or Kandy on the Run Bag.

## **WARNING: KEEP OUT OF THE REACH OF CHILDREN!**

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink
- DO NOT submerge or drop into water or other liquid
- Unplug appliance before cleaning

## **WARNING!**

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If it is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Use this appliance only for its intended use as described in this manual.
- Never allow the ceramic plate to come in contact with the cord, plug, or heat sensitive materials or surfaces.
- Do not use if the power cord is damaged. In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.

## **FOR HOUSEHOLD USE ONLY**

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## **IMPORTANT INFORMATION ABOUT ALCI SAFETY PLUG:**

1. "TEST" button ensures that the ALCI plug device is operational.
2. "RESET" button clears the ground fault and restores the ALCI to normal operation.
3. The ALCI should be tested every use.
4. When the RED button extends out, the ALCI has operated. This indicates that the appliance is not in proper functioning condition and is to be discarded or returned to *Head Kandy* for examination and repair.
5. If there is any indication that the appliance does not operate in the proper functioning condition, please contact *Head Kandy* for replacement or repair options (see "Limited 1-Year Warranty" section).

## **LIMITED 1-YEAR WARRANTY**

This warranty is for the original purchaser of the *Head Kandy* Sidekick and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase. Keep the original sales receipt for proof of purchase to attain warranty provisions.

For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Sidekick or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your *Head Kandy* Sidekick is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

*Head Kandy*

1-800-937-1917

warranty@headkandypro.com

office@headkandypro.com

131 Crane Lane

Salida, CO 81201