


# The Rebound Cool Air Hair Styler

## PRODUCT PROFILE:

- 45 watts
- 60 second heat up
- Dual voltage 110/240V 50/60Hz
- 280F - 430F temperature range
- Cool air setting instantly sets curls
- Ionized ceramic tourmaline plates
- 360° swivel power cord
- Easy to read display
- 40 minute auto safety shut off
- Ceramic coating decreases friction for damage free styling
- Suitable for all hair types
- Dual plate technology maintains even heat at all times

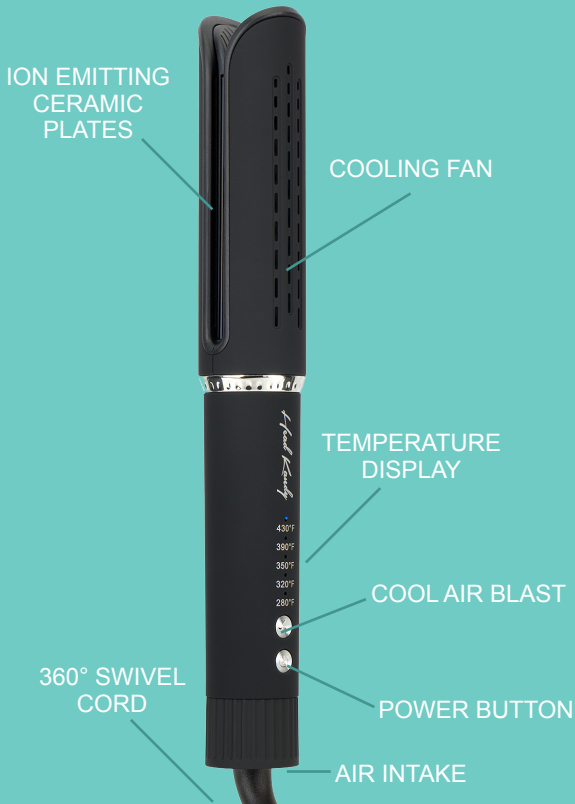

## OPERATION:

1. Insert the plug of the curler into an electrical outlet, ensuring that the plug matches the socket.
2. Turn your appliance on by holding down the power button. You will also press the power button to select your desired heat setting.
3. When selecting a heat setting, the indicator light will flash until it reaches the selected temperature. Once it reaches the desired temperature, it will stop flashing, but the indicator light will stay lit.
4. When finished, press the power button until it shuts off. Remove the plug from the electrical outlet.
5. Never use this appliance near water.
6. The product will remain hot after each use. Place on a heat resistant surface and avoid any contact.
7. Safety precautions include, but are not limited to those stated herein, should be observed at all times while appliance is in use, especially if the appliance is used around children.
8. To avoid heat damage, refer to the recommended heat settings below. If you are unsure which temperature to use, start at a low heat setting and gradually increase the temperature until you are able to achieve your desired results.

## RECOMMENDED HEAT SETTINGS:

- Delicate, thin, easy to curl hair  
280F - 320F
- Average to thick or color treated hair  
320F - 350F
- Thick, wavy, or coarse hair  
390F - 430F



## INSTRUCTIONS FOR USE:

1. Use on dry hair only.
2. Brush hair prior to using The Rebound and curl section by section.
3. Before releasing each section, use the cool air button to set curls.
4. We recommend using a thermal protectant prior to any heated styling tool in an effort to minimize damage.

## WARNING:

The ceramic plates will be **HOT!** To avoid scalding, **DO NOT TOUCH** the plates while The Rebound is heating up, during operation, or after use until it has completely cooled down.

**CARE:**

- After powering off, unplug the styler and let it cool down.
- Do not rinse with water as it may damage the appliance. For cleaning the handle or plates, wipe with a moist cloth. Do not use harsh products, benzene, or paint thinner as it may damage your appliance.
- Clean after each use to avoid build up; especially when using with hair products.

**STORING:**

- Turn the appliance off by pressing the power button. Unplug from the outlet.
- Be sure that the plates have cooled down completely before handling.
- Do not wrap the cord around the appliance.
- Store in a dry, safe place out of the reach of children.

**WARNING: KEEP OUT OF THE REACH OF CHILDREN!**

As with most electrical appliances, parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Always unplug after use
- DO NOT use while bathing, in the shower, near basins or other vessels containing water.
- DO NOT store or place this appliance where it can fall or be pulled into a bathtub or sink.
- DO NOT submerge or drop into water or other liquid.
- Do not use if there is damage to the electrical cord.

**WARNING!**

To reduce risk of electric shock, burns, or injury to self or persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is being used on, or near children or individuals with certain disabilities.
- If the appliance is not working properly, has been dropped, damaged, or submerged in water, contact *Head Kandy* for repair or replacement options.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use while sleeping.
- Do not use with an extension cord.
- Do not use this appliance with a voltage converter.
- Product is hot when in use. Do not let eyes or bare skin touch heated surfaces.
- Use this appliance only for its intended use as described in this manual.
- Do not wrap cord around the appliance.
- Do not use if the power cord is damaged. In the event of damage, discontinue use immediately and contact *Head Kandy* for repair or replacement options.
- Do not use any harsh or abrasive cleaners on the product.

**FOR HOUSEHOLD USE ONLY**

This appliance may have a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

**LIMITED 1-YEAR WARRANTY**

This warranty is for the original purchaser of the *Head Kandy* Rebound and is nontransferable. Head Kandy LLC warrants that this appliance will have no defects in material and workmanship under normal household usage for 1 year from the date of purchase.

Keep the original sales receipt for proof of purchase to attain warranty provisions. For 1 year from the date of purchase, Head Kandy LLC will repair or replace, on its own accord, any *Head Kandy* Rebound or parts found to be defective. This warranty does not cover any shipping or handling charges which may incur. This warranty does not include any damages caused by misuse, accident, neglect, abuse, use with a voltage other than what's marked on the product, or for commercial purposes.

If your *Head Kandy* Rebound is found to be defective within the time period of this warranty, please contact the Head Kandy LLC warranty department. If the product is discontinued or no longer available, a replacement may be made with a similar product of equal or greater value. Any attempt to repair or service this product on your own will void the warranty.

*Head Kandy*

1-800-937-1917

office@headkandypro.com

131 Crane Lane

Salida, CO 81201