




DIFFERENTIAL SKID PLATE

INSTALL

RAPTOR | BRONCO | BRONCO RAPTOR | TRX

TOOL REQUIRED

- **Wrenches**
 - 11/16"
- **Sockets**
 - 10mm
 - 12mm
 - 5/8"
- **Ratchet**

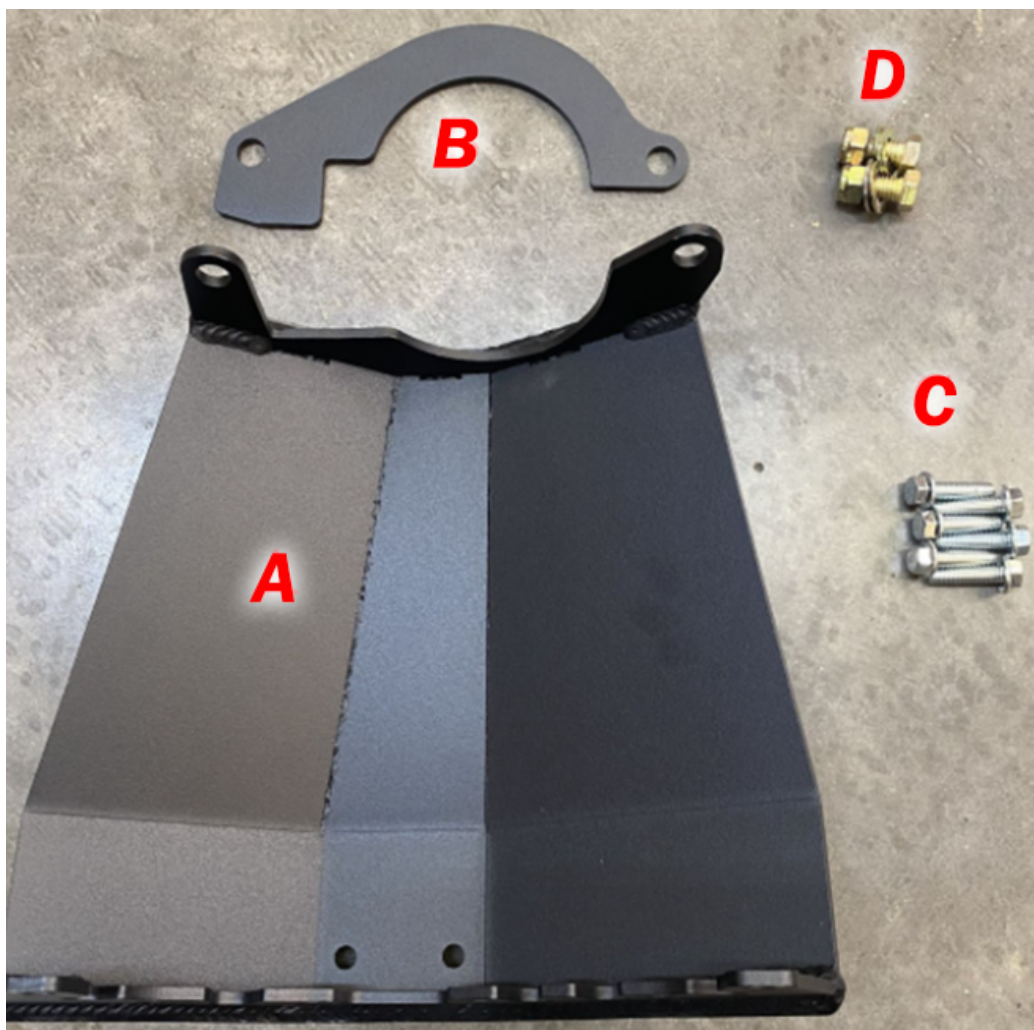

INCLUDED IN KIT

- A. (1) Differential Skid Plate
- B. (1) Pinion Support Strap
- C. (6) M8-1.25 x 25 flange head bolt
- D. (1) 7/16-14 x 1" Bolt w/ nyloc nut and washers
- E. (6) Powder Coated spacers for use with Ford Performance Differential cover **ONLY** (not pictured)



DIFFERENTIAL SKID PLATE


INSTALL

RAPTOR | BRONCO | BRONCO RAPTOR | TRX

DISASSEMBLY

Step 1:

Remove (6) lower differential cover bolts. Care should be taken to not disturb the cover, which could result in breaking the gasket seal.

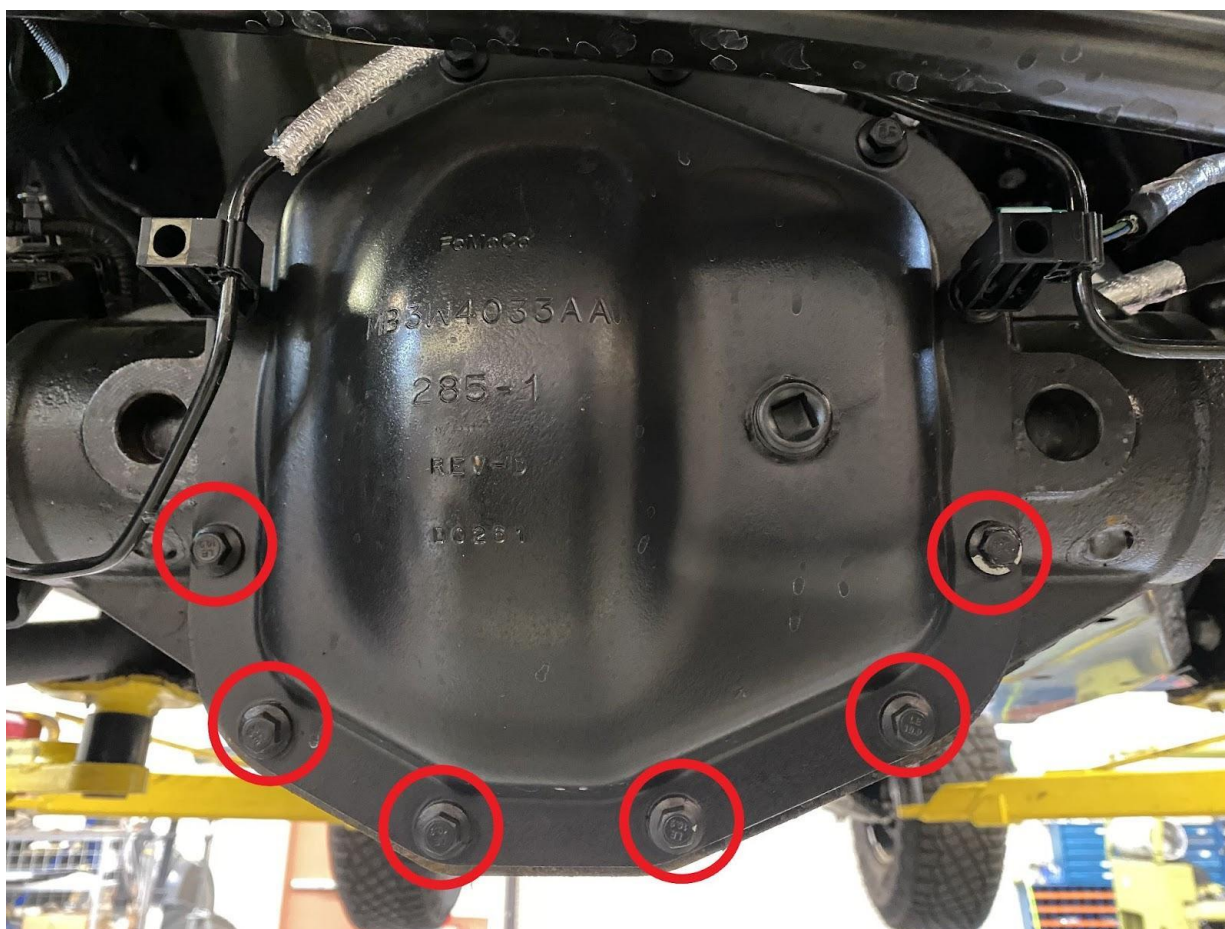

This product can be installed without replacement of the differential seal, if care is taken.

If you are unsure of your ability to do so, we recommend having a professional mechanic install this product.



DIFFERENTIAL SKID PLATE

INSTALL

RAPTOR | BRONCO | BRONCO RAPTOR | TRX

INSTALLATION

Step 1:

Hold your Foutz Differential Skid Plate up to your factory differential cover, and install supplied M8 bolts and tighten.



- **Ram TRX or Raptor & Bronco with Ford Performance Cover:** It is required to have spacer washers between the diff skid and the cover. Use supplied M8 bolts and tighten.

(see next page for 2019 raptor)



DIFFERENTIAL SKID PLATE

INSTALL

RAPTOR | BRONCO | BRONCO RAPTOR | TRX

Step 1 (cont.)

- **2019 + Raptor**

You will need to cut the two fins on the bottom of the differential, use supplied diff cover bolts





DIFFERENTIAL SKID PLATE

INSTALL

RAPTOR | BRONCO | BRONCO RAPTOR | TRX

Step 2:

Place pinion support strap across the front side of the differential skid plate (closest to the driveshaft), and install supplied 7/16" bolts with nuts and washers.

Due to casting variations, the holes in the differential skid plate and the pinion support strap, are oversized to allow for some adjustment to ensure the best fit.

Tighten Bolts.

