

INSTALL

FORD BRONCO & BRONCO RAPTOR

Step 1:

Start by removing the filler neck hose at the tank, loosen the hose clamp and push the hose off the tank. Remove vent line by popping the tall blue clip out and then squeeze the smaller portion of the blue clip, while pushing the hose on to the hardline, then pull to remove.





FORD BRONCO & BRONCO RAPTOR

Step 2:

In front of the tank are the two fuel lines, carefully remove the Green and red retainer clips out of both of them and then push each line together while squeezing the black plastic lock release on each line, then pull each line apart. Fuel may leak out of one.





INSTALL

FORD BRONCO & BRONCO RAPTOR

Step 4:

Support the fuel tank with a jack, then remove the 8 bolts on the skid plate. If not equipped with a skid plate, remove the two fuel tank straps.











FORD BRONCO & BRONCO RAPTOR

Step 5:

Slowly lower the fuel tank from the vehicle.

Once it's lowered a little bit, remove the electrical plugs with the evap lines.

The evap line removes similarly to the fuel lines.

There is slack in the wires and evap hose to allow for access.







FORD BRONCO & BRONCO RAPTOR

Step 6:

The gas tank can now be removed from the vehicle for clearance to access the rear links for removal or service of the gas tank.

Step 7:

To reinstall the gas tank, do steps in reverse order.