

0800 880 101

sales@rtequipment.co.nz

Manual Bridge Plate Supplied on request on one or more sides of the table* to connect the table to the truck deck.

*Important! Note that when installing a table with a manual bridge plate the pit size is increased by 50 mm (for 1E/2E) or 90mm (for 1S-T) to allow for each bridge hinge thickness and bridge support blocks.

When the gap between the platform from the lifting table and the building is more than 30 mm, then horizontal loading bridge plate is mandatory (EN 1570-1 5.2.13 Connection plates 5.2.13.1).



